

 
INSTRUCTION MANUAL
ICE MAKER



Model: ZB-18
94010

THANK YOU FOR CHOOSING OUR ICEMAKER
PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATING

Description

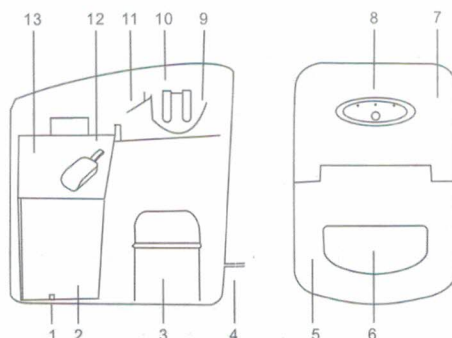

1.Silicon stopper	2.Water tank	3.Compressor
4.Plug and power cord	5.Front lid	6.View window
7.Back front cover	8.Control Panel	9.Water tray
10.Evaporator	11.Ice shovel	12.Scoop(Please find it in the package for manual)
13.Ice basket		

Specifications

Daily Ice Output :	22LBS / 24 hours
Ice Storage Capacity :	1.32LBS
Water Reservoir Capacity :	0.06Cuft
Dimensions(W*D*H):	9.5*14.1*12.9inch
Voltage:	120V/60Hz
Power cord:	3 pins earthed plug. (to reduce risk of electric shock)

Function

 
Instant making ice
Ice full alarming,deficient water alarming
Crystalline ice bullet warhead
9pcs of ice cube in per cycle

Before/First Use of Your Ice Maker

- 1.During transportation, the incline angle of the cabinet should not be over 45° .Do not turn the Ice maker upside down. As this may damage the compressor and sealed system.
- 2.Remove all packing material and carefully check your ice maker to ensure it is in good condition and that there is no damage to the ice maker or power cord and plug.
- 3.The Ice maker should be placed horizontally on a level surface.To ensure proper ventilation for your Ice maker allow 5.9inch of space at the top, the back and on each side. Do not install the Ice maker near an oven, radiator, or any other heat source.
- 4.Before using the Ice maker for the first time, please wait 2 hours after positioning it, and keep the front lid open for at least 2hours
- 5.Ensure that the voltage indicated on the ice maker corresponds with the voltage in your home.

6. Pure water is not allowed to be used on this unit, spring water is recommended.
7. Make sure the silicon stopper is well inserted

Control Panel Operation

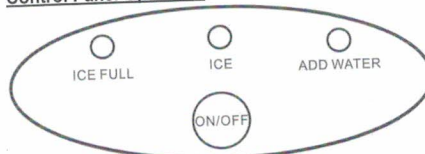

ON/OFF: Press it to turn unit on or off.

ADD WATER: This light will come on with a long noise 'DI' noise. You will need to add water and press the 'ON/OFF' button to restart the Ice maker.

ICE FULL: This light will come on with a 'DI, DI' noise when the ice has reached the maximum capacity of the storage cabinet. Press 'ON/OFF' button to restart the Ice maker after some of the ice has been taken away.

Operating Instructions

Step 1.

Open the lid and fill the water reservoir with water.

Note: Make sure the water level in the water reservoir is not over the ice collecting tray.

Step 2.

Connect to the power.

Step 3.

Press ON/OFF button to turn unit on. The ice maker begins to work.

Note: For the first three cycles, the ice may be small and irregular in size.

Step 4.

If indicator ADD WATER is red with 'DI' noise, then take out the basket, then add water as per step 1, then press

ON/OFF to restart the ice maker

Step 6

If indicator ICE FULL is in red with 'DI DI' noise, please take out the ice with the scoop.

 
Note: When the ice collecting tray is full please remove the ice immediately, Do not allow the ice collecting tray to overflow.

Step 7

Press ON/OFF button to stop the machine.

Step 8

Please move the unit ahead, put a tank under the unit, then remove the silicon plug and drain out the water

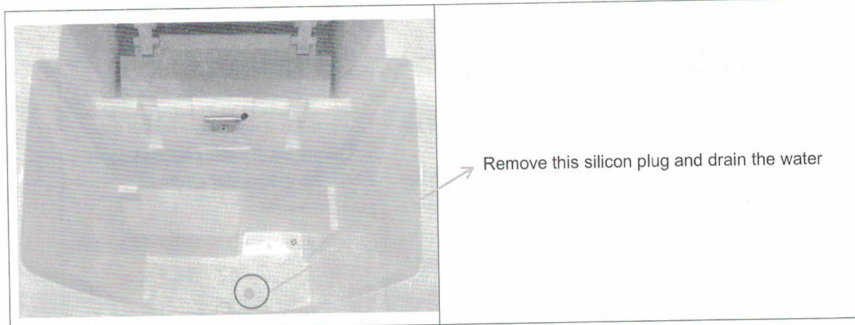

Caring

1. Clean the inner liner, ice collecting tray, water box, ice shovel and evaporator frequently. When cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the ice maker. Do not spray ice maker with chemicals or diluted agents such as acids, gasoline or oil. Rinse thoroughly before starting.
2. Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. To ensure the cleanliness of the ice cubes, water in the water reservoir should be replaced every 24 hours.
4. If the compressor stops for any reason such as water shortage, too much ice, power off, etc... Do not start the system right away, wait 3 minutes, and then re-start the ice maker.
5. Always use fresh water before starting ice production either at initial installation or after a long shut-off period.

Troubleshooting

1. Please note, if a power failure occurs due to disconnection of the power cord, or the off power button has been pushed off during an ice making cycle, small ice chips may be formed and lodge in the automatic shovel causing it to jam. If this occurs, the ice chips may be removed by disconnecting the power cord and gently pushing the shovel to the rear of the cabinet and removing the ice chips, then restarting.
2. If the ice shovel does not push the ice into the ice collector while at the same time the ICE light is on, check to see if the water tray is horizontal or balanced. If not then adjust by pressing the ice shovel lightly with your finger. Then re-start the ice maker.

Problem	Possible Cause	Suggested Solutions
The compressor works abnormally with a Buzzing noise	The voltage is lower than recommended	Stop the Ice maker and do not restart until the voltage is normal.
Water shortage indicator light is on	1. There is no water 2. The pump is full of air	1. Press the ON/OFF button, fill with water, wait 3 minutes and press the start button to restart. When the water has reached the fill line the ice maker will restart automatically. 2. Remove the silicon stopper and let

		several drops water runs out.
Indicator lights on display are not on	Blown fuse/ No power	Replace fuse / Turn power on
The Ice made is too large and with pieces sticking together.	1.Ice of previous cycles left in the water tray 2.The evaporator is too low	1.Stop the unit right away,restart the unit till the ice in water tray melt down 2.Shift the evaporator a little.
Conditions for Ice making Cycle are right but no ice is made.	A. There is no refrigerant in the compressor B. Compressor is broken down Fan motor is broken	call for service
The lights of ice full and deficient come at in the same time.	Water tray is blocked by ice cube	Clear the ice cube under the ice shovel pull out the plug and insert it again then press the "ON/OFF" button, two minutes later the machine will restart automatically
Machine keeps running,but the water is warmer than the normal water	The magnetic valve is broken	Replace the magnetic valve
Water leakage at front bottom of the unit	The silicon stopper is not well inserted	Please insert the silicon stopper well

WARNING

If the power cord is damaged; it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

Fill with potable water only.

It is normal for the compressor and condenser surface to reach temperatures between 158°F and 194°F during operation and surrounding areas may be very hot.

Due to fast freezing, ice cubes may appear "Cloudy". This is air trapped in the water and will not affect quality or taste of ice.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision

Do not immerse in water

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.