

# Original Operating Manual

**Toaster INOX<sup>2</sup> (12778) / INOX<sup>4</sup> (12779)**



---

CASO International LTD  
1 Peking Road  
Hongkong

**USA Branch**

**CASO Design USA LLC**

50 Mountain View Rd  
Warren, NJ, 07059

[Info@CasoDesignUSA.com](mailto:Info@CasoDesignUSA.com)

[www.CasoDesignUSA.com](http://www.CasoDesignUSA.com)

T.: 908.604.0677

Document-Number: 12778 - 12779 07-23-  
2018

Printing and typographical errors reserved.

© 2018 CASO Design USA LLC

---

<b>1</b>	<b>Operating Manual</b> .....	<b>4</b>
1.1	General.....	4
1.2	Information on this manual .....	4
1.3	Warning notices .....	4
1.4	Limitation of liability .....	5
1.5	Copyright protection.....	5
<b>2</b>	<b>Safety</b> .....	<b>5</b>
2.1	Intended use .....	5
2.2	General Safety information .....	6
2.3	Sources of danger .....	6
2.3.1	Danger of burns .....	6
2.3.2	Danger of fire .....	7
2.3.3	Dangers due to electrical power.....	7
<b>3</b>	<b>Commissioning</b> .....	<b>8</b>
3.1	Safety information.....	8
3.2	Delivery scope and transport inspection .....	8
3.3	Unpacking.....	8
3.4	Disposal of the packaging.....	9
3.4.1	Setup location requirements: .....	9
3.5	Electrical connection .....	10
<b>4</b>	<b>Design and Function</b> .....	<b>10</b>
4.1	Overview .....	10
4.1.1	Warning notices on device .....	10
4.2	Rating plate.....	11
<b>5</b>	<b>Operation and Handling</b> .....	<b>11</b>
5.1	LED indicators for standby modes and off-mode .....	12
<b>6</b>	<b>Cleaning and Maintenance</b> .....	<b>12</b>
6.1	Safety information.....	13
6.2	Cleaning .....	13
6.3	Storage.....	14
<b>7</b>	<b>Troubleshooting</b> .....	<b>14</b>
7.1	Safety notices .....	14
7.2	Causes and rectification of faults .....	14
<b>8</b>	<b>Disposal of the Old Device</b> .....	<b>14</b>
<b>9</b>	<b>Guarantee</b> .....	<b>15</b>
<b>10</b>	<b>Technical Data</b> .....	<b>16</b>

---

---

# 1 Operating Manual

## 1.1 General

Please read the information contained herein so that you can become familiar with your device quickly and take advantage of the full scope of its functions.

Your INOX<sup>2</sup> / INOX<sup>4</sup> will serve you for many years if you handle it and care for it properly. We wish you a lot of pleasure in using it!

## 1.2 Information on this manual

These Operating Instructions are a component of the Toaster INOX<sup>2</sup> / INOX<sup>4</sup> (referred to hereafter as the device) and provide you with important information for the initial commissioning, safety, intended use and care of the device.

The Operating Instructions must be available at all times at the device. This Operating Manual must be read and applied by every person who is instructed to work with the device: • Commissioning • Operation • Troubleshooting and/or

• Cleaning Keep the Operating Manual in a safe place and pass it on to the subsequent owner along with the device.

## 1.3 Warning notices

The following warning notices are used in the Operating Manual concerned here.

### **DANGER**

**A warning notice of this level of danger indicates a potentially dangerous situation.**

If the dangerous situation is not avoided, this can lead to death or serious injuries.

► Observe the instructions in this warning notice in order to avoid the danger of death or serious personal injuries.

### **WARNING**

**A warning notice of this level of danger indicates a possible dangerous situation.**

If the dangerous situation is not avoided, this can lead to serious injuries.

► Observe the instructions in this warning notice in order to avoid the personal injuries.

### **ATTENTION**

**A warning notice of this level of danger indicates a possible dangerous situation.**

If the dangerous situation is not avoided, this can lead to slight or moderate injuries.

► Observe the instructions in this warning notice in order to avoid the personal injuries.

### **PLEASE NOTE**

A notice of this kind indicates additional information, which will simplify the handling of the machine.

---

## 1.4 Limitation of liability

All the technical information, data and notices with regard to the installation, operation and care are completely up-to-date at the time of printing and are compiled to the best of our knowledge and belief, taking our past experience and findings into consideration.

No claims can be derived from the information provided, the illustrations or descriptions in this manual. The manufacturer does not assume any liability for damages arising as a result of the following:

- Non-observance of the manual
- Improper repairs
- Uses for non-intended purposes
- Use of unauthorized spare parts
- Technical alterations, modifications of the device

Modifications of the device are not recommended and are not covered by the guarantee. All translations are carried out to the best of our knowledge. We do not assume any liability for translation errors, not even if the translation was carried out by us or on our instructions. The original German text remains solely binding.

## 1.5 Copyright protection

This document is copyright protected.

CASO Design USA LLC. reserves all the rights, including those for photomechanical reproduction, duplication and distribution using special processes (e.g. data processing, data carriers, data networks), even partially. Subject to content and technical changes.

# 2 Safety

This chapter provides you with important safety notices when handling the device. The device corresponds with the required safety regulations. Improper use can result in personal or property damages.

## 2.1 Intended use

This device is only intended for use in households in enclosed spaces for

- Toasting sandwich bread, bread, bagels, buns or similar
- Reheating bread or already toasted bread

Uses for a different purpose or for a purpose which exceeds this description are considered incompatible with the intended or designated use.

### **WARNING Danger due to unintended use!**

**Dangers can emanate from the device if it is used for an unintended use and/or a different kind of use.**

- ▶ Use the device exclusively for its intended use.
- ▶ Observe the procedural methods described in this Operating Manual.

Claims of all kinds due to damages resulting from unintended uses are excluded.

The User bears the sole risk.

---

## 2.2 General Safety information

### Please note

**Please observe the following general safety notices with regard to the safe handling of the device.**

- ▶ Read all these instructions before using the appliance.
- ▶ Examine the device for any visible external damages prior to using it. Never put a damaged device into operation.
- ▶ Only qualified electricians, who have been trained by the manufacturer, may carry out any repairs that may be needed. Improperly performed repairs can cause considerable dangers for the user.
- ▶ Only customer service departments authorized by the manufacturer may carry out repairs on the device during the guarantee period, as otherwise the guarantee entitlements will be null and void in the event of any subsequent damages.
- ▶ Defective components must always be replaced with original replacement parts. Only such parts will guarantee that the safety requirements are fulfilled.
- ▶ Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ▶ Children shall not play with the appliance.
- ▶ Cleaning and user maintenance shall not be made by children. Keep the appliance and its cord out of reach of children aged less than 8 years.
- ▶ The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ▶ Unplug from the outlet when not in use and before cleaning and before assembling or disassembling parts.
- ▶ Use only the accessory recommended by the manufacturer or the device could be damaged.
- ▶ Do not immerse in water, dishwasher or any other liquids.
- ▶ Do not touch the device with wet hands.
- ▶ Do not leave the device unsupervised during operation.
- ▶ Unplug after use. Pull the plug not on the cord.
- ▶ Do not move the device when it is in operation or plugged in.
- ▶ Do not use the device outdoors.

## 2.3 Sources of danger

### 2.3.1 Danger of burns

#### Warning

**The food prepared in the device, the device and the surfaces of the device can become very hot.**

---

**Please observe the following safety notices in order not to burn or scald yourself or others**

- ▶ The temperature of the accessible surface can become very hot when the device is in operation.
- ▶ Do not touch the heating elements. Danger of burns!
- ▶ The upper side of the device is very hot during and after use. Do not store any items on the device.
- ▶ Do not move or change the position of the device during use. Danger of burns!
- ▶ Be carefull when handling hot food.
- ▶ Let the device cool down before assembling/deassembling of parts and before cleaning.
- ▶ Keep children away from the device, since the surfaces of the device become hot during use and remain hot for a some time.
- ▶ Do not removed jammed slices of bread when the device is in operation. Remove the plug and let it cool down first.

### **2.3.2 Danger of fire**

#### **Warning**

**There is a danger of fire due to the ignition of the content in the event the device is not used properly.**

**Observe the following safety notices to avoid dangers of fire:**

- ▶ Never use the device to store or dry flammable materials.
- ▶ Do not use the device for storage of food or utensils.
- ▶ Never cover the device with towels or other materials during use. Heat and steam must be free to escape. Danger of fire arises if the device is covered with flammable materials or comes in contact with curtains.
- ▶ Do not use the device near to flammable materials for example curtains.
- ▶ The cord and / or other objects should not touch or be placed over the toast slots while the device is in operation.

### **2.3.3 Dangers due to electrical power**

#### **Danger**

**Mortal danger due to electrical power!**

Mortal danger exists when coming into contact with live wires or subassemblies!

Observe the following safety notices to avoid dangers due to electrical power:

- ▶ Do not open the housing on the device under any circumstances. There is a danger of an electrical shock if live connections are touched and the electrical or mechanical structure is altered. In addition, functional faults on the device can also occur.
- ▶ Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ▶ Do not unplug by pulling the cord pull the plug.
- ▶ Do not insert metal objects or other objects into the device, as this could lead to an electric shock or fire.
- ▶ Do not operate the device if it has come into contact with water or other liquids.
- ▶ Unplug the device when it is not in operation, before cleaning and before performing any repairs.

### 3 Commissioning

This chapter provides you with important safety notices during the initial commissioning of the device. Observe the following notices to avoid dangers and damages:

#### 3.1 Safety information

##### **WARNING**

**Personal and property damages can occur during commissioning of the device!**

Observe the following safety notices to avoid such dangers:

- ▶ Packaging materials may not be used for playing. There is a danger of suffocation.

#### 3.2 Delivery scope and transport inspection

As a rule, the INOX<sup>2</sup> / INOX<sup>4</sup> is delivered with the following components:

- INOX<sup>2</sup> / INOX<sup>4</sup> instructions
- crumb tray
- bun warmer
- operating

##### **Please note**

- ▶ Examine the shipment for its completeness and for any visible damages.
- ▶ Immediately notify the carrier, the insurance and the supplier about any incomplete shipment or damages as a result of inadequate packaging or due to transportation.

#### 3.3 Unpacking

Remove the device out of the carton, remove the packaging material, shovel and measuring container.



---

### 3.4 Disposal of the packaging

The packaging protects the device against damages during transit. The packaging materials are selected in accordance with environmentally compatible and recycling-related points of view and can therefore be recycled.



Returning the packaging back to the material loop saves raw materials and reduces the quantities of accumulated waste. Take any packaging materials that are no longer required to “Green Dot” recycling collection points for disposal.

#### Please note

- ▶ If possible, keep the original packaging for the device for the duration of the guarantee period of the device, in order that the device can be re-packaged properly in the event of a guarantee claim.

#### 3.4.1 Setup location requirements:

In order to ensure the safe and trouble-free operation of the device, the setup location must fulfil the following prerequisites:

- Place the device on a firm, flat, level and heat-resistant surface with sufficient load-bearing capacity for the device and its contents.
- Do not place the device on a metal surface.
- Choose the setup location in such a way that children cannot reach any hot surfaces on the device.
- The device is not intended to be installed in a wall or a built-in cupboard.
- Do not set up the device in a hot, wet or extremely damp environment or near flammable material.
- Do not place the device near a gas or electric cooker or an oven.
- The device requires an adequate flow of air in order to operate correctly. Place the device with the backside against a wall (with 4” distance). Keep 8” free space at the other sides of the device.
- Do not cover up any openings on the device and do not block these off.
- The electrical socket must be easily accessible so that the power lead can be disconnected easily, in the case of an emergency.
- The device and power cord should not come in contact with hot surfaces. The device could be damaged.
- The installation and assembly of this device in non-stationary setup locations must be carried out by specialist companies / electricians, provided they guarantee the prerequisites for the safe use of this device.

---

### 3.5 Electrical connection

In order to ensure the safe and trouble-free operation of the device, the following instructions must be observed for the electrical connection:

- Before connecting the device, compare the connection data (voltage and frequency) on the rating plate with those of your electrical network. This data must agree in order that no damages occur in the device. If in doubt, ask your qualified electrician.
- The electrical outlet must be protected by a 16A safety cut-out switch, separately from other electricity consumers.
- The use of multiple plugs or gangs is prohibited because of the danger of fire that is involved with this.
- Make sure that the power cable is undamaged and has not been installed under the oven or over hot or sharp surfaces.
- The electrical safety of the device is only guaranteed if the device is connected to a properly installed protective conductor system. Operations using an electrical outlet without a protective conductor are prohibited. If in doubt, have the house installation checked over by a qualified electrician.  
The manufacturer cannot be made responsible for damages that are caused by a missing or damaged protective conductor.

## 4 Design and Function

This chapter provides you with important safety notices on the design and function of the device.

### 4.1 Overview



to adjust the browning, 6 levels



reheat button



bagel button



defrost button



stop Button

#### Please note

- ▶ The lever for the lift function must be in the upper position before inserting or removing the mains plug.

#### 4.1.1 Warning notices on device

### ATTENTION

Danger due to hot surface!



---

There is a warning notice referring to dangers due to hot surfaces located on the device. The surfaces of the device can become extremely hot.

- ▶ Do not touch the hot surfaces of the device. Danger of burns!
- ▶ Do not set or lay any items on the device.

## 4.2 Rating plate

The rating plate with the connection and performance data can be founded on the bottom of the device.

# 5 Operation and Handling

This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages:

## Warning

- ▶ Do not leave the device unsupervised during operation to be able to react quickly in case of dangers.

## Please note

- ▶ The crumb tray has always to be placed in the bottom of the device. It is also an additional heat protection for the surface on which the device is placed.

Plug in the power plug of the device. Place the bread into the slots.


Adjust the desired browning with  (1 is the lightest, 6 the darkest)

Press down the lever for the lift function so that it latches.




The stop button lights blue during operation of the device. The bread will lift up automatically after end of toasting process.



With  you can stop the process at every time.




Press the  reheat button when you want to reheat the bread in the device without toasting it. The bread will lift up automatically at the end of reheating process.



Press the defrost button when you want to use frozen bread, waffles, pancakes, etc. The button lights in blue.



Press the  bagel button to turn off one of the heating elements to toast the bagel without burning the toppings.

---

For toasting or warming up buns on the device please place the bun warmer on it and the buns on the warmer.

Press down the lever for the lift function so that it latches. When you want to reheat buns

press  in addition.


### Please note


- ▶ You can toast 1-2 buns. Choose browning 4.

### Warning


- ▶ Toasted bread is hot, be carefully when you remove it from the device.
- ▶ The surfaces of the device become hot during operation, especially near to the slots. Always let the device cool down before touching it.
- ▶ Always remove the plug from outlet when the device is not in operation.


## 5.1 LED indicators for standby modes and off-mode

1. First Standby-Mode: Once device is plugged in  is shown for the browning. Once toasting has finished the device shows the previous setting for browning. In the

display  is shown.

2. Second Standby-Mode: After one minute without any operation the display switches

off but the LED still lights in blue and shows  .

3. Off-Mode: Unplug the device, then the display is off and LEDs are off  .

## 6 Cleaning and Maintenance

This chapter provides you with important notices with regard to cleaning and maintaining the device. Please observe the notices to prevent damages due to cleaning the device incorrectly and to ensure trouble-free operation.

---

## 6.1 Safety information

### Attention

Please observe the following safety notices, before you commence with cleaning the device:

- ▶ The device must be cleaned and food residues must be removed at regular intervals. If the device is not maintained in a clean condition, this will have a detrimental effect on the service life of the device and can also result in a dangerous condition in the device as well as in the growth of fungus and bacteria. Unplug the device before cleaning.
- ▶ The device is hot after it is used. There is a danger of burns! Wait until the device has cooled down.
- ▶ Clean the device after use as soon as it has cooled down. Waiting longer periods of time unnecessarily complicates cleaning and can make it impossible in extreme cases. Excessive accumulations of dirt can even damage the device under certain circumstances. Remaining food leftovers can catch fire during next heating.
- ▶ If dampness penetrates into the device, this can damage the electronic components. Please ensure that no liquid can enter the interior of the device through the ventilation slots.
- ▶ Do not use any aggressive or abrasive cleaning agents or solvents.
- ▶ Do not scrape off stubborn dirt with hard items.
- ▶ Never immerse the device or its plug into water. Liquid is not allowed to come in contact with parts of the device.

## 6.2 Cleaning

UNPLUG THE DEVICE BEFORE CLEANING.

- To remove bread crumbs, press on the crumb tray, so that it pushes out of its holder on the bottom of the device. Pull it out completely and empty the tray.
- Clean the crumb tray in warm soapy water and rinse it with clean water, dry it thoroughly with a soft cloth.
- Make sure that the elevated side of the crumb tray is facing upwards before you push it back into the holder.
- The device can be cleaned with a slightly moistened cloth. Then dry it with soft cloth before using it again.

### Remove of crumbs

If crumbs are jammed in the device, move the lever for lift function carefully upwards to loosen the jammed crumbs.

Turn the device upside down and shake it a bit so that you can remove jammed crumbs.

### Please note

- ▶ Do not use any knives, forks or other utensils to remove bread from device or to clean the device. Pull the plug of the device when bread is jammed in device and try to remove it then.

### 6.3 Storage

- Never wrap the cord around the device.
- Wrap the cord properly around the cable storage at bottom of the device.
- Pull the plug when the device is not in operation and store the device out of reach of children at dry and safe place.

## 7 Troubleshooting

This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages:

### 7.1 Safety notices

#### Attention

- ▶ Only qualified electricians, who have been trained by the manufacturer, may carry out any repairs on electrical equipment.
- ▶ Improperly performed repairs can cause considerable dangers for the user and damages to the device.

### 7.2 Causes and rectification of faults

The following table assists in localizing and rectifying minor faults.

Problem	Solution
The device is not functioning	Please check whether the power plug is properly plugged.

#### Attention

- ▶ If you are unable to solve the problem with the steps shown above, please contact Customer Service.

## 8 Disposal of the Old Device

Old electric and electronic devices frequently still contain valuable materials. However, they also contain damaging substances, which were necessary for their functionality and safety. If these were put in the non-recyclable waste or were handled incorrectly, they could be detrimental to human health and the environment.

Therefore, do not put your old device into the non-recyclable waste under any circumstances.



#### Please note

- 
- ▶ Utilize the collection point, established in your town, to return and recycle old electric and electronic devices. If necessary, contact your town hall, local refuse collection service or your dealer for information.
  - ▶ Ensure that your old device is stored safely away from children until it is taken away.

## **9 Guarantee**

### **12 Months Limited Warranty**

Caso Design USA warrants that for a period of 12 months from the date of purchase, this product will be free from defects in material and workmanship. Caso Design USA at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. DO NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of the initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

This limited warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Caso Design USA service center. Further this limited warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### **What are the limits on Caso Design USA's Liability?**

Caso Design USA shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Caso Design USA disclaims all other warranties, conditions, or representations, express implied, statutory or otherwise.

---

Caso Design USA shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of the incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state, or jurisdiction to jurisdiction.

## 10 Technical Data

Device	Toaster
Name	INOX <sup>2</sup> / INOX <sup>4</sup>
Item No.:	12778 / 12779
Mains data	120 V / 60 Hz
Power consumption	1000 Watt / 1800 Watt
External measurements (W x H x D):	11.22" x 8.07" x 10.04" / 16.4" x 8.1" x 10"
Net weight	3.75 lbs / 5.1 lbs