


Pagoda Fireplace

model # AD283C

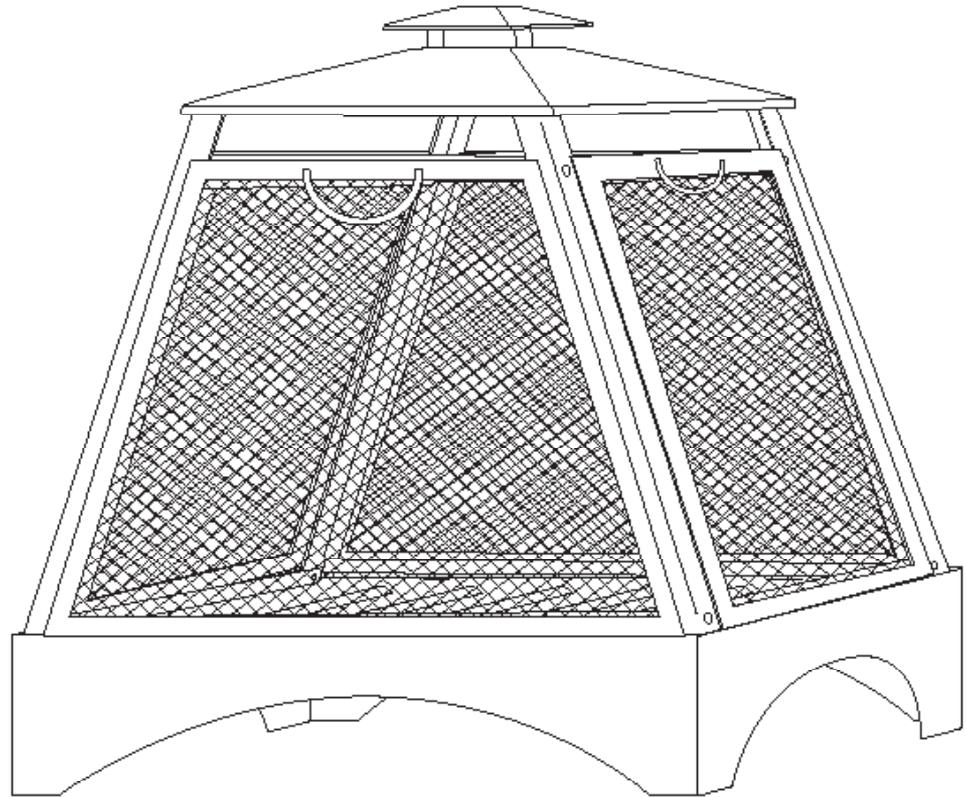

>> assembly instructions

before you begin

1. Please read and follow ALL instructions before assembling or using this product, particularly the safety statements. Failure to follow instructions and warnings could result in damage to property or serious injury.
2. Check product for damaged or missing parts. Call 1-800-230-6530 or email customerservice@asiadirectinc.net to order replacement parts.
3. Use the carton as a working surface to prevent product damage during assembly.

table of contents

hardware	4
parts list	5
safety warnings	6
assembly	7-9
care instructions	10
warranty	11

hardware

(H1) x 8

Phillips head bolt



(H2) x 8

 

Nut



tools required for assembly (*not included*):


Phillips head screwdriver

Adjustable wrench

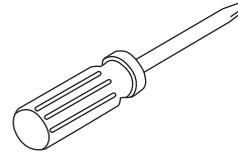

ITEM	DESCRIPTION	QUANTITY
------	-------------	----------

A	roof assembly	1
B	corner frame	2
C	short frame support bar	2
D	long frame support bar	2
E	screen section	4
F	base	1
G	storage cover	1

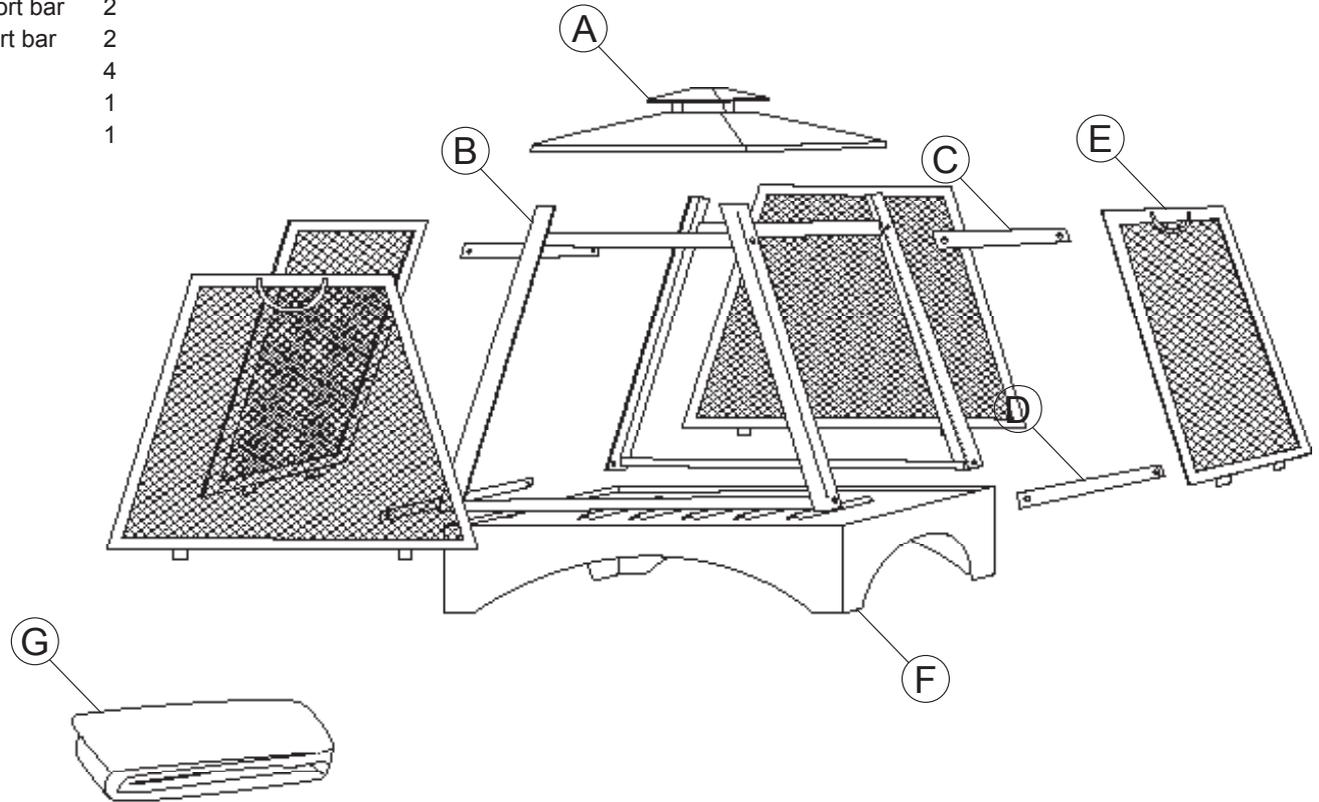

safety warnings and instructions



WARNING



READ AND FOLLOW ALL SAFETY STATEMENTS, WARNINGS, ASSEMBLY INSTRUCTIONS AND USE & CARE DIRECTIONS BEFORE ASSEMBLING THIS PRODUCT.



CAUTION



DO NOT USE THIS UNIT ON WOOD OR COMPOSITE DECKING OR ON ANY OTHER COMBUSTIBLE SURFACES SUCH AS ASPHALT, DRY GRASS, LEAVES, MULCH, ETC. DO NOT USE THIS UNIT NEAR HEAT SENSITIVE OR COMBUSTIBLE STRUCTURES SUCH AS VINYL, COMPOSITE OR WOOD SIDING.



WARNING



CONTACT LOCAL AUTHORITIES REGARDING POSSIBLE BURN RESTRICTIONS BEFORE USING THIS PRODUCT. BURN ONLY WOOD OR CHARCOAL IN FIRE PIT.




WARNING



- Outdoor use only. Never use in enclosed area. Use in unventilated areas will endanger your life.
- Do not use this unit on or near combustible surfaces or structures such as wood decks, dry leaves or grass, vinyl or wood siding, etc.
- Use on level, non-combustible surface only.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Never use flammable accelerants, such as: gasoline, alcohol, paint thinners, kerosene, etc. to start a fire. Serious injury or property damage could result.
- Screen may become hot when in use! Failure to wear protective gloves may lead to injury.
- Keep away from house, garage, balconies, or overhangs.
- Avoid using during dry or windy conditions.
- Keep out of reach of children.
- Do not overfill or use to burn leaves or trash.
- Exercise the same care you would with an open fire.
- Never leave unit unattended while hot or in use.
- Do not attempt to move fire pit while hot or in use.
- Completely extinguish fire before leaving.
- Ashes can remain hot for a long time after fire is extinguished.
- Dispose of cold ashes properly.
- Any modification of the unit will void product warranty.

step 1.

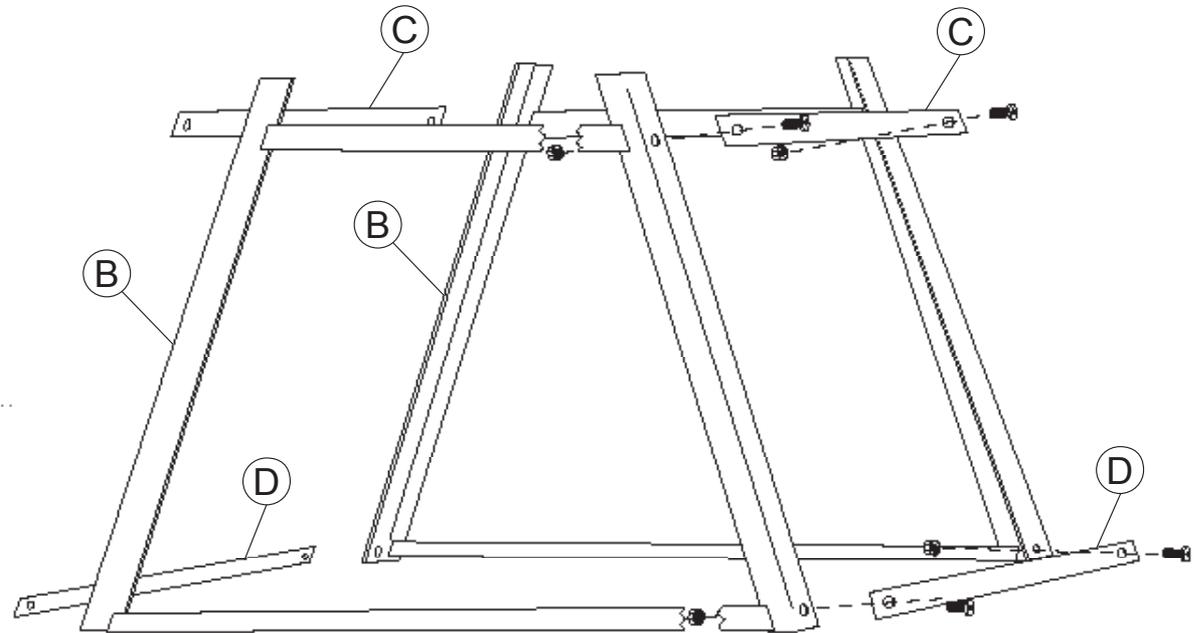


(H1) x 8
Phillips head bolt

(H2) x 8
Nut




1. Connect tops of two Corner Frames (B) together with Short Frame Support Bar (C).
2. Loosely secure bar to Frames with two Bolts (H1) and two Nuts (H2). **LOOSELY HAND TIGHTEN NUTS ONLY.**
(Completely tightening hardware may make it difficult to complete next step in assembly).
3. Repeat same procedure to connect bottoms of Corner Frames together with Long Frame Support Bars (D).
4. Repeat steps for other side of Corner Frames.
5. Once frame is assembled, tighten all hardware connections with screwdriver and wrench.

step 2.

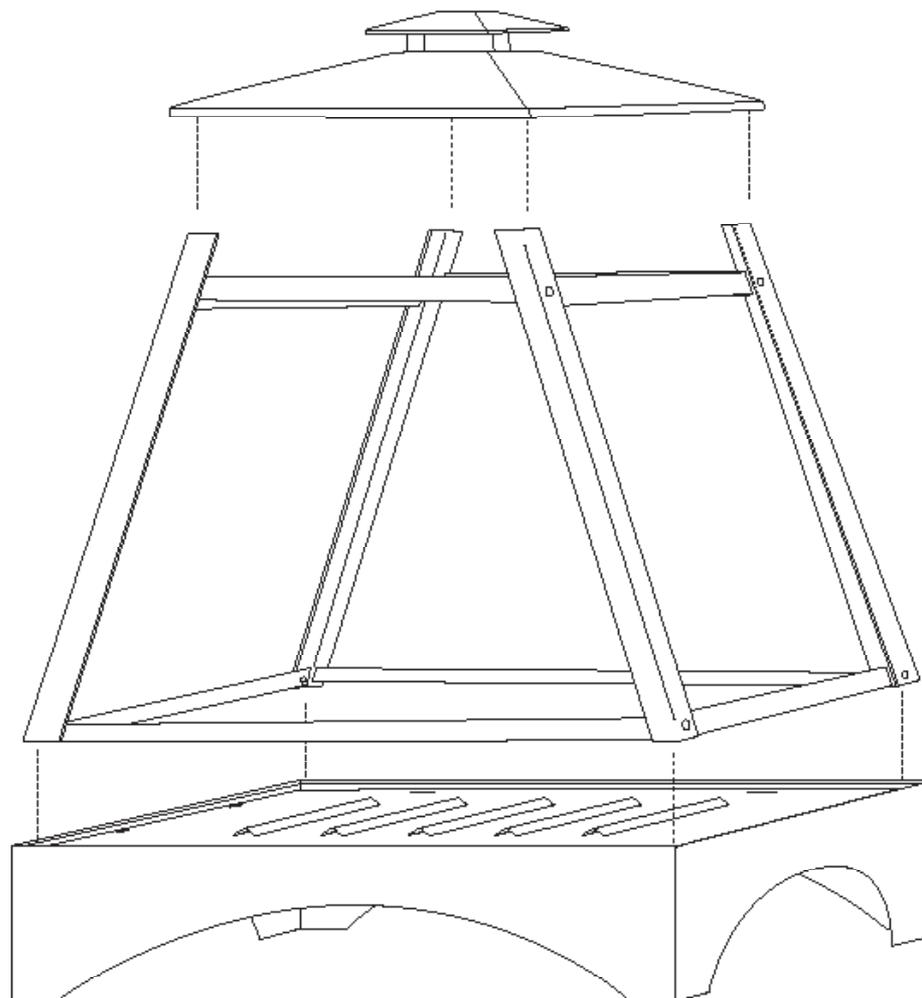

1. Place assembled frame on Base (F).
2. Place Roof Assembly (A) on frame.

step 3.

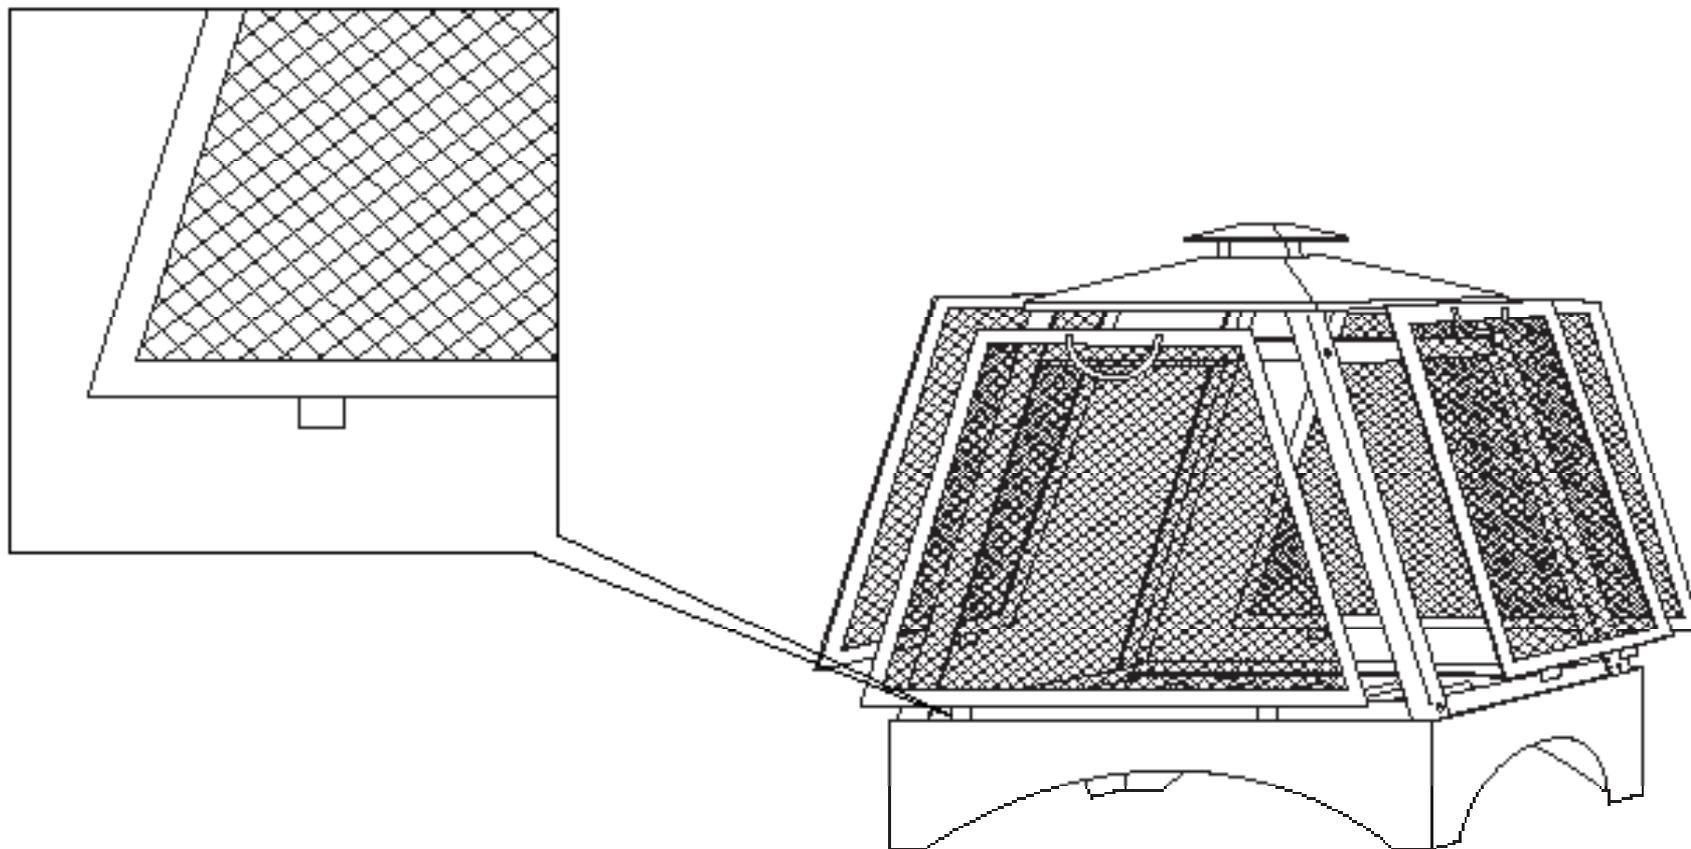

1. Place Screens (E) on each side of frame, inserting screen tabs into base tab notches.

care instructions

- Remove properly cooled ashes from bottom of fire bowl after each use.
- Store fire pit in dry location out of the weather and elements when not in use for extended periods of time.
- As with any outdoor grill, seasonal maintenance is required to return painted steel surfaces to original appearance. Remove any surface rust with sandpaper or steel brush and repaint with grill paint suitable for high-temperature surfaces after each season of use. Follow paint manufacturer's instructions.
- Steel spark screen and stand are painted with a durable hi-temp finish, but rusting will occur over time due to heat and moisture exposure if not maintained on a regular basis. Rusting may occur quicker in higher humidity areas.
- NOTE: Surface rust, corrosion or powder paint chipping on steel parts is not considered a manufacturing defect and is not covered under 90 day Limited Warranty.

limited warranty

Asia Direct, Inc. ("Manufacturer") warrants that for a period of ninety (90) days from the date of original retail purchase, its product will be free from defects in material and workmanship. Manufacturer reserves the right to require that defective parts be returned, postage and or freight pre-paid, by the consumer, for review and examination. Defective or missing parts will not be replaced without proof of purchase.

This limited warranty is applicable to non-commercial residential use only in the United States. This warranty only applies to the functionality of the product, and does not cover cosmetic issues such as dents, scratches, corrosion, surface rust, or discoloring of surfaces by heat, moisture or exposure to sunlight. Regular maintenance of steel parts is required to maintain appearance. Surface rust, corrosion or powder paint chipping on steel parts is not considered a manufacturing defect and is not covered under this warranty.

Manufacturer will not be responsible for any damage caused by misuse, abuse, neglect, alterations, repairs by unauthorized persons, use of non-Asia Direct accessories or parts, commercial use, or failure to follow recommended care or maintenance instructions. Further, the warranty does not cover acts of nature, such as fire, flood, hurricanes and tornadoes.

Asia Direct, at its option, will replace the product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service.

This warranty will not reimburse you for the cost of any inconvenience, personal injury or property damage. Manufacturer's MAXIMUM liability, in any event, shall not exceed the documented purchase price of the product paid by the original consumer. This warranty only applies to units purchased from an authorized retailer or re-seller.

Neither dealers nor the retail establishment selling this product has any authority to make any additional warranties or to promise remedies in addition to or inconsistent with those stated above.

If you wish to obtain Warranty Service, you should have your Proof of Purchase available and call or write to:

customerservice@asiadirectinc.net

Customer Service Toll Free: (800) 230-6530