

SSWTABLE, SSWTABLE36, SSWTABLE60, SSWTABLE72


Stainless Steel Work Table Assembly Instructions

1



Place tabletop upside down on soft cloth surface to prevent scratches. Insert one leg into a corner support.

2

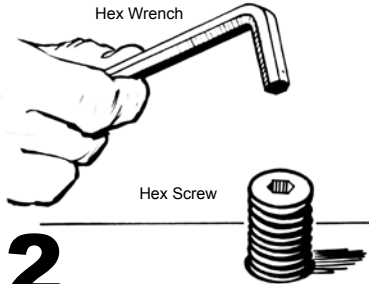

Locate the accessory bag and remove the Hex screws and Hex wrench.

3



Using the Hex wrench, loosely tighten the Hex screws (with the HEX side visible) into the corner support.

4



Each corner support requires two Hex screws. Wait until the table is completely assembled before securely tightening each Hex screw.

5



After all four legs have been loosely attached, lower the adjustable table base and insert each leg through the base holes.

6



The table base is adjustable. Position it by raising or lowering it along each leg. You may choose to use the aid of a level.

7



Each corner support requires two Hex screws. Wait until the table is completely assembled before securely tightening each Hex screw.

8



All four legs can be adjusted for surfaces that aren't completely level. Rotate the plastic foot pad to compensate for differences in floor surface.

9



Turn the table over AFTER securely tightening each Hex screw. Two people may be required to rotate the table.