

## FEATURES



**Model SB-01**



## FUNCTIONS

**ON/OFF CONTROL** - Controls electrical power to the appliance. Control must be turned to ON position and cord plugged into 120V electrical outlet in order for the appliance to work. Always turn control to OFF position before unplugging cord from outlet.

**TEMPERATURE CONTROL**- Controls the temperature of the heating surface. MIN. is low heat and MAX is high heat.

**INDICATOR LIGHT** - When ON shows the appliance is heating and will turn OFF when desired temperature is reached. It will then cycle ON/OFF during use.

**CAST IRON HEATING SURFACE** - Durable heating surface will evenly distribute heat and last for many uses.

## ADDITIONAL SAFEGUARDS

- **CAUTION HOT SURFACES!** This appliance is hot during use and retains heat for some time after turning OFF. Proper precautions must be taken to prevent the risk of burns, fires or other injury to persons or damage to property.
- Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning.
- All users of this appliance must read and understand this “Use & Care Guide” before operating or cleaning this appliance.
- When using this appliance, provide adequate air space above and on all sides for air circulation.
- Do not leave this appliance unattended during use.
- If this appliance begins to malfunction during use, immediately unplug the cord from electrical outlet.
- The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
- Use this appliance in a stable position at all times.
- Note: When using hot plate for the first time, there may be some smoke or the smell of smoke, coming from the heating surface. This is normal due to the protective coating placed on surface during the manufacturing process.

## OPERATING INSTRUCTIONS

- Turn ON/OFF control to OFF, then plug appliance cord into a 120V AC electrical outlet.
- Turn ON/OFF control to “ON” position.
- Adjust temperature control to desired position. MIN is low heat. MAX is high heat.
- The Indicator light will turn ON when heating to selected temperature setting, and light will turn OFF/ON during normal use to indicate appliance is maintaining temperature.
- Use flat and stable cookware. For best results use cookware 7 - 8 inches [1.7 - 2.2 cm] in diameter.
- When finished using appliance, turn temperature control to MIN and the ON/OFF control to OFF. **CAUTION! THE METAL SURFACES BECOME HOT; TO AVOID BURNS, DO NOT TOUCH DURING OR IMMEDIATELY AFTER USE.**
- Remove appliance cord from electrical outlet.
- Allow to cool completely before cleaning and storing.

## CARE AND CLEANING

- Make sure hot plate is unplugged and cooled before cleaning.
- Do not submerge in water or any other liquid. **Not Dishwasher Safe**
- Use a damp cloth or sponge with mild soap to clean outer appliance.
- Do not use abrasive cleansers or metal scrubbing pads to clean. This will damage item and can cause possible electric shock.
- Store in a dry place. Avoid damp or flooded areas.