

Whole House Pre-filter Cartridge Replacement

Replace the pre-filter if there is a noticeable reduction of flow through the filter system, or if the pre-filter cartridge becomes heavily discolored.

(Every 1-3 months depending on sediment levels)



How to change the pre-filter:

1. Shut the filter system off at the shut off valve (A). Relieve the pressure in the water line by running water for 2-3 minutes at the nearest faucet. Press the black pressure release button located on the top of the pre-filter housing (B).
 2. Place a bucket under the pre-filter to catch water. Remove the clear chamber by unscrewing the lower ring of the housing with the provided wrench. Remove the used filter (C).
- For models with no release button:**

 1. Shut filter system off at the shut off valve (A). Relieve pressure in the water line by running water for 2-3 minutes at the nearest faucet.
 2. Place a bucket under the pre-filter to catch water. Remove the clear chamber by turning clockwise to loosen, using the wrench supplied with your filter system. Remove the used filter (C).
(proceed to step 3)
3. If necessary, clean the inside of the clear chamber with mild soapy water, rinse and dry.
 4. Place new filter in the center of the clear chamber.
 5. Clean the housing o-ring and relubricate it with silicone grease. Seat the o-ring into the proper groove and reattach the housing by sliding the clear chamber through the blue ring and screwing back onto the top piece.
- NOTE: DO NOT USE PETROLEUM JELLY as lubrication on the system or o-rings.*
6. After reassembly, turn the system back on at the shut off valve.
 7. Run water, with the bucket still under the pre-filter. Check for leaks.