

## \ Chopped™ Nonstick Aluminum Cookware

- Aluminum transmits heat quickly and evenly for efficient cooking
- Soft-grip handles provide a secure and comfortable hold
- Nonstick pans feature QuanTanium® PFOA free coating with superior release
- Oven safe up to 350°F (176°C)
- Dishwasher safe
- Limited lifetime warranty

## \ BEFORE FIRST USE & SPECIAL CARE FOR NON-STICK SURFACES

- **BEFORE USING AND AFTER EVERY USE:** Wash in hot, soapy water and rinse and dry thoroughly. Before each use, check that all handles and knobs are secure.
- **CONDITIONING NONSTICK:** After cleaning, condition your cookware before using it for the first time. With a paper towel or soft cloth wipe the interior with 1 tsp. (5 ml) of vegetable oil. Your pan should be at room temperature. To maintain the longevity of your nonstick surface, repeat this process every 3 - 4 months or whenever food starts sticking to the pan.
- **DO NOT USE AEROSOL COOKING SPRAYS:** An invisible buildup will impair the nonstick release system causing food to stick to the pan.

## \ COOKING

- For optimal performance and most cooking needs, we recommend energy-efficient LOW to MEDIUM heat. High heat is only needed for boiling or reducing liquids. High heat can cause food to scorch or burn, discolor the pan, or damage the nonstick surface.
- **Chopped™ nonstick aluminum cookware is designed to use in the oven as well as on the stovetop. Your cookware is safe according to the following temperature guidelines:**

SILICONE STYLE HANDLES, LIDS, STRAINERS AND KNOBS in ovens preheated up to 350°F (176°C). Always use potholders or oven mitts when removing cookware from the oven.
- Sharp utensils can damage the interior of your nonstick cookware. We recommend that foods be removed to a cutting board for carving. Never cut or slice directly in a nonstick pan.
- To extend the life of your nonstick surface, we recommend you only use wood, plastic covered or nylon utensils to avoid scratching.
- When using oil, butter, or margarine, add to a cold pan before preheating.
- For best results, cook on a burner that is close to the diameter of the pan you have selected. When cooking on gas, adjust flame so it does not flare up on the sides of the pan.

## \ CLEANING

- Chopped™ cookware is dishwasher safe. But for best results and to increase the life of your cookware, we highly recommend you hand wash in hot, soapy water. Rinse and dry immediately to prevent water spots.
- **DO NOT** use steel wool to clean your pan. Nylon scrubbing pads are safe to use.
- **DO NOT** use oven cleaner or any cleaner that is harsh or contains chlorine bleach on your pan.
- For stubborn stains and stuck-on food, add equal parts vinegar and water to the pan. Bring to a boil and then remove from heat. Allow the pan to cool and then wash with warm, soapy water.

## \ SAFETY

- **NEVER** leave cookware unattended on a heated burner. Never place an empty pan on a hot burner.
- **NEVER** place a nonstick coated pan, tempered glass lid or plastic/silicone style handle under the broiler.
- **DO NOT** leave an empty pan on a hot burner or allow a pan to boil dry. It will cause warping and damage your cookware surface, voiding the warranty.
- **AVOID** sudden temperature changes. Never put cold water or frozen food in a hot pan or plunge a hot pan into cold water. Sudden changes in temperature may cause any metal to warp, resulting in an uneven bottom.
- **DO NOT** allow handles to extend over a hot burner. Make sure they do not extend past the edge of the cooking surface.
- **ALWAYS** use potholders when removing lids, holding side handles, and removing pans from a hot oven.
- Although the long handles are designed to stay cool-to-the-touch, using a potholder is a safe idea.
- **NEVER** use cookware in the microwave.
- **DO NOT** leave food in your cookware for extended periods of time. Storing food in any type of cookware is not recommended.

## LIMITED LIFETIME WARRANTY

Clipper Corporation (Clipper) warrants Chopped™ Nonstick Aluminum Cookware to be free of defects in material and workmanship under normal household use from the date of the original purchase throughout the useful lifetime of the product.

Clipper agrees to repair or replace, at its option, any item found defective in material, construction or workmanship under normal household use as long as these use and care instructions are followed. The warranty does not apply to damage caused by misuse, abuse, overheating, altered product or commercial use.

This warranty is limited to the original consumer with receipt or proof of purchase and is not transferable. If the product was not purchased new from an authorized dealer, distributor, or representative of the manufacturer, this warranty is null and void.

Clipper's liability under this warranty is limited to the repair or replacement of the defective product at Clipper's sole option. Clipper shall not be liable for any special, punitive, incidental, or consequential damages, whether direct or indirect. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

To obtain warranty service, contact Clipper Corporation at 877.533.2547 during normal business hours of 9 a.m. to 5 p.m. PST, Monday through Friday. Provide model number, description, and date of original purchase.

Chopped™ and associated marks and logos are trademarks of Television Food Network, G.P., licensed to Notional, LLC. and used under license by Clipper Corporation, 2016.



Clipper Corporation  
21124 Figueroa Street  
Carson, CA 90745 USA  
877.533.2547

Specifications subject to change without notice.

xxxxxxx

**TIME  
STARTS  
NOW**



**Chopped™  
Nonstick Aluminum  
Cookware**

**USE & CARE  
INSTRUCTIONS  
& WARRANTY**