

Quick Start Guide


1 Download and install the Nightingale Sound app on your smartphone.

Search for “Nightingale Sound” in the app stores.



2 Plug both Nightingale units into separate wall outlets in your room.

It's important that both units are plugged in. For the best performance, choose outlets in opposite walls. Do not plug units into each other.

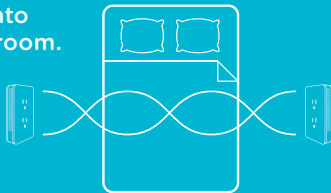

3 Launch the Nightingale Sound app to set up your Nightingale units.

You will need access to your email account on your smartphone to complete setup. Once your Nightingale units are set-up, you can control them through the mobile app or through any supported browser at www.controlnightingale.com

Getting Started Tips



Traveling often?

We recommend you set up Nightingale via Bluetooth for easy connectivity from hotel rooms.



Adding more Nightingales?


You can add more Nightingales and bedrooms from the app.



Smart home?

Check out meetnightingale.com/smarthome for ways to connect via IFTTT and Amazon Alexa.

Technical Specifications

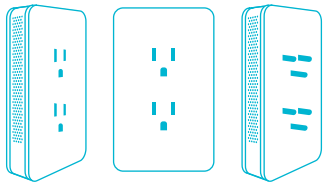

Physical Dimensions (each):

Height 4.3", Width 2.7", Depth 1.7"
(Depth is 1" when it is plugged in)

Weight: 5.5 oz.

Voltage (pass-through): 110 V

Amperage (pass-through): 15 A

Number of Speakers (each): 2

Sound Pressure Range:

0 - 60 dB (SPL)

Radios:

Wi-Fi: 2.4 GHz

Bluetooth LE: 2.4 GHz

Communication Security: AES

Coverage Area (per pair): 300 sq. ft.

Patents & Trademarks:

U.S. Patent Application Pending

Patent Cooperation Treaty (PCT)

Patent Application Pending

U.S. and Foreign Design Patent

Applications Pending

Warranty: 1-year limited warranty

Visit meetnightingale.com/warranty
for details

For more information visit meetnightingale.com
For technical support visit meetnightingale.com/support

