
POWER-SKING CHAINSAW CASE ASSEMBLY



*Before installing your chain saw case please lay out the pieces as shown.

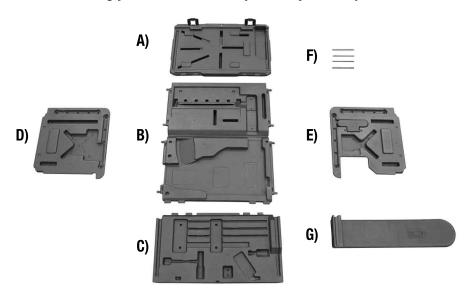

- A) Top Cover/Lid
- B) Back Side Wall and Bottom
- **C) Front Side Wall**
- D) Left Side Wall
- E) Right Side Wall
- F) Hinge Pins
- **G) Bar Scabbard**
- 1. Start by connecting the hinges together with the (C) Front Side Wall and (B) Bottom.



2. Slide the (F) pins all the way through on both hinges. Do the same for the (A) Top Cover and (B) Back Side Wall.



3. Once A, B, and C are connected, lift the (B) Back Side Wall so that it is perpendicular to the (B) Bottom.



POWER-SKING CHAINSAW CASE ASSEMBLY



4. Connect the (D) Left Side Wall to the corresponding connectors on the bend. Do the same for the (E) Right Side Wall.





*Note: If you are unsure if the connectors are seated into the holes of the Side Walls, you can use a pair of pliers to pull on the connectors.





5. When transporting a chainsaw, please place (G) Bar Cover over the chainsaw bar (18" or less) as shown. Slide the Bar Cover into the grooves, close the case, and you are ready to go.



