



# MESH DINING TABLE



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-855-HD-HAMPTON, 8 a.m.-6 p.m., EST, Monday-Friday. Please indicate the store and date your purchase was made.

## PACKAGE CONTENTS

Part	Description	Quantity
A	Table Top	1
B	Plastic Bushing	1
C	Lock Nuts	4
D	Flat Washers	4
E	Top Leg	1
F	Bottom Leg	1



A



B



C



D



E



F



## SAFETY INFORMATION



### CAUTION

Regularly check lock nuts to ensure all are securely tightened.

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts at 1-855-HD-HAMPTON.

Estimated Assembly Time: 10 Minutes

Tools Required for Assembly: Pliers, 7/16" Wrench

## ASSEMBLY INSTRUCTIONS

1. Place table top [A] on floor, with top side down, taking precautions to protect table top surface. See Fig. 1.

Fig. 1



*The table top shown is a 42" round top. These instructions also apply to the 44" round, 48" round, and 38"x72" oval tables.*

2. Using pliers, remove the four rubber bolt protectors from the underside of the table top [A]. See Fig. 2.

Fig. 2



3. Place the top leg [E] on the table top [A], aligning the holes in the top leg with the bolts on the underside of the table top. See Fig. 3.

Fig. 3



4. Place the bottom leg [F] on the top leg [E], aligning the holes in the bottom leg with the bolts on the underside of the table top. See Fig. 4.

Fig. 4



5. Using 7/16" wrench, lock nuts [C], and flat washers [D], attach table top to table legs. Do not over tighten. See Fig. 5.

Fig. 5



6. Stand the assembled table right side up. See Fig. 6.

Fig. 6



7. Insert plastic bushing [B] into top of pipe in the table base. See Fig. 7.

Fig. 7



Your table is assembled and ready for use.

## CARE AND MAINTENANCE INSTRUCTIONS

The frames should be washed with a mild soap and thoroughly rinsed. It is recommended that at least twice a year, you wax your frames with an automotive-type, clear spray-on wax. Please follow the directions on the back of the bottle provided by the manufacturer. Do not use harsh chemicals to clean your product and do not use paste wax.

It is strongly recommended that, before waxing the frames, the frames be inspected for chips in the finish, which may occur under normal usage. Any chips or scratches can be easily repaired by following the instructions on the back of a can of touch-up paint. Simple maintenance will ensure a lifetime of problem-free usage.

Also note that furniture located around salt water, including salt water pools, needs additional cleaning to remove materials that are inherently destructive to outdoor finishes. We recommend cleaning your furniture on a weekly basis and applying wax once a month during heavily used periods of the year.

## WARRANTY

One year limited frame warranty