



## THE CLASSIC™ IRON PLANCHA THE CLASSIC™

**Customer Care Line:**  
USA 1-800-231-9786  
**Accessories/Parts (USA)**  
1-800-738-0245  
For **online customer service** and to **register** your product, go to **www.prodprotect.com/appllica**

**Servicio para el cliente:**  
México 01-800 714-2503  
**Accesorios/Partes (EE.UU)**  
1-800-738-0245  
Para **servicio al cliente** y para **registrar** su garantía, visite **www.prodprotect.com/appllica**



**When using your iron for the first time, you may notice water residue inside the unit. This is normal.**

**Cuando use su plancha por primera vez, notará que hay agua adentro de la plancha. Esto es normal.**

**MODEL/MODEL**  
**○ F67E**

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned off [0] (refer to HOW TO USE section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down or over a tank. Avoid rapid movement of iron to minimize hot water spillage.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned off [0] (refer to HOW TO USE section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down or over a tank. Avoid rapid movement of iron to minimize hot water spillage.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

## SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

## SAVE THESE INSTRUCTIONS.

**This product is for household use only.**

**TAMPER-RESISTANT SCREW**  
**Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.**

**ELECTRICAL CORD**  
a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
b) Longer detachable power-supply cords or extension cords are available for the appliance.  
c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.  
2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and  
3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

**POLARIZED PLUG**  
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**TAMPER-RESISTANT SCREW**  
**Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.**

**ELECTRICAL CORD**  
a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
b) Longer detachable power-supply cords or extension cords are available for the appliance.  
c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.  
2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and  
3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

**POLARIZED PLUG**  
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**TAMPER-RESISTANT SCREW**  
**Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.**

**ELECTRICAL CORD**  
a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
b) Longer detachable power-supply cords or extension cords are available for the appliance.  
c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.  
2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and  
3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

**POLARIZED PLUG**  
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**TAMPER-RESISTANT SCREW**  
**Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.**

**ELECTRICAL CORD**  
a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
b) Longer detachable power-supply cords or extension cords are available for the appliance.  
c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.  
2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and  
3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

**POLARIZED PLUG**  
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**TAMPER-RESISTANT SCREW**  
**Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.**

**ELECTRICAL CORD**  
a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
b) Longer detachable power-supply cords or extension cords are available for the appliance.  
c) If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.  
2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and  
3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

**Note:** If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

## How to Use

**GETTING STARTED**  
Remove any labels, stickers or tags attached to the body or soleplate of the iron.  
**Note:** Use ordinary tap water for ironing. Do not use water processed through a home softening system.  
**Important: For optimum performance, let the iron stand for 90 seconds before beginning to iron.**  
**Tip:** If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.  
**Note:** Use ordinary tap water for ironing. Do not use water processed through a home softening system.  
**Important: For optimum performance, before you start ironing, plug iron into electrical outlet and let it stand for 90 seconds.**

**FILLING WATER TANK**  
1. With the iron unplugged and the steam button locked in the DOWN position, use a clean measuring cup and pour water into the water-fill opening. Refill as needed.  
2. Plug in the iron and let it stand on its heel rest. The power indicator light will turn on.  
3. Use the fabric guide on the iron to select the proper temperature setting for the fabric.

**SELECTING TEMPERATURE**  
1. Use the fabric guide on the iron to select the proper temperature setting for the fabric.  
**Tip:** If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing. If there is a brown buildup on the soleplate, lower the setting and/or reduce starch.  
2. Once you determine the fabric type, set the temperature selector to the appropriate setting for your fabric. Once the iron reaches the selected temperature, the power indicator light will turn off. The light will cycle on an off during ironing.  
3. When finished ironing, place iron on its heel rest, turn temperature selector to OFF and unplug the iron.

**3-WAY AUTOMATIC SHUTOFF**  
The automatic shutoff feature in your iron works as follows:  
• Once the iron reaches appropriate temperature, it will turn off after 30 seconds of inactivity if left on its soleplate or tipped over on its side. If left vertically on its heel rest, it will shut off after 8 minutes.  
• As soon as you pick up the iron, it will start heating again. Wait for iron to reheat completely before resuming operation.  
1. Be sure there is water in the water tank.  
2. Turn the temperature selector between settings 5 and 7.  
3. Unlock the steam button to the UP position. If steam does not start, gently bump the soleplate on the ironing board a few times. If water drips from vents, turn the selector to a higher setting.

**STEAM IRONING**  
1. Be sure there is water in the water tank.  
2. Turn the temperature selector between settings 5 and 7.  
3. Unlock the steam button to the UP position. If steam does not start, gently bump the soleplate on the ironing board a few times. If water drips from vents, turn the selector to a higher setting.

**STEAM IRONING**  
1. Be sure there is water in the water tank.  
2. Turn the temperature selector between settings 5 and 7.  
3. Unlock the steam button to the UP position. If steam does not start, gently bump the soleplate on the ironing board a few times. If water drips from vents, turn the selector to a higher setting.

Sello del Distribuidor:	Comercializado por: <b>Rayovac de México SA de C.V</b> KM. 14.5 Carretera Puente de Vigas. Col. Lechería, Tultitlán. Estado de México. C.P. 54940 México Tel: (52) 5831-7070
Fecha de compra:	<b>Servicio y Reparación</b> Art. 123 No. 95 Col. Centro, C.P. 06050 Deleg. Cuauhtemoc
Modelo:	<b>Servicio al Consumidor,</b> Venta de Refacciones y Accesorios 01 800 714 2503

Código de fecha / Date Code	1 100 W 120 V~ 60 Hz
-----------------------------	----------------------

© 2011 Applica Consumer Products, Inc.

**Importado por / Imported by:**  
**RAYOVAC ARGENTINA S.R.L.**  
Humboldt 2495 Piso# 3  
[C1425FUG] C.A.B.A. Argentina.  
**C.U.I.T No.** 30-70706168-1

**Importado por / Imported by:**  
**Rayovac de México SA de C.V**  
KM. 14.5 Carretera Puente de Vigas.  
Col. Lechería, Tultitlán.  
Estado de México.  
C.P. 54940  
México  
Tel: (52) 5831-7070

**Del interior marque sin costo**  
01 (800) 714 2503

**NEED HELP?**  
For service, repair or any questions regarding your appliance, call the appropriate 800 number on the cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

**TWO-YEAR LIMITED WARRANTY**  
**(Applies only in the United States and Canada)**  
**What does it cover?**  
• Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

**For how long?**  
• Two years from the date of original purchase with proof of such purchase.

**What will we do to help you?**  
• Provide you with a reasonably similar replacement product that is either new or factory refurbished.

**How do you get service?**  
• Save your receipt as proof of date of sale.  
• Visit the online service website at [www.prodprotect.com/appllica](http://www.prodprotect.com/appllica), or call toll-free 1-800-231-9786, for general warranty service.  
• If you need parts or accessories, please call 1-800-738-0245.

**What does your warranty not cover?**  
• Damage from commercial use  
• Damage from misuse, abuse or neglect  
• Products that have been modified in any way  
• Products used or serviced outside the country of purchase  
• Glass parts and other accessory items that are packed with the unit  
• Shipping and handling costs associated with the replacement of the unit  
• Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

**How does state law relate to this warranty?**  
• This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

**BLACK&DECKER** is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

Made and Printed in People's Republic of China

