
Progressive® furniture

ASSEMBLY INSTRUCTION

Item No: I 332-42

Description: ENTERTAINMENT CONSOLE

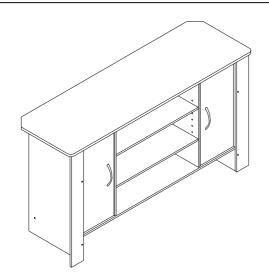

IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.


Each Item -


PARTS LIST				
NO	O COMPONENT			
Α	TOP PANEL	1 PC		
В	SIDE PANEL	2 PCS		
С	CENTER LEFT PANEL) 1 PC		
D	CENTER RIGHT PANEL	> 1 PC		
Е	SHELF PANEL	> 2 PCS		
F	BOTTOM PANEL	1 PC		
G	LEFT DOOR PANEL) 1 PC		
Н	RIGHT DOOR PANEL) 1 PC		
ı	LEFT FRONT PANEL	1 PC		
J	RIGHT FRONT PANEL	1 PC		
K	LEG PANEL	1 PC		
L	BACK PANEL <	> 2 PCS		

	HARDWARE LIST				
NO	DESCRIPT	ION	QTY		
1	SCREW		14 PCS		
2	WOODEN DOWEL		10 PCS		
3	MAGNET		2 PCS		
4	MAGNET SCREW	(2) s	2 PCS		
5	DOOR SPRING SUPPORT	A	4 PCS		
6	SHELF SUPPORT	P	8 PCS		
7	HANDLE		2 PCS		
8	HANDLE SCREW	(January)	4 PCS		
9	NAIL LEG	Q.	7 PCS		
10	NAIL		16 PCS		
11	GLUE	5	1 PC		

STEP 1

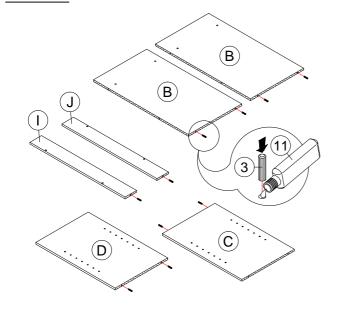

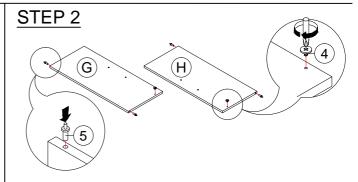

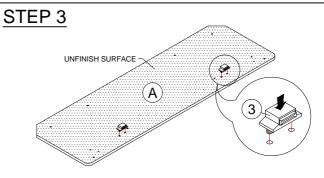


Progressive®

ASSEMBLY INSTRUCTION


Item No: I 332-42

Description: ENTERTAINMENT CONSOLE


STEP 4

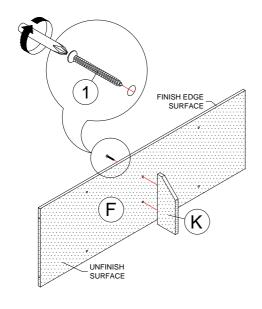


STEP 5

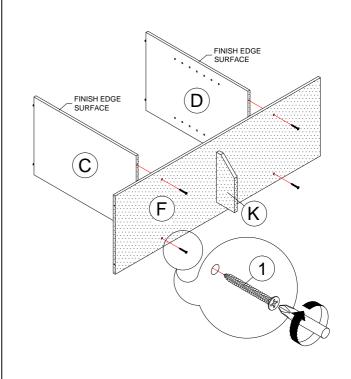

STEP 6

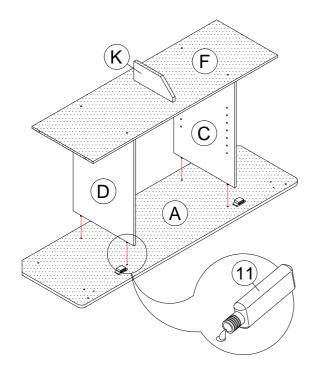

STEP 7

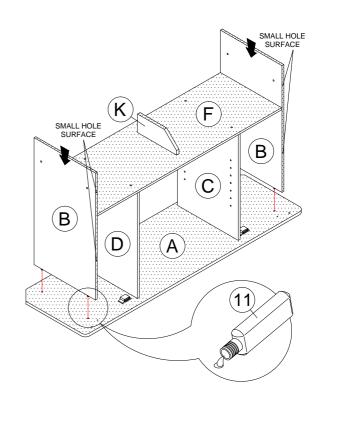


Progressive®

ASSEMBLY INSTRUCTION


Item No: I 332-42

Description: ENTERTAINMENT CONSOLE


STEP 8

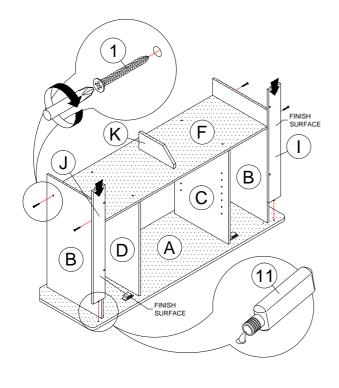

STEP 9

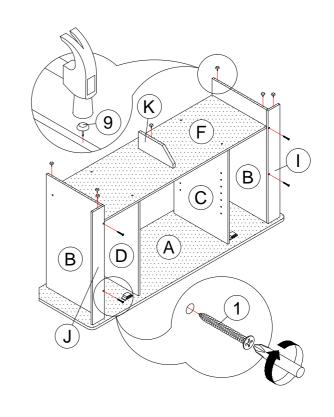

STEP 10

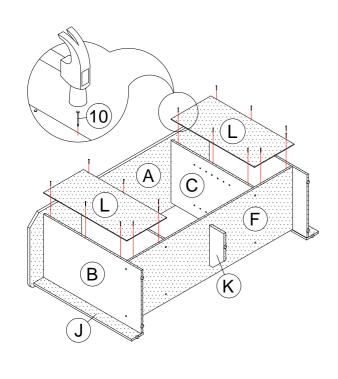

STEP 11

