


# INTRODUCING YOUR WASHING MACHINE


## Parts and Accessories

### Parts

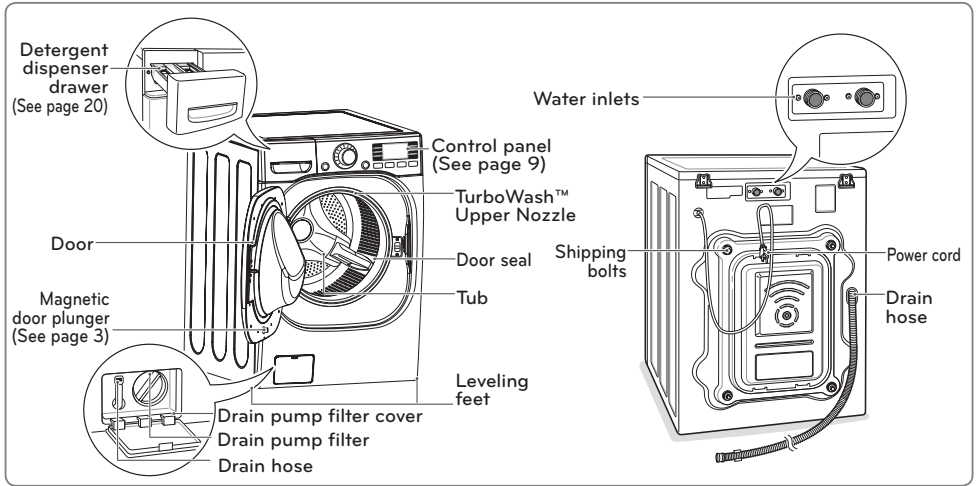


### Accessories

#### Included Accessories

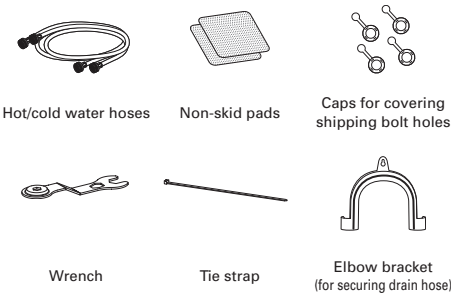


#### Optional Accessories

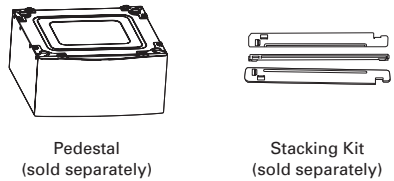

### NOTE

- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, and are subject to change by the manufacturer without prior notice for product improvement purposes.



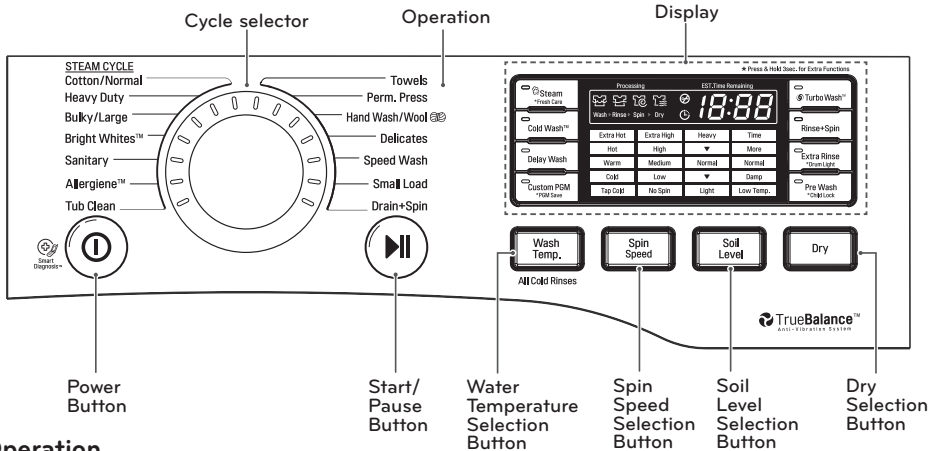





# Control Panel Features




## Operation

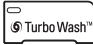



Button	Description
	<ul style="list-style-type: none"> <li>Turns the washing machine on and off.</li> <li>(During the wash cycle) stops operation, and cancels the settings.</li> </ul>
	<ul style="list-style-type: none"> <li><b>Tub Clean</b> <ul style="list-style-type: none"> <li>For tub clean. (see page 30.)</li> </ul> </li> <li><b>Allergiene™</b> <ul style="list-style-type: none"> <li>For cotton, underwear. (see page 24.)</li> </ul> </li> <li><b>Sanitary</b> <ul style="list-style-type: none"> <li>For underwear, diapers, etc. (see page 24.)</li> </ul> </li> <li><b>Bright Whites™</b> <ul style="list-style-type: none"> <li>For white fabrics. (see page 24.)</li> </ul> </li> <li><b>Bulky/Large</b> <ul style="list-style-type: none"> <li>For blankets or large, bulky items. (see page 24.)</li> </ul> </li> <li><b>Heavy Duty</b> <ul style="list-style-type: none"> <li>For heavily soiled cotton fabric. (see page 24.)</li> </ul> </li> <li><b>Cotton/Normal</b> <ul style="list-style-type: none"> <li>For general laundry, such as cotton T-shirts or towels. (see page 24.)</li> </ul> </li> <li><b>Towels</b> <ul style="list-style-type: none"> <li>For towels. (see page 24.)</li> </ul> </li> <li><b>Perm. Press</b> <ul style="list-style-type: none"> <li>For wrinkle-free fabrics. (see page 24.)</li> </ul> </li> <li><b>Hand Wash/Wool</b> <ul style="list-style-type: none"> <li>For wool or hand-wash fabrics. (see page 24.)</li> </ul> </li> <li><b>Delicates</b> <ul style="list-style-type: none"> <li>For sheer and delicate fabrics. (see page 24.)</li> </ul> </li> <li><b>Speed Wash</b> <ul style="list-style-type: none"> <li>For small quantities of lightly soiled items. (see page 24.)</li> </ul> </li> <li><b>Small Load</b> <ul style="list-style-type: none"> <li>For a few items. (see page 24.)</li> </ul> </li> <li><b>Drain+Spin</b> <ul style="list-style-type: none"> <li>For items that only require draining and spinning. (see page 24.)</li> </ul> </li> </ul>
	<ul style="list-style-type: none"> <li>Starts or pauses the wash cycle.</li> <li>- If you do not press the Start/Pause button within 4 minutes of selecting a cycle, the washing machine will turn off automatically and all settings will be lost.</li> </ul>
	<ul style="list-style-type: none"> <li>(Press repeatedly) Selects the water temperature for the wash cycle. (see page 25.)</li> <li>- Select water temperature from 5 settings.</li> </ul>
	<ul style="list-style-type: none"> <li>(Press repeatedly) Selects the spin speed. (see page 25.)</li> <li>- Selects spin speed from 5 settings.</li> </ul>
	<ul style="list-style-type: none"> <li>(Press repeatedly) Selects a wash cycle by soil level. (see page 25.)</li> <li>- Selects soil level from 5 settings.</li> </ul>
	<ul style="list-style-type: none"> <li>(Press repeatedly) Selects a dry cycle. Pressing this button enables drying. (See page 26.)</li> </ul>

## Operation (continued)

Button	Description
	<ul style="list-style-type: none"> <li>• (Press before starting wash cycle) Use this option to add steam for extra cleaning power. (see page 27.)</li> <li>• (Press and hold before starting wash cycle) Tumbles clothes after cycle finishes to prevent wrinkles. (see page 28.)</li> </ul>
	<ul style="list-style-type: none"> <li>• Use this option to save on energy consumption. (see page 27.)</li> </ul>
	<ul style="list-style-type: none"> <li>• Set the delay time of starting the cycle. (see page 27.)</li> </ul>
	<ul style="list-style-type: none"> <li>• Use this option to save a special combination of settings that you use frequently. (see page 28.)</li> </ul>
	<ul style="list-style-type: none"> <li>• Use this option to save time. (see page 27.)</li> </ul>
	<ul style="list-style-type: none"> <li>• Use this option to rinse detergent from the load. (see page 26.)</li> </ul>
	<ul style="list-style-type: none"> <li>• (Press before wash cycle) Add an extra rinse to the selected cycle. (see page 27.)</li> <li>• (Press and hold during wash cycle) The drum is equipped with a white LED light that illuminates when the washer is turned on. (see page 28.)</li> </ul>
	<ul style="list-style-type: none"> <li>• (Press before wash cycle) Pre-wash heavily soiled laundry. (see page 26.)</li> <li>• (Press and hold during wash cycle) Lock/Unlock the buttons. (see page 28.)</li> </ul>
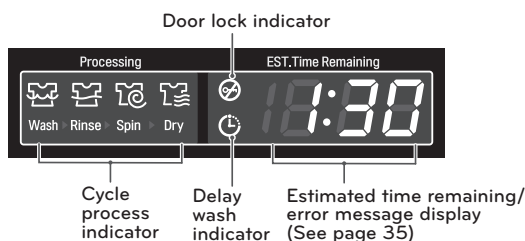
## Display

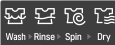

Display Icon	Description
	<ul style="list-style-type: none"> <li>• This portion of the display shows which stage of the wash cycle is currently underway (Wash, Rinse, Spin, Dry).</li> </ul>
	<ul style="list-style-type: none"> <li>• This indicator shows that the door is locked. The washer door will lock while the washer is operating. The door can be unlocked by pressing the START/PAUSE button to stop the washer.</li> </ul>
	<ul style="list-style-type: none"> <li>• This indicator shows that the washer has been set for Delay Wash. The washer will start automatically after the set delay time has passed.</li> </ul>
	<ul style="list-style-type: none"> <li>• When the START/PAUSE button is pressed, the washer automatically detects the wash load (weight) and optimizes the washing time, based on the selected cycle and options. The display will then indicate the estimated time remaining for the selected wash cycle.</li> </ul>