



4-in-1 Quick Change – Auto Lock Operating Instructions

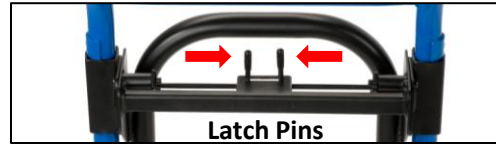

Handle Height Adjustment

To adjust the handle height, squeeze the two latch pins together, begin lifting the middle of the handle, release the latch pins and continue lifting until it locks into the Tall handle position. When the auto lock mechanism is properly engaged, the truck is ready for use. To lower handle, squeeze pins and lower handle to Standard position.


(The alignment decal should be positioned at 90 degrees)

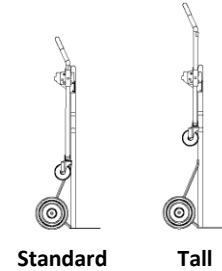

Incline Four Wheel Cart Position

Important - Handle must be in the Standard position to convert the hand truck into an incline four wheel cart. While standing to the side of the hand truck, squeeze the two latch pins together, begin rotating the handle forward, release the pins, and continue rotating forward until handle locks into 45 degree position. When the auto lock mechanism is properly engaged, the inclined cart is ready for use.


(The alignment decal should be positioned at 45 degrees)

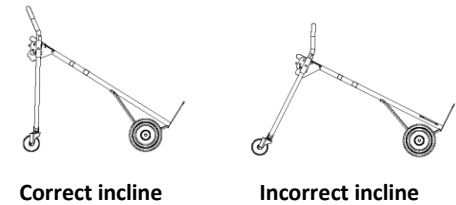

Four Wheel Cart Position

To change into a horizontal four wheel cart from the incline cart position, squeeze the two latch pins together, lower the frame until it bottoms out on the caster bracket assembly and release the latch pins.

(The alignment decal should be positioned at 180 degrees)

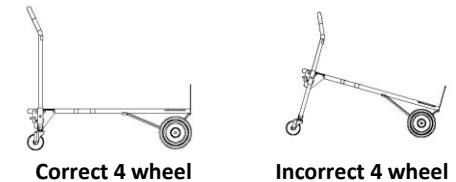

To return to the Standard position, squeeze latch pins with one hand and with the other hand, grab the frame and lift until truck returns to two wheels. Release latch pins to engage auto lock mechanism.