

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

a READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- b. This product is for indoor use only. The electrical rating is **1.70A 120V 60Hz**.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- I. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. Read and follow all instructions that are on the product or provided with the product.

n. SAVE THESE INSTRUCTIONS

Pre-Assembly

Package Contents		
Part	Description	Quantity
А	Tree top	1
В	Tree center, Sticker 2	1
C	Tree center, Sticker 1	1
D	Tree stand	1

Assembly

Assembling the tree stand

- Step 1. Choose a location near a wall outlet.
- **Step 2.** Unfold the legs and lay the stand in a flat area. Then slide the locking disc downward and snap into place.
- **Step 3.** SWhen inserting the bottom section of the tree into the assembled stand, thread the eyebolt into the stand and tighten until the pole is firmly secured.





Assembling the tree

- **Step 1.** Remove the protective caps from the tree bottom (C) and insert the pole into the tree stand (D).
- Step 2. Remove the protective caps from the tree center (B) and insert the pole into the tree bottom (C).
- Step 3. Insert the tree top (A) into the tree center (B).
- **Step 4.** Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.
- **Step 5.** Connect the plug(s) securely to the extension cord(s) as per the color labels indicated in attached photo and insert the green label extension cord plug into the wall outlet.
- **Step 6.** Shape the tree from the bottom to the top. Start with the branches farthest from the pole fan out in a star shape, and continue until the entire tree is shaped.



Step 7. When finished shaping the branches, slightly upsweep all branch tips for a uniform look.

Operation

Turning on the tree

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

- **Step 1.** Connect the light strings of the tree together and plug the power cord into a wall outlet.
- Step 2. If the tree comes with a foot pedal, step on the On/Off button.

Maintenance

Spare parts

This tree package includes bulbs and fuses for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.



Christmas Tree Model: TV90CH520S00 Sku # 204150079



Care and Cleaning

- Step 1. Remove all ornaments and decorations.
- **Step 2.** Unplug the cord from the wall and then unplug each section of the tree.
- **Step 3.** Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Step 4. Repeat this step for the center and bottom tree sections.
- **Step 5.** Carefully place all tree sections into a shipping box and tape it shut.
- Step 6. Store your tree in a cool, dry place away from sunlight.

User servicing instructions

Fused Lamp Replacement

WARNING - Risk of fire: This product employs overload protection (fuse lamp) in each series light circuit to provide overload protection in addition to the fuse(s) located in the plug. Do not replace the fuse lamp contained in this set with any other type of lamp, use only spare fuse lamps provided with this product. In case of a burnt out FUSED lamp, the entire series of 50 lamps will be out. To replace the fused lamp:

- 1. Grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling the cord.
- 2. Locate the fused lamp with gray color lamp holder. Pull the burnt fused lamp and plastic lamp base straight out of the lamp holder.
- 3. Replace with a spare fused lamp. The fused lamp can be distinguished by a gray lamp base and an additional clear plastic cover.
- 4. Plug in the lights again.



Fuse replacement

- 1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- 2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.3. Remove fuse carefully.
- 4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse for the power cord set.
- 5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- 6. Risk of fire.Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.



Troubleshooting

Problem	Solution	
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.	
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided.	
	Check for blown fuses at the light string and power cord plugs. Replace as needed with the replacement fuses provided.	
	For blown fuses (if applicable), please refer to User Servicing Instructions – Fuse Replacement and replace as instructed.	