

CHEFMAN®

SINGLE SERVE COFFEE MAKER



USER GUIDE

Now that you have purchased a Chefman® product you can rest assured in the knowledge that as well as your 3-year parts and labor warranty you have the added peace of mind of dedicated helplines and web support.

AFTER SALES SUPPORT

 USA 888-315-8407

 customerwarranty@rjbrands.com

MODEL: RJ14-M-S SERIES



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.



Contents

- 1** Introduction
- 2** Safety Instructions
- 5** MESURES DE SECURITE IMPORTANTES
- 7** Features
- 8** Operating Instructions
- 12** Cleaning and Maintenance
- 13** Terms and Conditions
- 14** Warranty Card

Introduction

Congratulations!

You have made an excellent choice with the purchase of this quality Chefman® product. By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Chefman®.

We want you to be completely satisfied with your purchase so this Chefman® product is backed by a comprehensive manufacturer's 3-year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 3-year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt). This guarantee is in addition to your statutory rights. Your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse and force majeure.

This limited warranty will be invalidated if the appliance is tampered with in any way whatsoever. In case of questions or technical problems please call the following toll-free help line number: 888-315-8407, Monday – Friday 9am to 5pm EST.

If the appliance has to be returned to us, it must be packed correctly as we cannot accept any responsibility for damage caused in transit.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions. All users of this appliance must read and understand this User Guide before operating or cleaning this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Bring it to a qualified technician for examination, repair or electrical or mechanical adjustment.
7. The use of accessories or attachments not recommended by the manufacturer may result in fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always fill water reservoir first then plug cord into the wall outlet.
12. To interrupt the brewing cycle at any time remove plug from wall outlet.
13. Do not use appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot liquids.
15. Scalding may occur if the coffee maker lid is opened during the brewing cycle.
WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.
16. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
17. Use water only in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this

SAFETY INSTRUCTIONS (cont'd)

appliance, except as instructed in the Cleaning and Maintenance section to clean the appliance.

18. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
19. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
20. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
21. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or has become immersed in water.
22. The appliance must be left to cool down sufficiently before adding more water to avoid exposure to steam.
23. Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in the Cleaning and Maintenance section, may cause damage to the appliance.
24. This unit is 120v 60hz 700 watts.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

SAFETY INSTRUCTIONS (cont'd)

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
2. The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

MESURES DE SECURITE IMPORTANTES

Lorsqu'on utilise un appareil électrique, des précautions de base devraient toujours être suivies, incluant ce qui suit:


1. Lisez toutes les instructions.
2. Ne pas toucher les surfaces chaudes. Utiliser les poignées ou les boutons.
3. Pour protéger contre les chocs électriques, ne pas immerger le cordon, la fiche ou l'appareil dans l'eau ou autre liquide.
4. Une surveillance étroite est nécessaire lorsque tout appareil est utilisé par ou près des enfants.
5. Débranchez l'appareil lorsqu'il n'est pas utilisé et avant le nettoyage. Laissez refroidir avant de mettre ou enlever des pièces, et avant de le nettoyer.
6. Ne pas utiliser un appareil avec un cordon ou une fiche endommagé ou lorsque l'appareil, ou a été endommagé de quelque façon. Renvoyer l'appareil au centre de service agréé le plus proche pour examen, réparation ou réglage.
7. L'utilisation d'accessoires non recommandés par le fabricant peut causer des blessures.
8. Ne pas utiliser à l'extérieur.
9. Ne laissez pas pendre le cordon de la table ou un comptoir, ni toucher des surfaces chaudes.
10. Ne pas placer près ou sur un brûleur à gaz ou électrique, ou dans un four chauffe.
11. Toujours brancher l'appareil, puis brancher le cordon dans la prise murale. Pour débrancher, mettre toutes les commandes sur "off" puis retirez la fiche de la prise murale.
12. Ne pas utiliser cet appareil pour d'autres fins que celles prévues.
13. La carafe est conçue pour une utilisation avec cet appareil. Il ne doit jamais être utilisé sur une cuisinière.
14. Ne pas placer la carafe chaude sur une surface chaude ou froide.
15. Ne pas utiliser un récipient fissuré ou un conteneur muni d'une poignée est lâche ou affaiblie.
16. Ne pas nettoyer la carafe avec des nettoyeurs, des tampons en laine d'acier ou d'autres matériaux abrasifs.
17. Des brûlures peuvent se produire si le couvercle est ouvert pendant les cycles de brassage. Faites attention à ne pas vous brûler par la vapeur.

MESURES DE SECURITE IMPORTANTES

18. a) Un cordon d'alimentation court (ou amovible cordon d'alimentation) doit être fourni pour réduire le risque de s'emmêler ou de trébucher sur un cordon plus long.
- b) detachables plus longs cordons d'alimentation ou les rallonges sont disponibles et peuvent être utilisés avec prudence dans leur utilisation.
- c) Si un long cordon d'alimentation amovible ou de rallonge est utilisé:
- 1) Les caractéristiques électriques du câble ou sa rallonge devrait être au moins aussi élevée que la puissance électrique de l'appareil;
 - 2) Si l'appareil est de type mise à la terre, la rallonge doit être un cordon de terre 3-fils, et
 - 3) le cordon plus long soit placé de sorte qu'il ne soit pas étalé sur le comptoir ou de la table ou il peut être tiré par des enfants ou faire trébucher quelqu'un.

USAGE DOMESTIQUE SEULEMENT
CONSERVER CES INSTRUCTIONS

Features

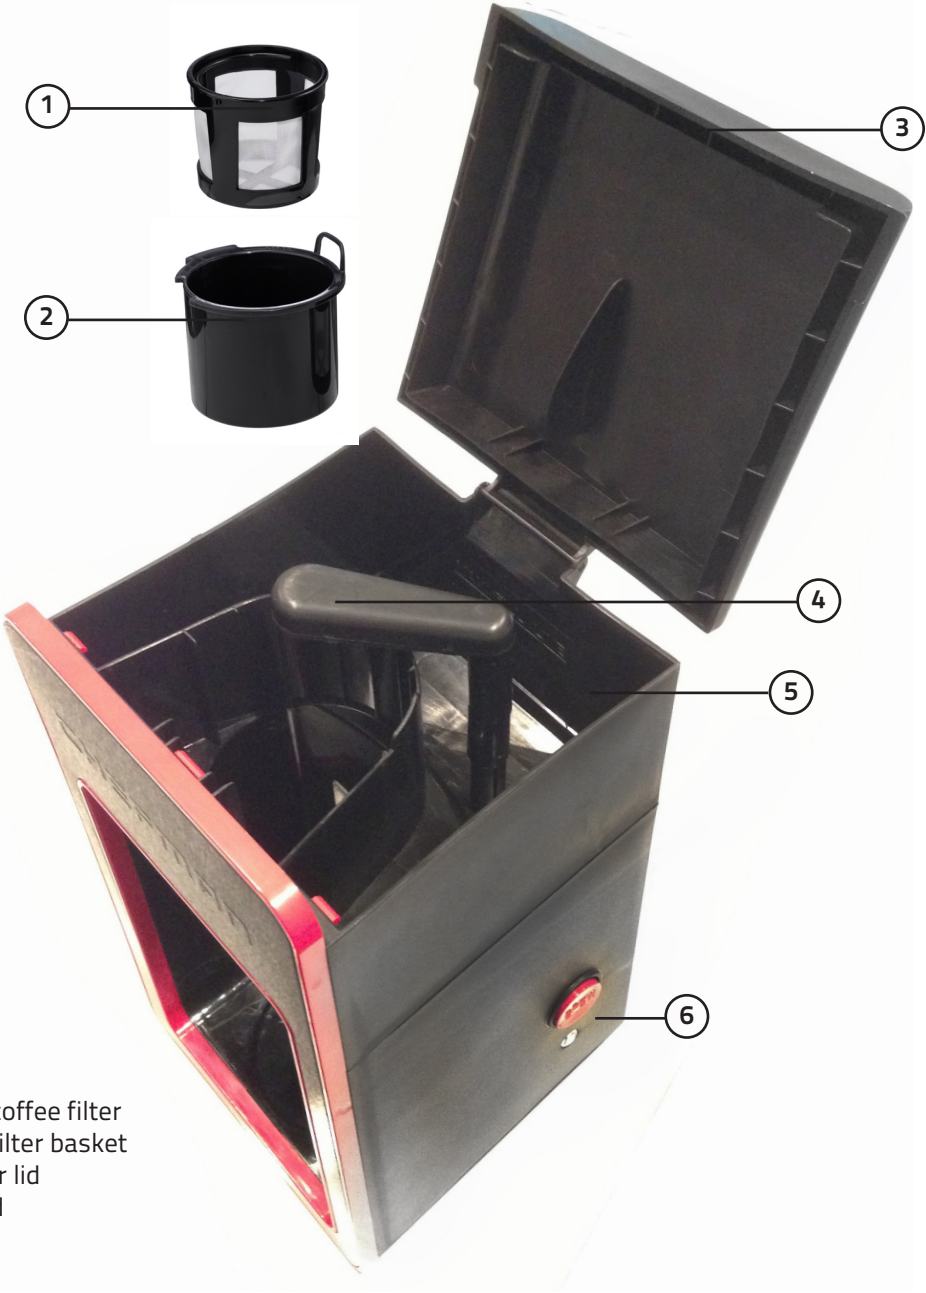

Operating Instructions

GETTING TO KNOW YOUR CHEFMAN SINGLE SERVE COFFEEMAKER

COFFEE YIELD

One Cup Drip Coffee Maker: 5 oz-16 oz

A 5-oz. serving is the standard size used to define a cup of coffee. Your coffee maker is capable of brewing 5 to 16 ounce (142 ml to 473 ml) servings. To dispense the most accurate serving size, fill your mug or bowl with water to the desired level and pour it directly into reservoir.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

PERMANENT COFFEE FILTER

The permanent filter included with the Coffee Maker eliminates the need for disposable papers filters. Use the handle on the permanent coffee filter to remove it from the filter basket; discard used coffee grounds, rinse the filter and replace it in the unit.

BEFORE FIRST TIME USE

1. Remove all packing material and labels from the inside and outside of the Coffee Maker. Place the unit on a flat, clean surface.
2. Before preparing coffee, thoroughly clean the removable filter holder and permanent coffee filter in hot, soapy water. Rinse thoroughly and dry. The permanent filter and filter basket are all top rack dishwasher safe. Replace disassembled parts. See Cleaning and Maintenance instructions for a more detailed description.
3. To clean the inside of the Coffee Maker, brew 12-14 oz of cold water (see Brewing Instructions). Do not use the permanent coffee filter or ground coffee for this initial cleaning.

NOTE: At the end of the first cycle, allow 15 minutes for the unit to cool.

Operating Instructions (cont'd)

BREWING INSTRUCTIONS

1. Lift the lid and pour up to 16 oz of cold water into the water tank.
The water level indicator lines are marked on the inside back wall of the unit.
IMPORTANT: Never exceed the MAX 16 oz fill line.
2. Place an empty mug on the drip tray.
3. If required, place the permanent filter in the removable filter basket.
4. Plug the Coffee Maker into a 120V AC electrical wall outlet only.
5. Press the brew button, then the red light will illuminate and the Coffee Maker will begin the brew cycle.
NOTE: To interrupt the brewing process at any time, remove plug from wall outlet.
6. Upon completion of the brew cycle, do not remove the mug until the dripping has ceased
7. Unplug the Coffee Maker from the wall outlet.

CAUTION: Use extreme caution when opening the lid after brewing. Any residual water in the tank will be discharged from the shower as hot steam.

GROUND COFFEE

Use standard drip coffee grind.

1. Place the permanent filter in the removable filter basket. Add ground coffee and close lid. Approximately 1 level tablespoon is recommended per cup (5 oz) of coffee desired. For stronger or milder coffee, adjust amount of coffee ground to suit your taste.
2. Using the desired cup size as your measure, add cold water to the water tank.
3. Center the mug under the nozzle and follow steps 4-7 from the brewing instructions.
NOTE: The amount of brewed coffee will always be less than the amount of water placed into the water reservoir; as much as 10% is absorbed by coffee grounds and filter.

POD COFFEE

Use any standard single serve pod.

1. Remove the permanent filter from the removable pod/filter basket.
Place 1 or 2 pods directly into the pod/filter basket and close lid.
2. Using the desired cup size as your measure, add cold water to the water tank.
3. Center the mug under the nozzle and follow steps 4-7 from the brewing instructions.

Operating Instructions (cont'd)

TEA BAGS

1. Remove the permanent filter from the removable pod/filter basket.
2. Add 1 cup (5 oz) cold water to the water tank.
3. Place one tea bag into your cup
4. Center the cup under the nozzle and follow steps 4-7 from the brewing instructions.
5. Allow the water and tea bag to steep in the cup for approximately 2-3 minutes or to desired taste.

LOOSE TEA

1. Place the permanent filter in the removable filter basket. Add the desired amount of loose tea to the permanent filter and close lid.
2. Using the desired cup size as your measure, add cold water to the water tank. The suggested serving size for 1 cup of tea is 5oz.
3. Center the cup under the nozzle and follow steps 4-7 from the brewing instructions.

OATMEAL

1. Remove the permanent filter from the removable pod/filter basket.
2. Add 1 cup (4oz or 125ml) of cold water to the water tank.
3. Empty the contents from one package (approximately 33g) of instant oatmeal into the cup.
4. Center the cup under the nozzle and follow steps 4-7 from the brewing instructions.
NOTE: to control the consistency of the oatmeal, adjust the amount of water accordingly.

CUP OF SOUP

1. Remove the permanent filter from the removable pod/filter basket.
2. Add 1 cup (5oz) cold water to the water tank.
3. Empty contents from one soup package (approximately 13g) directly into the cup.
4. Center the cup under the nozzle and follow steps 4-7 from the brewing instructions.
5. When brewing is complete, stir the contents and allow them to steep for an additional 1-2 minutes.

Operating Instructions (cont'd)

HOT CHOCOLATE AND HOT CIDER

1. Remove the permanent filter from the removable pod/filter basket.
2. Add approximately 1.5 cups (7.5oz) cold water to the water tank, or as directed on the drink package.
3. Empty the contents from the drink package (approximately 21g) directly into the cup
4. Center the cup under the nozzle and follow steps 4-7 from the brewing instructions.
5. When brewing is complete, stir the contents and allow them to steep for an additional 1-2 minutes.

NOTE: adjust the amount of water to taste.

TIPS FOR GREAT TASTING COFFEE

- A clean Coffee Maker is essential for making great tasting coffee. Regular cleaning, as described in the Cleaning and Maintenance instructions and Descaling sections of this User Guide is highly recommended.
- Always use fresh, cold water in your Coffee Maker.
- Finer grinds promote fuller extraction and provide rich, full-bodied coffee. Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
- For optimum coffee flavor, buy whole beans and grind them finely just before brewing.
- Do not re-use coffee grounds since this will greatly impair coffee flavor.
- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
- Small oil droplets on the surface of brewed, black coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Over extraction may also cause oiliness, indicating a need to clean your Coffee Maker.

Cleaning and Maintenance

This appliance requires little maintenance and contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

1. Always make sure the Coffee Maker is unplugged before attempting to clean.
2. Remove the permanent coffee filter and filter basket, discard used coffee grounds, loose tea or pods and rinse both pieces thoroughly after every use.
3. Wipe the exterior with a damp cloth to remove dust and superficial stains. For stubborn stains, use a nylon or plastic pad with a non-abrasive cleanser. Do not use metal scouring pads or abrasive cleansers.
4. Dry and replace disassembled parts. Make sure the removable filter holder drops down and is properly seated into the housing.
5. Never immerse unit in water or any other liquid.

DESCALING

It is recommended to perform a special cleaning of your Coffee Maker at least once a month, depending on frequency of use and quality of water used in the unit. If water in your area is especially hard, the following cleaning procedure should be performed more regularly. Excessive accumulation of mineral deposits from hard water can detract from the flavor of the coffee and possibly lengthen brew time. Excessive steaming or prolonged brew time are signs that cleaning is needed.

1. Fill half full mug with 1 part white vinegar to 3 parts cold water. Pour water and vinegar solution into the water tank
2. Center an empty mug on the drip tray under the nozzle.
3. Press the brew button to start brew cycle, allowing all of the solution to drip into the mug.
NOTE: During cleaning, more steam will occur than during normal coffee brewing.
4. When liquid stops dripping from filter holder into the mug, the red brew light will turn off. Remove the mug and allow liquid to cool for 15 minutes. When cooled, repeat steps 1-4 a second time.
5. Allow Coffee Maker to cool for 15 minutes, rinse by brewing a full mug of cold water. Insert the clean permanent coffee filter into the removable filter basket before brewing. This step may need to be repeated in order to remove any remaining vinegar taste.
6. At end of brew cycle, the red brew light will turn off, discard the water in the mug. Wash the mug, permanent coffee filter and removable filter holder in warm, soapy water and dry the parts thoroughly.
7. When the Coffee Maker has cooled, wipe the exterior with a dry cloth.

Terms and Conditions

CHEFMAN LLC warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of THREE (3) years. CHEFMAN LLC, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN LLC will repair or replace the same effecting all necessary parts replacements for a period of three years from the date of purchase. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

This warranty is available to consumers only. You are a consumer if you own a CHEFMAN® Single Serve Coffee Maker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CONDITIONS: This warranty is valid for the original USA retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN LLC Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than CHEFMAN LLC or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN LLC shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your CHEFMAN® Single Serve Coffee Maker should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-888-315-8407 Ext: 400 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Chefman, 873 Route 45, Suite 101, New City, NY 10956.

To facilitate the speed and accuracy of your return, please enclose \$15.00 for shipping and handling of the product. Please only pay by money order.

This warranty is effective for the time periods listed above and subject to the conditions provided for within this policy.

CHEFMAN is a registered trademark of PLUS ITS CHEAP, LLC.

Warranty Card

CHEFMAN[®]

SINGLE SERVE COFFEE MAKER

Your details:

Name _____

Address _____



_____ E mail _____

Date of purchase* _____

* We recommend you keep the receipt with this warranty card

Location of purchase _____

Description of malfunction:

Return your completed warranty card to:

RJ Brands
873 Route 45
Suite 101
New City, New York
10956

AFTER SALES SUPPORT

 USA 888-315-8407

 customerwarranty@rjbrands.com

MODEL: RJ14-M-S SERIES

Phone lines available Monday to Friday, 9am-5pm EST

3-YEAR LIMITED WARRANTY

