

# ReadyCook™ Air Fry Tray POP Installation

1. Remove plastic protective wrap from the Air Fry Tray.
2. Unclip the factory-applied “All of the Flavor, None of the Guilt” POP from the top rack inside the oven cavity.
3. Remove the top oven rack and store away from unit.
4. Place the Air Fry Tray in the middle position inside the oven.
5. Place “Perfect Crispy-Golden Results” POP onto Air Fry Tray.
6. Clip the “All of the Flavor, None of the Guilt” POP to the rack below the Air Fry Tray.

## ReadyCook™ Air Fry Tray POP Arrangement



Air Fry POP fits these models:		
ELECTRIC	GAS	INDUCTION
FGEH3047VD, FGEH3047VF CGEH3047VF	FGGH3047VD, FGGH3047VF	FGIH3047VD, FGIH3047VF CGIH3047VD, CGIH3047VF
Dimensions: 8" x 16" (Tray), 13" x 5.5" (Range)		