


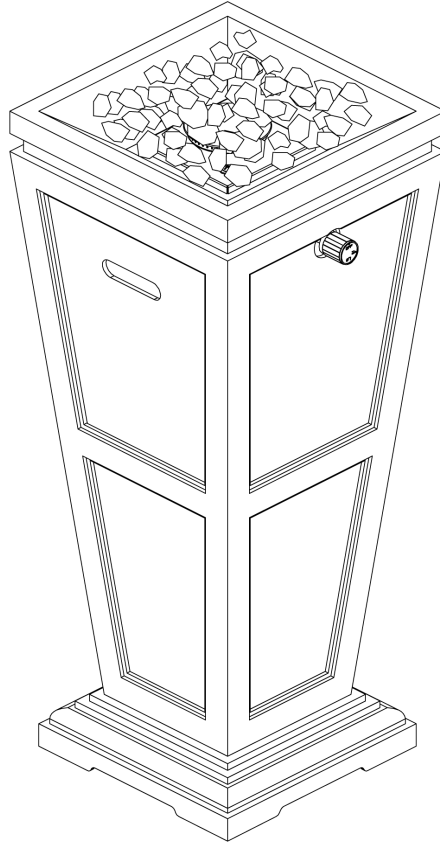

## LP Gas Outdoor Fireplace

Model No. GLT1332SP



**ALWAYS refer to owner's manual for all warnings, safety information, operating instructions, care instructions and troubleshooting.**

## **Cleaning and Care**

### **⚠ CAUTION:**

- 1. All cleaning and maintenance should be done when outdoor fireplace is cool and with the fuel supply disconnected.**
- 2. Do NOT clean any outdoor fireplace part in a self-cleaning oven. The extreme heat will damage the finish.**
- 3. Do NOT enlarge valve orifices or burner ports when cleaning the valves or burners.**

---

### **Notices**

- 1. This outdoor fireplace should be thoroughly cleaned and inspected on a regular basis.**
- 2. Abrasive cleaners will damage this product.**
- 3. Never use oven cleaner to clean any part of this outdoor fireplace.**

---

### **Before Each Use:**

1. Keep the outdoor fireplace area clear and free from any combustible materials, gasoline, and other flammable vapors and liquids.
2. Do NOT obstruct the flow of the combustion of LP gas and the ventilation of air.
3. Keep the ventilation opening(s) of the LP gas tank area free and clear from debris.
4. Visually check the burner flames to make sure your outdoor fireplace is working properly (Figure 8).
5. See sections below for proper cleaning instructions.
6. Check all gas connections for leaks.
7. Check components for any signs of damage or rust.
8. Check for obstructions of airflow to the burner. Spiders, insects and webs can clog the burner/venturi tube. A clogged burner/venturi tube can lead to a fire.
9. If damage to any component is detected, do NOT operate until repairs are completed.

---

### **Cleaning Surfaces**

1. Wipe surfaces clean with mild dishwashing detergent or baking soda mixed with water.
2. For stubborn stains, use a citrus-based cleaner and a nylon scrubbing brush.
3. Rinse clean with water.
4. Allow to air dry.

---

### **Before Storing**

1. Turn LP gas tank valve to "CLOSED."
2. Turn control knob to the "OFF" position.
3. Disconnect LP gas tank per "Disconnecting LP Gas Tank" section.
4. Clean all surfaces.
5. Lightly coat the burner with cooking oil to prevent excess rusting.
6. Cover this outdoor fireplace with a durable vinyl cover.
7. Store in a cool and dry location away from children and pets.
- 8.