

## Troubleshooting

Fault	Possible cause	Suggested remedy
Power indicator light is not on, refrigerator does not work.	No power input.	Check whether input power is matching or not; The ignition must be switched on in most vehicles to apply current to the cigarette lighter.
	Refrigerator fuse burnt.	Change fuse.
	Vehicle-mounted fuse burnt.	Refer to vehicle operating manual to change fuse.
	Cigarette lighter socket does not connect well.	Clean cigarette lighter socket or check whether plug connects correctly.
Digital display shows Err1 or Err2.	Temperature sensor broken	Repair it to appointed maintenance center.
Digital display shows Err1 or Err3	Input power is too low(Low voltage protection)	Check power supply and connecting wire; if power supply by battery, then need to change or charge battery.
The device does not cool (plug is inserted, "POWER" LED flashes orange, display is switched off).	Battery voltage is too low.	Test the battery and charge it as needed.
Temperature control.	Temperature transmitter broken.	Send to appointed maintenance center for repair.
	Emergency mode.	Slide the emergency switch to normal mode.
Error indicator light blinks.	Compressor operating trouble.	It will eliminate automatically after restarting compressor; if compressor can't restart for a long time, send to appointed maintenance center for repair.



If Error indicator light blinks, the compressor will restart every 60 seconds until it starts successfully.

Under Emergency Mode, If Error indicator light blink every 4 seconds, it means that input voltage is lower than lowest starting voltage, you need charge your battery.