



DIRECT WICKER

Care Instruction

Care and Cleaning

- ❖ Before using, wipe down with a clean, dry cloth.
- ❖ Do not use bleach or other solvents.
- ❖ When not in use, store furniture in a cool, dry place.
- ❖ If your set includes cushions or mesh fabrics, they may be cleaned by hand with a mild solution of soap and water. Rinse cushion cover thoroughly and allow dripping dry.
- ❖ Do not machine wash or tumble dry, as cushions may shrink.
- ❖ Do not use bleach or solvents on fabrics. When cleaning the table top, make sure to use a soft,
- ❖ clean cloth that does not bleed color as well.