


The product you just purchased could be FREE!

Register your product at www.lifetime.com and receive three important benefits:

- 1. You automatically will be entered to win \$200 in our monthly drawing!
- 2. In the unlikely event of a product recall or safety modification, we can notify you immediately and directly.
- 3. You may choose to receive Preferred Customer Announcements and promotions regarding new Lifetime products.

www.lifetime.com

Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

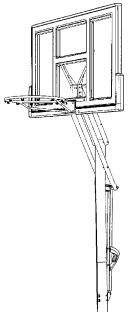

ACTION GRIP® BASKETBALL SYSTEM

MODEL #1084



To ensure your safety, do not attempt to assemble this system without reading and following <u>all</u> instructions carefully. Identify and inventory the parts using the Parts List. Failure to comply with any of the warnings in these instructions may result in serious personal injuries such as cuts, broken bones, nerve damage, paralysis, brain injury, or death. Failure to comply may also result in property damage. Please heed all warnings and cautions.

U.S. and Canada customers ONLY

IF ASSISTANCE IS NEEDED,

DO NOT CONTACT THE STORE!!!


CALL OUR CUSTOMER SERVICE DEPARTMENT at **1 (800) 225-3865**HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)
Call, or visit our Website for Saturday hours.

^{**}For customers outside the U.S. or Canada, please contact the store for assistance.**

POLE SECTION IDENTIFICATION

Identify the pole sections before beginning assembly. Failure to assemble the pole sections correctly may result in severe personal injury or property damage as described on Page Two.

ONCE THE POLE SECTIONS HAVE BEEN SEATED, THEY CANNOT BE SEPARATED.

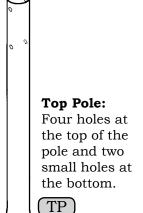



Middle Pole:

One slot at the top of the pole, four holes in the middle and two small holes at the bottom.
Warning Sticker.



Bottom Pole:

Two slots at the top of the pole and dimples at the bottom.





SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.


Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside all packing material for parts and/ or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

- If using a ladder during assembly, use extreme caution.
- Three capable adults are recommended for this operation.
- Assemble the pole sections properly. Failure to do so could cause the pole sections to separate during play.
- Before digging, contact utility company to locate underground power cables, gas, and water lines. Ensure that there are no overhead power lines within 20 ft. (7m) radius of pole location.
- Minimum operational height is 7'6" (2.23m) to the rim.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this system.


PARTS LIST						
ID	Part #	Description	Qty	\checkmark	HB	
TP	1018604	Top Pole	1			
MP	1018605	Middle Pole	1			
BP	1018866	Bottom Pole	1			
LB	1018717	Left Backboard Bracket	1			
RB	1018718	Right Backboard Bracket	1			
ΑZ	1009153	Backboard	1			
AA	500096	Pole Cap	1			
AB	502005	Net	1			
AD	504068	Counterbalance Spring	2			
AT	FS16500	Warning Sticker (Applied)	1			(HE)
ΑI	F028010	Height Sticker	1			
AJ	825608	Rim	1			
AK	1018869	Short Extension Arm	2	L L I		
AL	1018870	Long Extension Arm	2			
ΑE	700506	Wood Block	1	닏		
AF	AM01500	Rim Support Bracket	1	닏		
AN	A040031C	Inner Channel	1	닏		
AO	1018831	Outer Tube	1	닏		
AP	C050018	Channel Stop	1			
AQ	1028610	Pole Bracket	1			
AR	C050019	Handle	1			
AS	C050017	Trigger	1			
AT	1001588	Scorekeeper Kit	1			
		(HH01700C)	0			
HA	300022	1/4" Centerlock Nut	2	님		
HB	300029	1/2" x 7 1/8" Hex Bolt	5	님		
HC	300110	1/4" x 2 3/4" Hex Bolt	2	片		
HD	301008	1/2" Centerlock Nut	5 1	님		
HE	302005	3/8" x 7" Hex Bolt		Ы		
HF HI	302008 500013	3/8" Centerlock Nut	1 4			
нJ	500013	9/16" x .592" Poly Spacer 1/2" x 1/8" Spacer	4			
HK	500032	1/2" x 1" Poly Spacer	2	H		
HL	800324	1/2" x 2 5/16" Metal Space				
HM	BS00800	5/16" x 1" Screw	2	Ħ		
	Hardware (4	_		
		5/16" Hex T-Nut	2	П		
RK	300128	5/16" Jam Nut	2	ΠI		
RC	302014	5/16" Flat Washer	2			
RD	302056	Rubber Washer	2			
RE	302065	5/16" x 2 1/4" Tap Bolt	2			
RF	1009200	5" U-Bolt	1		[]	
RG	302090	5/16" Nylock Flange Nut	4		1	
RJ	1001137	Compression Spring	2			
RI	804033	Spring Retainer Plate	1		叁	

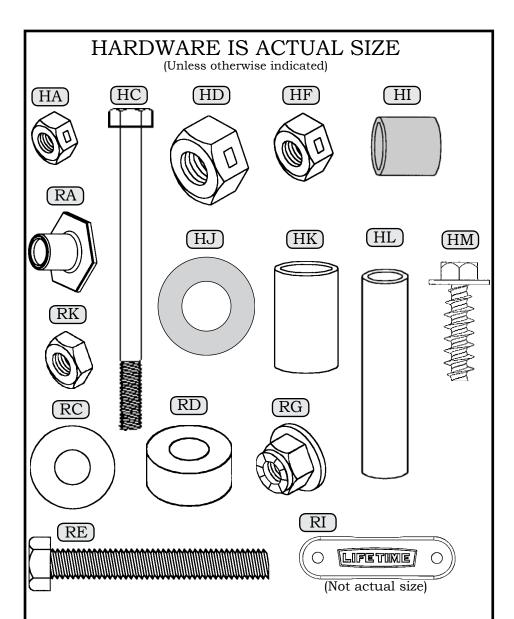






- A. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.
- B. Test fit all Bolts by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating buildup from inside the holes. Do not scrape away all of the powder coating. Bare metal may rust. You may need to pound some Bolts into place with a hammer or mallet.

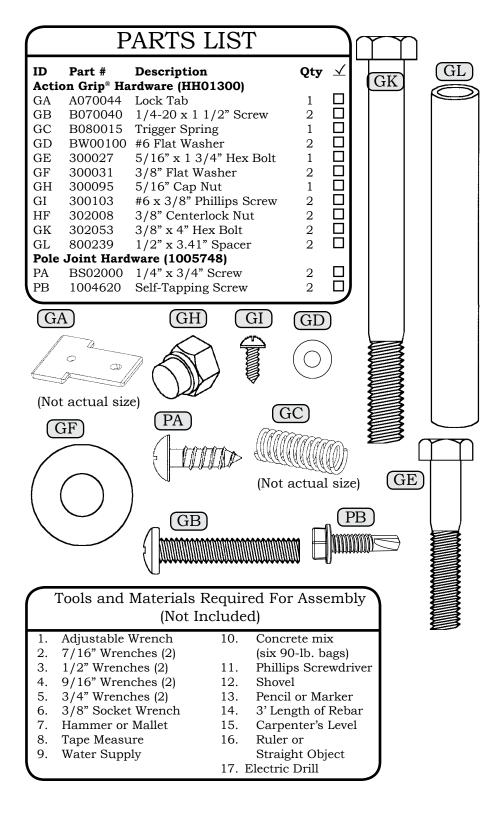


The Ground Sleeve provides an alternative to cementing the pole into the ground permanently. See Page 11 for more information.

Dig a round hole 24" deep and 18" in diameter. The edge of the hole should be flush with the edge of the playing surface.

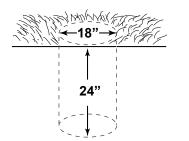


Measure 14.5" up from the dimpled end of the Bottom Pole (BP) and make a mark (do not scratch the powder coating).

 

Mix 5 1/2 bags of concrete.

 
Save a 1/2 bag of concrete to use later in the assembly.




Fill the hole with concrete.

Insert the Bottom Pole into the concrete up to the 14.5" mark and 4" away from the playing surface.

A thicker mix of concrete will dry stronger.

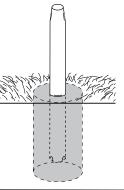


The slots in the Bottom Pole must be parallel to the playing surface. If necessary, insert a straight object (a ruler, wire, etc.) through the slots in the Bottom Pole. Rotate the pole until the straight object is parallel to the playing surface.

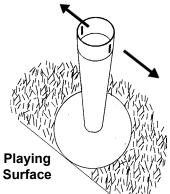



Form the cement so it slopes away from the pole to allow water runoff. Failure to do so may result in premature rusting of the pole.

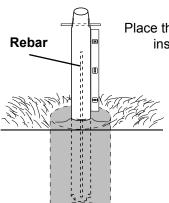

Place the 1/2" x 3' rebar (not included) inside the Bottom Pole (BP).

Check the pole several times within the first hour to make sure that all sides are vertical and that the pole does not sink into the concrete. The 14.5" mark must remain level with the playing surface.

Allow 1-4 hours for the concrete to set.

 


Do not continue until the concrete has set for 1 to 4 hours.



Remove the straight object from the top of the pole.

Mix the remaining 1/2 bag of concrete and pour the concrete into the Bottom Pole until it is just below the slots in the top of the pole. Tamp the concrete down with a broom handle to remove any air pockets.




Clean all excess concrete off the outside surface of the pole.

Allow the concrete to set for at least 72 hours (3 days) before continuing with the assembly.

STOP!


The concrete must cure for **at least 72 hours (3 days)** before installing the rest of the system. In humid climates or wet weather, allow additional time for the concrete to cure. Do not proceed until the curing process is complete.

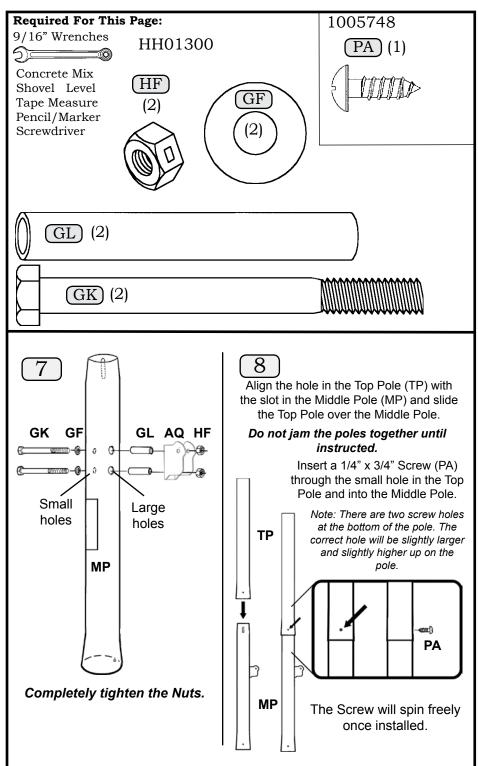

Required For This Page:

Electric Drill

 1005748



A This step cannot be reversed.

In order to seat the poles, strike each end of the pole very hard 5 to 6 times on a piece of scrap wood or cardboard. This must be done even if the poles cover the slots before seating.

 
If the Top Pole does not completely cover the slot on the Middle Pole after seating, DO NOT COMPLETE ASSEMBLY. Call our Customer Service Department.

Do not hit your feet with the pole sections, as serious injury could occur.



Measure from the top of the Top Pole to the bottom of the Middle Pole. It must measure 83 1/2" or less. Continue to Strike poles together until the measurement stops changing. If it is still too long, DO

NOT complete assembly. Call our Customer Service Department.





WARNING


The poles must be seated together!! Even if the poles cover the slots before seating, you must strike them on the wood five to six times!! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage as listed on Page Two.

 
MΡ

TP





Insert a self-tapping screws (PB) into the back of the pole at the

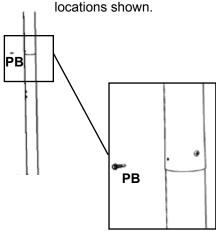




TIP: Chuck the Screw (PB) directly into an electric drill for easiest installation.

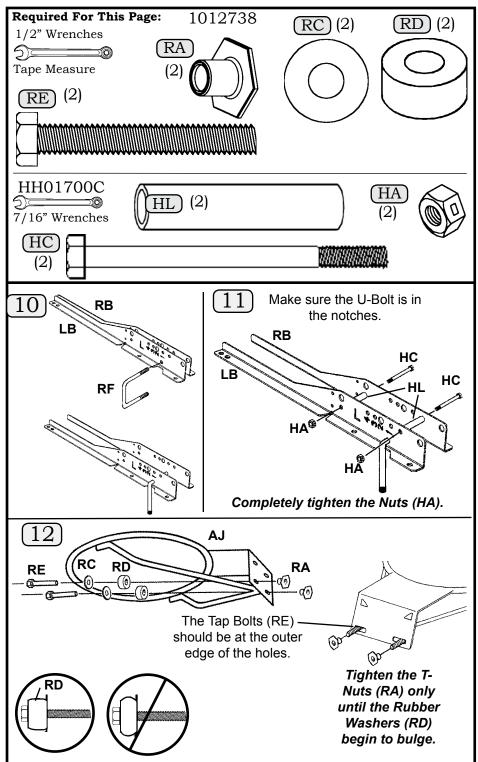

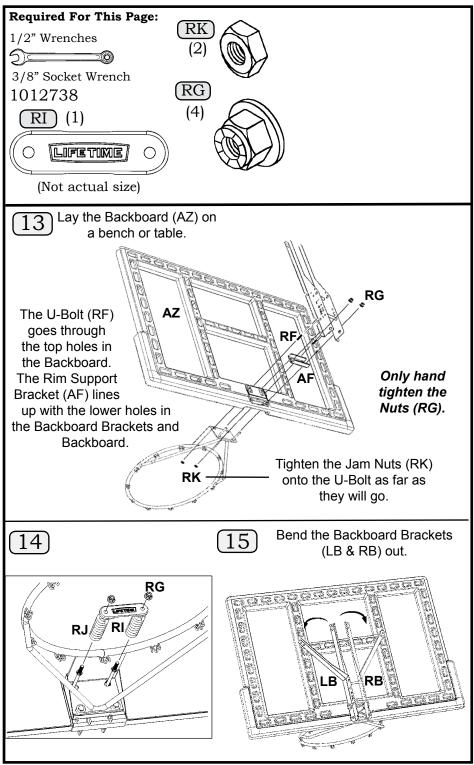

HH01700C


(HM) (2)

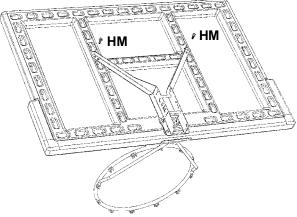



Use a 3/8" socket wrench to insert the Screws (HM) through the top holes in the Backboard Brackets and into the Backboard.


Do not overtighten the Screws. Only tighten them a half turn after the head of the Screw contacts the Brackets.


Completely tighten all Rim hardware.

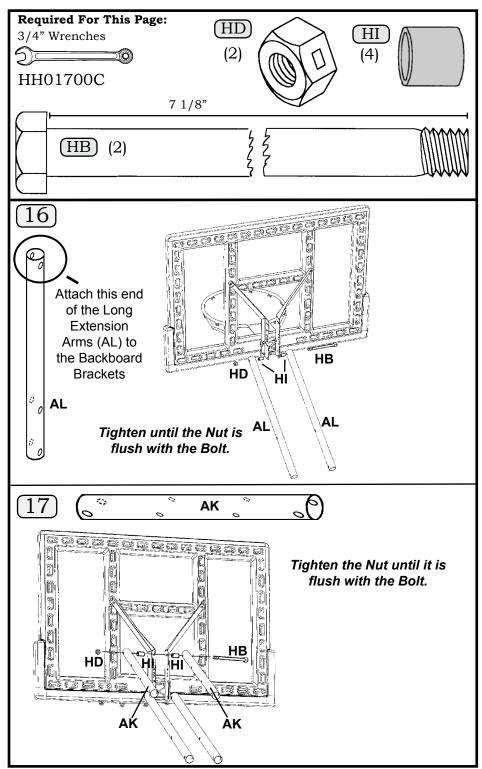


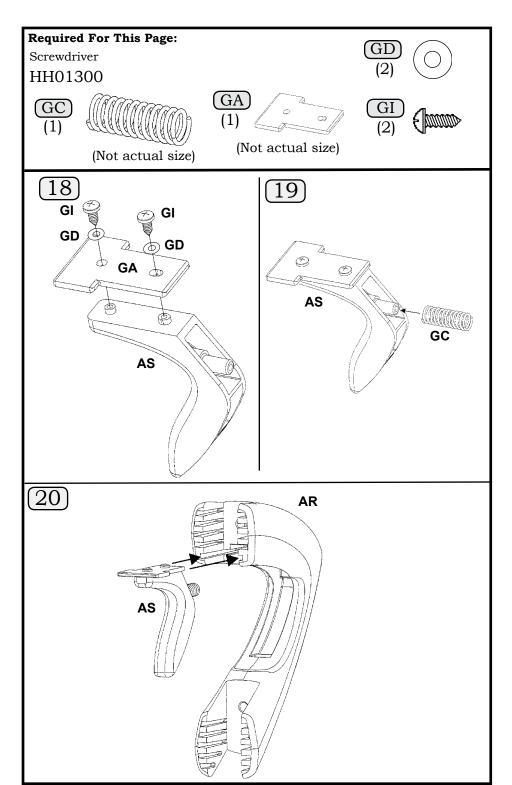

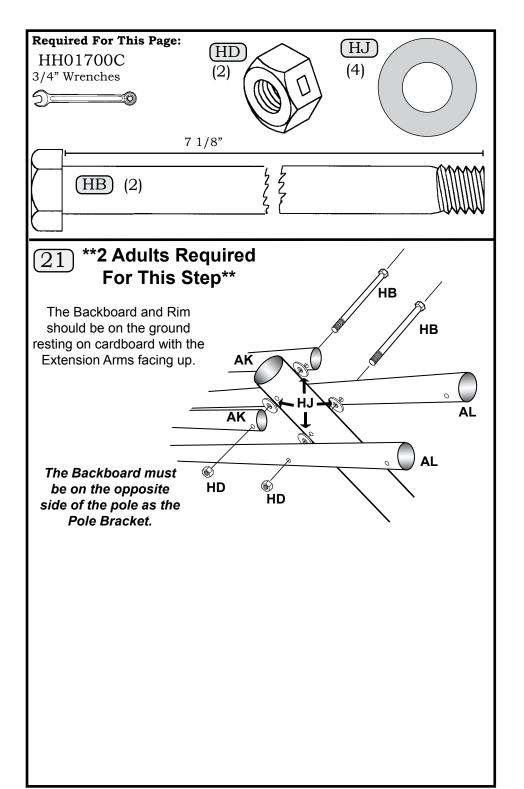

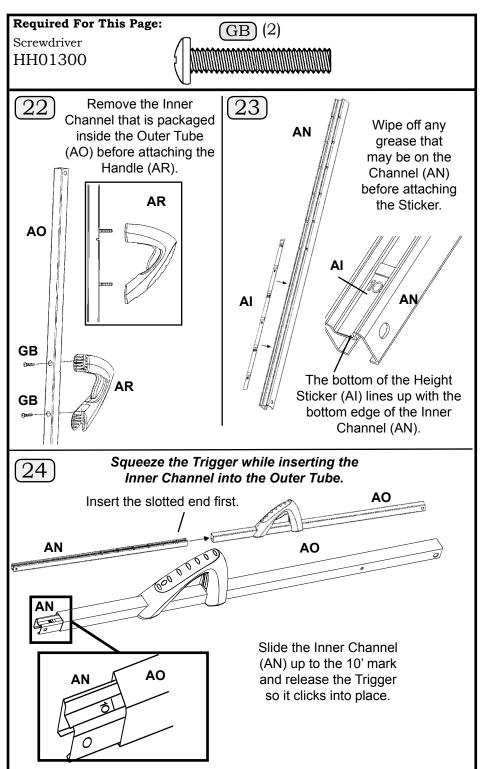

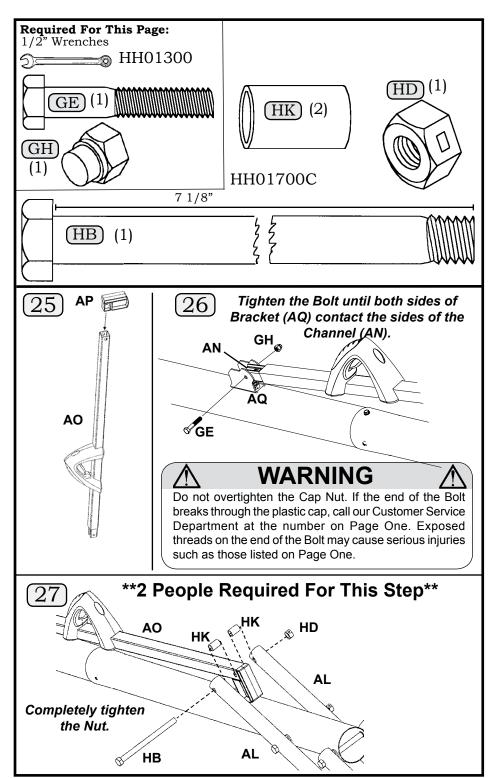

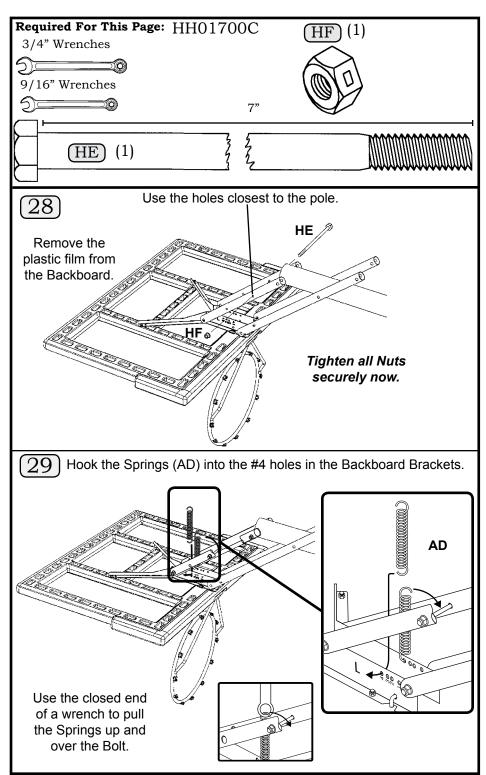


Required For This Page:

Screwdriver Hammer/Mallet 1005748



MΡ

30 Attach the Net (AB).

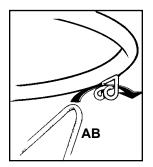


Please call our Customer Service Department at the number on Page One to obtain replacement Nets. Our Nets are shorter than average to reduce the risk of entanglement.

2 Adults Required For This Step

Make sure the Backboard faces the playing surface and align the small hole in the Middle Pole (MP) with the correct slot in the Bottom Pole (BP). Slide the Middle Pole over the Bottom Pole.

> Insert the remaining 1/4" x 3/4" Screw (PA) through the small hole in the Middle Pole and into the Bottom Pole.

The Screw will spin freely once installed.

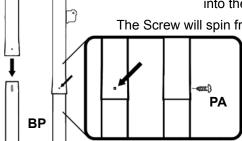

Place the Wood Block (AE) on the Top Pole and strike it firmly with a hammer or mallet six or seven times.

Insert the Pole Cap (AA) into the top of the pole.

If the Middle Pole does not completely cover the slot on the Bottom Pole after seating, DO NOT COMPLETE ASSEMBLY. Call our Customer Service Department.

To ensure that the concrete will fully set, do not play aggressively on your basketball system for a week.



WARNING



The poles must be seated together!! Even if the pole covers the slot before seating, you must strike it five to six times!! Failure to seat the poles correctly could allow the poles to separate during use, which could lead to serious personal injuries or property damage as listed on Page One.






 
Electric Drill 1005748



31B


Insert a self-tapping screws (PB) into the back of the pole at the locations shown.

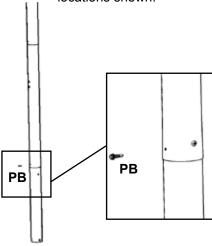



TIP: Chuck the Screw (PB) directly into an electric drill for easiest installation.

Open the Scorekeeper accessory kit. Use one self-tapping screw at the top and one at the bottom of the scorekeeper and attach to the back of the pole opposite from the warning sticker.

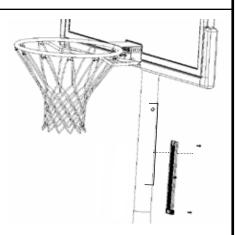

Operation of the height adjustment system

The adjustable system may be adjusted from 7 1/2 feet to 10 feet in 6-inch increments.

Hold the Handle tightly and squeeze the Trigger. Raise the Handle to lower the Backboard, or lower the Handle to raise the Backboard.

Accessories available for more basketball fun!

 
PRODUCT DESCRIPTION
Universal Ground Sleeve

MODEL # 0023

For price and freight information call our Customer Service Department.

Universal Ground Sleeve #0023

The Universal Ground Sleeve enables the pole to be cemented in, yet still removable. The sleeve sits flush with the ground after installation. Fits 3.5" diameter poles.



To place orders, use a Master Card or Visa and call our Customer Service Department:

LIFETIME PRODUCTS, INC.

P.O. BOX 160010

BLDG. D-11, FREEPORT CENTER

CLEARFIELD, UT 84016-0010

1-800-225-3865



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE.

Owners must ensure that all players know and follow these rules for safe operation of the system.

- •Only hang from the rim briefly to regain balance or avoid injuring others. Release the rim as soon as safely possible.
- During play, especially when performing dunk type activities, keep player's face away from the backboard, rim, and net.
 Serious injury could occur if teeth/face come in contact with the backboard, rim, or net. Player should wear a mouth quard during play.
- Do not slide, climb, or play on pole.
- When adjusting height or moving system, keep hands and fingers away from moving parts.
- Do not allow children to move or adjust system.
- •Do not wear jewelry (rings, watches, necklaces, etc.) during play. Objects may entangle in net.

- •Keep organic material away from pole base. Grass, litter, etc. could cause corrosion and/or deterioration.
- Once a month check pole and all metal parts for signs of corrosion (rust, pitting, chipping). Completely remove rust and repaint with exterior enamel. If rust has penetrated any steel part, replace that part immediately.
- Check system before each use for loose hardware, excessive wear, instability, and signs of corrosion and repair before use.
- · ever play on damaged equipment.
- Do not use the system to lift or hoist anything. The mechanism is designed to lift only the weight of the backboard and rim. Do not hang anything from the handle, rim backboard, or lifter arms as this will damage the system and void the warranty.



ADVERTENCIA



AVERTISSEMENT



SI NO SE OBEDECEN ESTAS ADVERTENCIAS PUEDEN PRODUCIRSE GRAVES LESIONES Y/O DAÑOS A LA PROPIEDAD.

El propietario del sistema debe asegurarse de que todos los jugadores conozcan y respeten estas reglas para que el sistema se use en forma segura.

- Cuélguese del aro sólo en forma breve, para recuperar el equilibrio o evitar lesionar a otros jugadores. Suéltese del
- aro lo más pronto que pueda hacerlo con seguridad.

 Durante el juego, especialmente al embocar violentamente de alto, la cara de los jugadores debe mantenerse alejada del tablero, el aro y la red. Pueden producirse lesiones graves si los dientes o la cara entran en contacto con el tablero, el aro o la red. Los jugadores deben usar un protector bucal durante el juego.
- No se deslice, no trepe ni juegue sobre el poste.
- Mantenga las manos y los dedos alejados de las piezas movibles cuando regule la altura del sistema.
- No deje que los niños regulen el sistema.
- No use joyas (anillos, relojes, collares o gargantillas, etc.) durante el juego. Estos objetos pueden engancharse en la red
- No permita que la base del poste entre en contacto con materiales orgánicos. El pasto, los desechos animales, etc., pueden causar corrosión y/o deterioros.
- Controle el poste y todas las piezas metálicas una vez al mes en busca de signos visibles de corrosión (oxidación, picaduras, escamado). Elimine todo rastro de óxido y vuelva a pintar con esmalte para exteriores. Si el óxido ha penetrado cualquier pieza de acero, reemplace esa pieza de inmediato.
- Inspeccione el sistema antes de cada uso para verificar que los elementos de fijación no estén flojos, que no haya desgaste excesivo, inestabilidad ni signos de corrosión.
 Si encuentra irregularidades, repárelas antes de usar el sistema.
- · Nunca juegue con un equipo dañado.
- No use el sistema para levantar ningún objeto. El mecanismo está diseñado para elevar solamente el peso del tablero con el aro. No cuelgue nada de la agarradera, el aro, el tablero ni los brazos de elevación, ya que esto puede dañar el sistema y anular la garantía.

#FS16500 10/12/2004

FAUTE DE NE PAS SUIVRE CES AVERTISSEMENTS, VOUS RISQUEZ DE CAUSER DES BLESSURES GRAVES ET/OU DES DOMMAGES À L'ÉQUIPEMENT.

Le propriétaire doit s'assurer que tous les joueurs connaissent et appliquent les règles suivantes afin d'utiliser l'équipement en toute sécurité.

- •Ne vous suspendez pas à l'anneau plus que nécessaire pour retrouver votre équilibre ou éviter de blesser les autres joueurs. Relâchez l'anneau aussitôt que possible.
- Lors d'un match, particulièrement dans le cas des smashs, le visage du joueur ne doit pas faire face au panneau, à l'anneau, ni au filet. Le joueur risque de graves blessures si ses dents ou son visage entrent en contact avec le panneau, l'anneau, ou le filet. Les joueurs doivent toujours porter un protège-dents lorsqu'ils jouent.
- Ne glissez pas, ne grimpez pas, et ne jouez pas sur la base ou le poteau.
- Lorsque vous ajustez la hauteur ou l'équipement, gardez vos mains et doigts loin des pièces mobiles.
- · N'autorisez pas les enfants à ajuster l'équipement.
- Ne portez pas de bijoux (bagues, montres, colliers, etc.) lorsque vous jouez. Ces objets pourraient s'accrocher au filet
- Gardez la base du poteau libre de toute matière organique.
 L'herbe, les déchets, etc. peuvent la corroder et la détériorer.
- Une fois par mois, vérifiez que le poteau et toutes les pièces en métal ne montrent pas de signes de corrosion (rouille, piqûres, écaillage). Enlevez toute la rouille et repeignez complètement avec une peinture pour extérieur. Si la rouille a pénétré une des pièces en acier, vous devrez remplacer immédiatement la pièce en question.
- A chaque fois que vous allez utiliser l'équipement, vérifiez d'abord l'équilibre, la possibilité de pièces desserrées ou usées, la stabilité de l'équipement et tout signe de corrosion ou réparation nécessaire avant utilisation.
- · Ne jouez jamais avec un équipement endommagé.
- N'utilisez pas l'équipement pour lever ou soulever quoique ce soit. Son mécanisme a été conçu uniquement pour soutenir le poids du panneau et de l'anneau. N'accrochez rien au manche, à l'anneau, au panneau ni aux leviers sous peine d'endommager l'équipement et d'annuler la garantie.

www.lifetime.com

LIFETIME BASKETBALL EQUIPMENT

5-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

- 1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of five years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
- 2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective basketball equipment. If the equipment is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the basketball system or its components are not covered under this warranty.
- 3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the net or rim will void this warranty.
- 4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
- 5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
- 6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT.

REPORT PRODUCT DEFECTS IN WRITING TO: Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or

call (800) 225-3865 M-F 7 a.m. to 5 p.m. MST.

Please include your dated sales receipt and photographs of damaged parts.

To register the product, visit our website at www.lifetime.com



www.lifetime.com

©2003 Lifetime Products, Inc.

PO Box 160010 • Freeport Center, Bldg. D-11 Clearfield, Utah 84016-0010 T: 800-225-3865 • F: 801-728-1907