


Item # 1002 555 521 1002 555 515 Model # FWA60563AVW FWA60563ASW

USE AND CARE GUIDE

CAMDEN SIDE TABLE

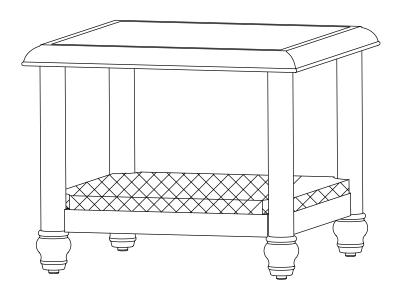

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service. 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2
Important Safety Instructions	2
Save These Instructions	2
Read All Instructions Before Use	2
Warranty	3
What is Covered	3
What is Not Covered	3

Pre-Assembly	3
Planning Assembly	
Hardware Included	
Package Contents	4
Assembly	5
Care and Cleaning	

Important Safety Instructions

SAVE THESE INSTRUCTIONS

WARNING: This side table was as made for the explicit purpose of providing outdoor functions and is not to be used as a toy.
This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this set when any formidable / severe weather is approaching.

WARNING: Do not locate this product near open flames. Do not use this product as a support. Do not shake, lean or climb on the product. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this product is used by or near children, or disabled persons, if applicable.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Please keep children out of the assembly area before assembly.

WARNING: Do not place heavy objects on the table.



WARNING: When not in use, secure the product in a cool and covered location.



WARNING: This table unit is heavy, and may require two adults for safe assembly.

CAUTION: Do not locate the product near any heat source.

Warranty

5 YEAR FRAME WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-800-986-3460 or visit www.homedepot.com/homedecorators.



PLANNING ASSEMBLY


Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED

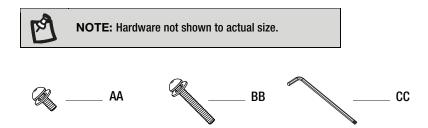

Part	Description	Quantity
AA	M6x15 combination bolt	8+1
BB	M6x40 combination bolt	4+1
CC	Hex wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS

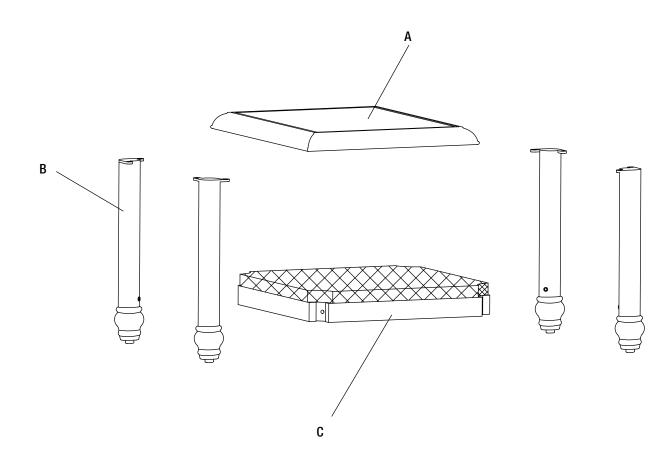


Part	Description	Quantity
Α	Table top	1
В	Table leg	4
С	Leg connector	1

Assembly

ATTACHING THE TABLE LEGS TO THE TABLE TOP


- □ Place the table top (A) upside down on a soft surface.
- □ Attach the four table legs (B) to the table top (A) using M6x15 combination bolts (AA).
- Do not fully tighten all the bolts at this step.

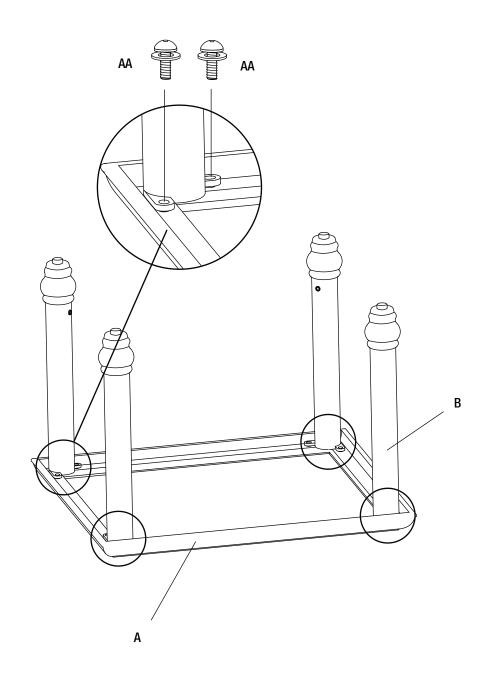

Assembly (continued)

$\mathbf{2}$ attaching the leg connector to the table legs


- Attach the leg connector (C) to the table legs (B) using M6x40 combination bolts (BB).
- Once all of the bolts are in place, fully tighten the bolts using hex wrench (CC).

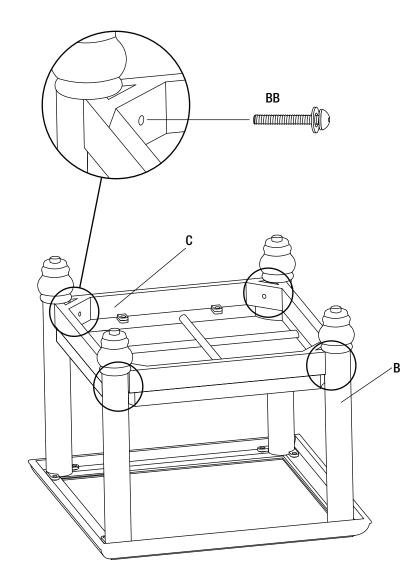

Assembly (continued)

3 CHECKING THE TABLE

- □ Turn the table right side up.
- □ Ensure all connections are secure before use.

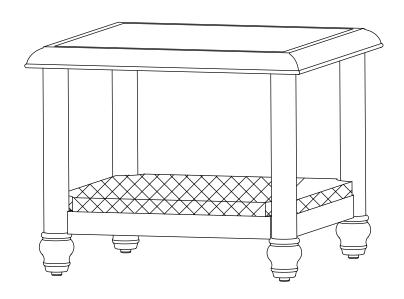

Care and Cleaning

- □ For best results, clean the table with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- □ Store the table in a dry, sheltered place when not in use.
- □ Keep the table away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service. 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.

For certification use only

Factory table ID # FWA60563A