 



 
 

# Assembly Instructions

**Caution : You must read this before you proceed**

 


## DINING CHAIR

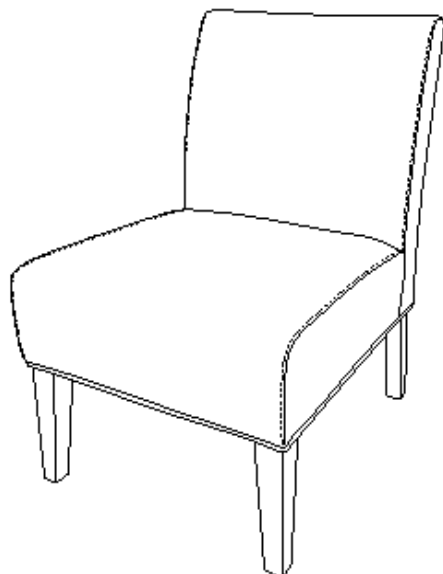



### Parts List

Label	Picture	Description	QTY
A		Chair Back	1
B		Chair Seat	1
C		Right Front Leg	1
D		Left Front Leg	1


### Hardware

 Label	Picture	Description	QTY
①		Bolt (M8*80)	5
②		Bolt (M8*65)	5
③		Washer	9

④		Spring Washer	9
⑤		Allen Key	1

## Assembly Preparation

Before Beginning Assembly:

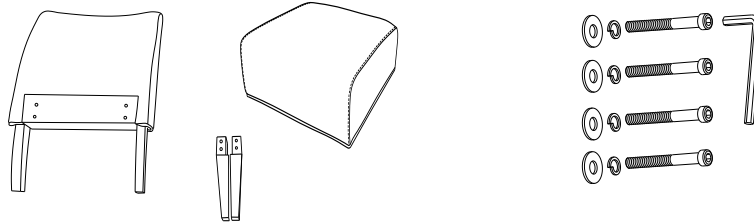

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-



## Assembly Steps
 
### Overview

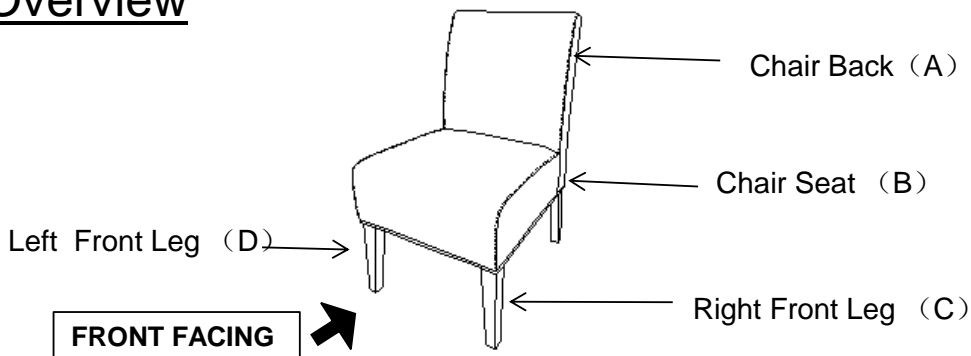

This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



### Step 1.1

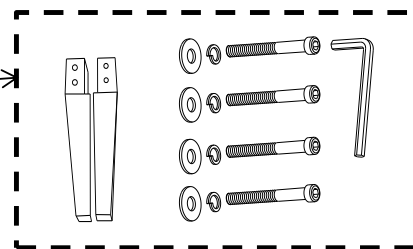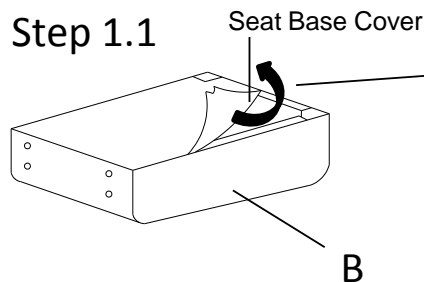  

Place the Chair Seat(B) Face down on a soft surface to avoid any scratches or damages to the product.  
Carefully peel away the Seat Base Cover from the edge, take out the legs and hardwares from the Bottom of the Chair Seat (B).

## Step 1
  
### Step 1.2

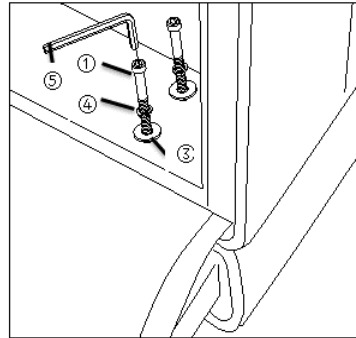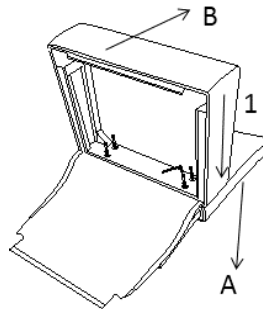

Put the Chair Back(A) onto a flat, clean, non-marring table.  
Align the mounting positions of the Chair Back(A) and Chair Seat (B).


Use your left hand to push the seat floorwards, depicted by Arrow 1.

This action helps to ensure the Chair Seat(B) is pressed towards to the Chair Back(A) with no gap between them.

Using Bolts(①), Spring Washers(④) and Washers(③) with Allen Key(⑤) as shown above.

**Do not fully tighten Bolts.**
 
## Step 2

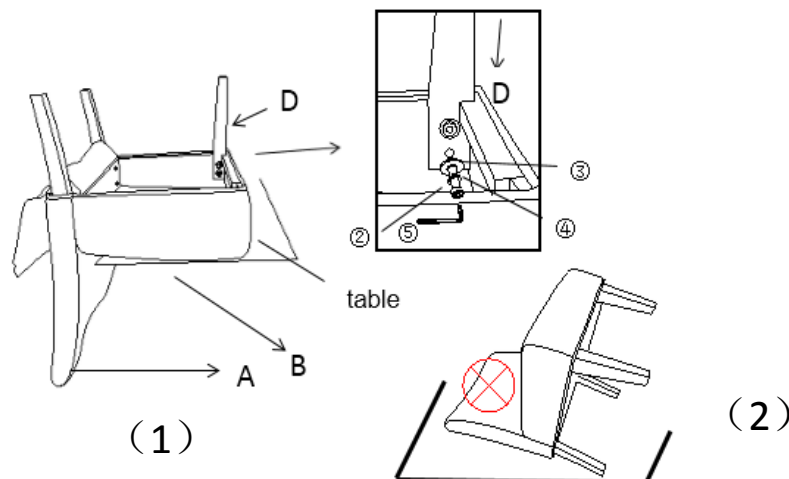

Place the chair onto the side of a table as seen in picture 1.

Position Left Front Leg(D) into Chair Seat(B) and attach using Bolts(②), Spring Washers(④) and Washers(③) with Allen Key(⑤).


Repeat same step to attach Right Front Leg (C) to Chair Seat(B).

Do not fully tighten Bolts.

**WARNING!! DO NOT POSITION THE FRONT LEG AS SHOWN IN PICTURE 2.**


**THIS PICTURE SHOWS THE CHAIR BACK STAYS AGAINST THE GROUND and THE FRONT LEGS HORIZONTAL IN MIDAIR.  
 WARNING!! DO NOT OVER TIGHTEN. OVER TIGHTENING COULD LEAD TO DAMAGE OF THE PRODUCT.  
 TIGHTEN ONLY UNTIL SECURE AND STABLE.**

  **Step 3**

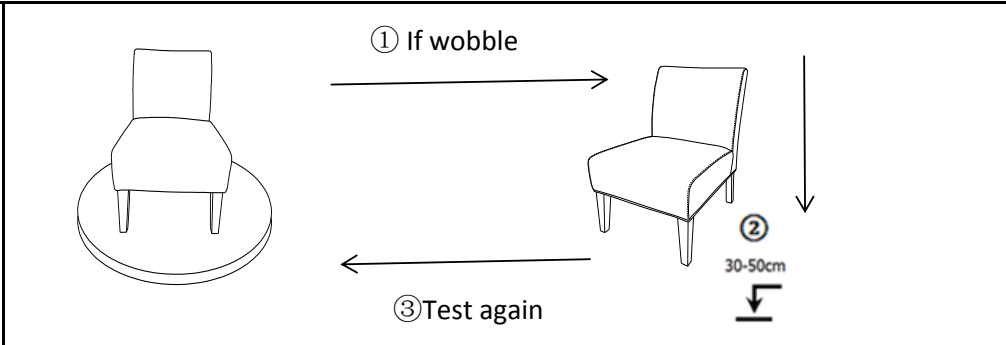





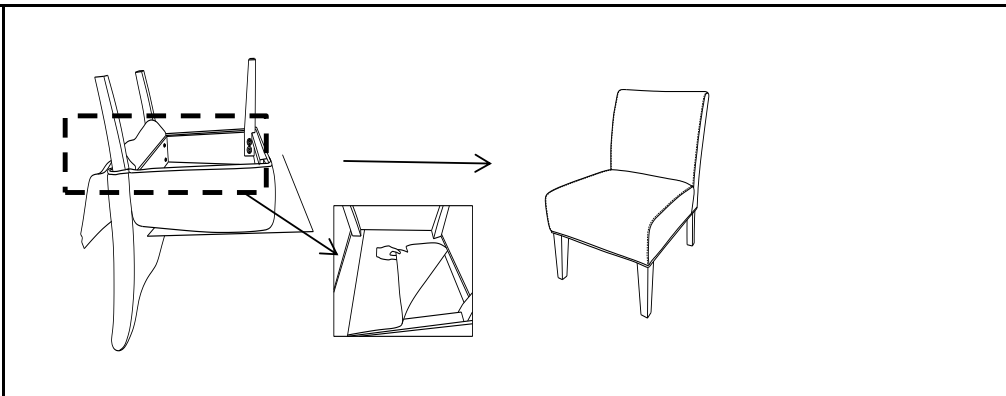













Place the Dining Chair on a Level Surface to see if it wobbles.  
 If it wobbles, lift the dining chair some 30cm to 50cm high from the ground.  
 Keep your feet and toes well away from the drop zone.  
 Drop the Chair freely and vertically with all four legs, hitting the ground, at the same time.  
 This Drop Test will help to ensure that all Bolts, and gaps reach full alignment status.  
 Test again for evenness on a Level Surface.  
 If no wobbles are found, proceed to tighten all the Bolts.  
 Note: When tightening the Bolts, tighten sequentially. Do not tighten any Bolt or fully and then move towards the next one. This could cause the frame to warp.  
 If there are still wobbles, loosen the Bolts and execute this same drop test.  
 Note: If the dining chair is not stable, it could lead to damage to the product.

**Step 4**



Place the Seat Base Cover back as shown in picture.  
 Smooth the Magic Tape down with your hand on all four sides at the edge of the seat.  
 Make sure all parts are connected and securely locked into position.  
 Then stang the Dining Chair up.  
 Your Dining Chair is ready for use.  
 This Dining Chair can only be used on a flat, level surface.

## Care & Maintenance

-   • Do not put hot items directly on furniture surface
-   • Do not clean furniture with harsh cleansers or polish.
-   • Do not place furniture under direct sunlight.
-   • Do not place furniture near heating or cooling vents.
-   • Do not write on furniture without a padded barrier to protect the surface.
-   • Do not place furniture outside . For indoor use only .
-   • Not for commercial use. For residential use only .
-   • Stains may be removed with mild soap solution and damp cloth.
-   • Children should not climb or jump on the furniture.

-   • Dust and pick-up spills using a clean, non-colored, lint-free cloth .

### What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

### Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

### Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

### Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

