

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light.	1. Bulb is burned out.	1. Replace light bulb.
	2. Power is off.	2. Make sure power supply is on.
	3. Faulty wire connection.	3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY


The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.**



INSTRUCTION MANUAL

Interior Decorative Lighting 2 Light Semi-Flush Mount Sadie

Home Depot SKU (530-077) UPC (773546217156)
Satin Nickel Finish

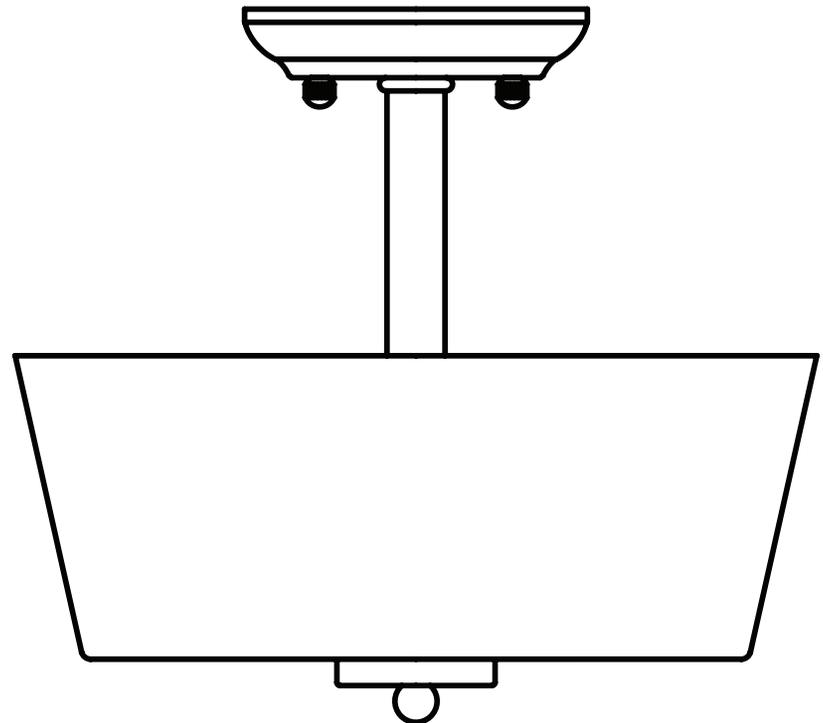

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

The simplistic elegance of this design is enhanced by an elongated shades and downward rods, which completes the effect. A classic and timeless design compliments most any décor.

A white opal glass creates a brilliant balanced ambient glow.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU# (530-077)** or **UPC# (773546217156)**.

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.
3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU# (530-077)** or **UPC# (773546217156)**.
4. Keep your receipt and these Instructions for Proof of Purchase.

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):



Safety goggles



 
Wire Strippers



Wire Cutters



Flathead Screwdriver



Phillips Screwdriver



Electrical Tape



A19 Bulb 60W (x2)
(not included)



Ladder

ADDITIONAL PARTS (included) (parts are not to scale):



 
3. Mounting Plate




11. Finishing Nut



16. Center Threaded Nipple



 17. Metal Support



18. Glass Shade



 
19. Silicon Washer



20. Metal Washer



21. Lower Lock Nut



22. Decorative Metal Base




23. Bottom Finial

ASSEMBLY INSTRUCTIONS:


1. Carefully unpack the fixture; lay out all parts on clean surface.
2. Tightening center threaded nipple (16) to the nipple extension (12) (part of the fixture main body).
3. Place metal suppose (17) onto center threaded nipple (16).
4. Insert glass shade (18) over center nipple (16), secure by placing one scilicon washer (19) and metal washer (20) over center threaded nipple (16). Tighten by using lower lock nut (21).
5. Mount decorative metal base (22) onto glass assembly then tighten bottom finial (23) onto center threaded nipple (16).
6. Install 60W max. A19 bulbs (not included).

ASSEMBLY:

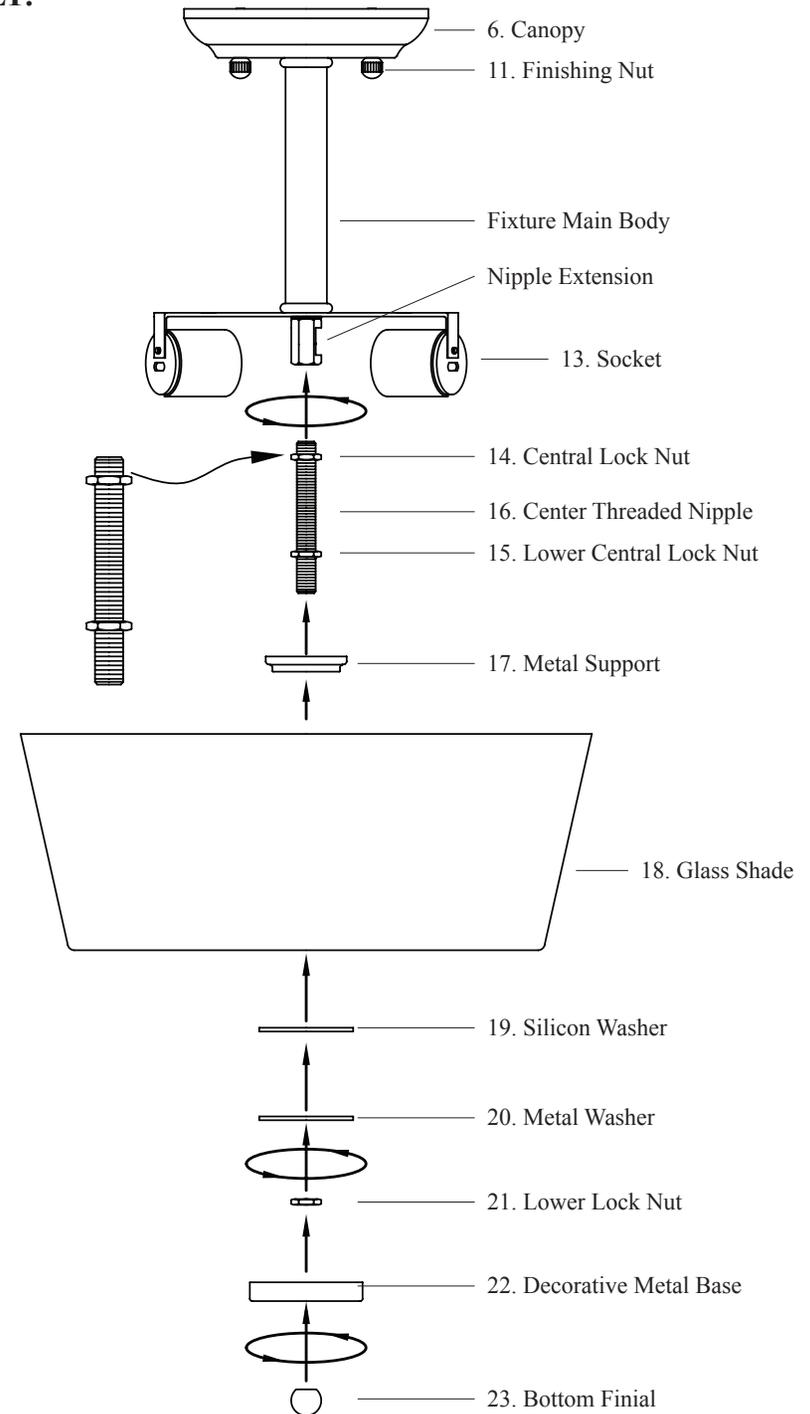

PARTS INCLUDED FOR INSTALLATION

(parts are not to scale):

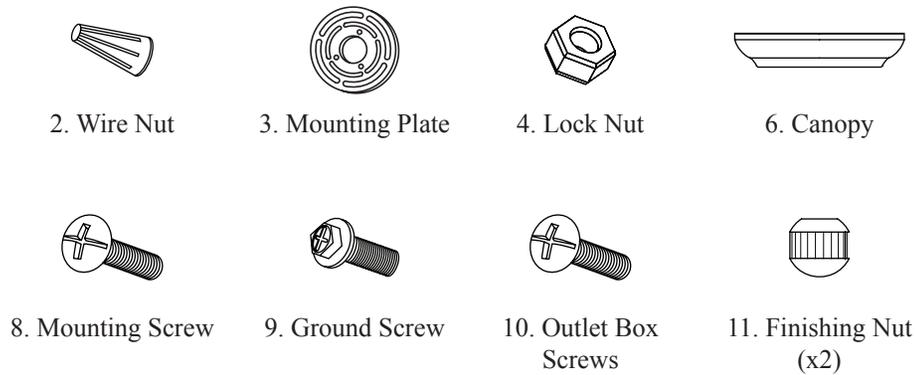

INSTALLATION INSTRUCTIONS:

1. Turn off power at main fuse box.
2. Mount mounting plate to junction box (1) with outlet box screws (10). Make sure black and white wires of junction box (1) run through the middle opening of the mounting plate.
3. Fasten open end of ground wire (bare copper or green wire), to ground wire or ground screw (9) of junction box (1) or ground screw (9) on cross bar (3). (Refer to Figure #1).
4. Connect black wire of power supply to black wire of the fixture and connect the white wire of the power supply to the white wire of the fixture. (Refer to Figure #1).

NOTE: Always use wire connectors (2) or marettes (included) to connect wires and push all excess wire and connections back into junction box (1).

5. Mount canopy (6) over cross bar (3) and tighten with 2 finishing nuts (11).

INSTALLATION:

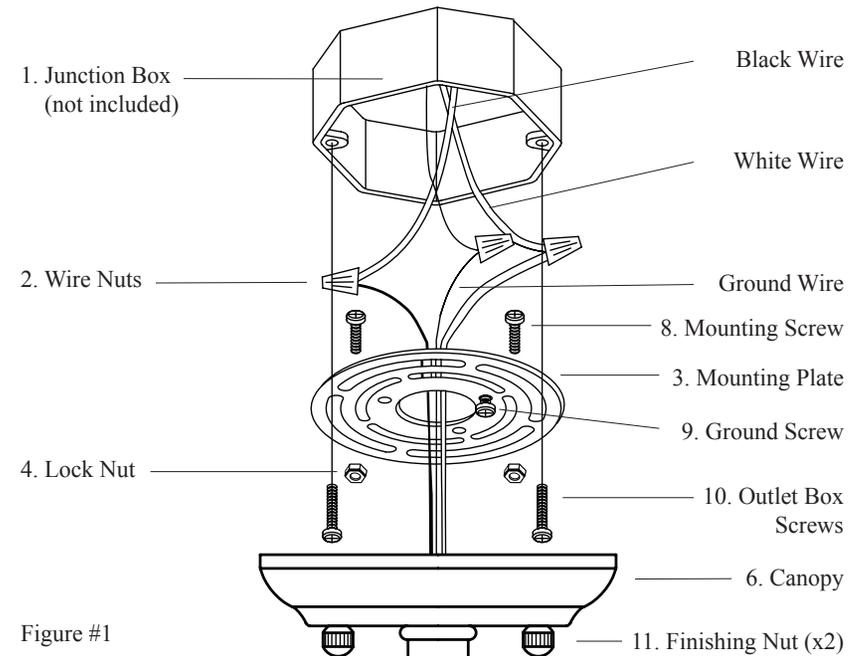


Figure #1

