



## WARNING

This product was created to kill mice by electrocution. It emits a high voltage electric shock. DO NOT allow children to play with or be anywhere near this device. Any small animals entering this device when the power is on, may be killed. People with heart conditions should take special care when handling this device. Do not use near flammable liquids, vapors or other combustibles because of potential danger of fire or explosion. Turn off power when handling. Keep hands and all objects out of the chamber unless the device is turned off and batteries are removed.

### 1 Year Limited Warranty

Elexa Consumer Products, Inc. ("ECP") warrants to the original retail purchaser ("Purchaser") that the DOME Siren (the "Product") will be free of defects in materials or workmanship under use for one (1) year from the date of purchase (the "Warranty period").

For the Purchaser only, if the Product fails to perform as specified during the Warranty Period due to defective parts or faulty workmanship, ECP will repair or replace the defective or damaged parts of the Product. Normal wear and tear is not covered nor is abnormal use, misuse, mishandling, faulty installation, improper shipping, damage caused by disasters such as fire, flood or earthquake, neglect, accident or tampering. This warranty covers only normal use in the United States or Canada.

To obtain warranty service during the Warranty Period, call Dome Customer Service (1-855-249-1754) or email: support@domeHA.com for instructions on sending damaged parts and documentation for a Return Material Authorization (RMA). Products returned to ECP for repair or replacement without authorization will be returned at the sender's expense. All warranty claims must be accompanied by a legible copy of the original receipt showing date and details of purchase. The RMA number must be clearly written on the side of the shipping container in which you return the Product or defective parts. Unless otherwise instructed by ECP, the Product must be sent freight pre-paid to the following address:

Elexa Consumer Products, c/o Promac,  
1153 Timber Dr., Elgin, IL 60123

ECP will repair or replace the defective parts and return them at ECP's cost by a shipping method selected by ECP. When contacting ECP to obtain an RMA, Purchaser may request expedited return shipping at Purchaser's expense.

THIS WARRANTY IS NOT TRANSFERABLE, AND, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ALL OTHER WARRANTIES, REPRESENTATIONS AND CONDITIONS, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON OR REPRESENTATIVE IS AUTHORIZED TO MAKE ANY OTHER WARRANTY ON BEHALF OF ECP OR ASSUME FOR ECP ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. IN NO EVENT WILL ECP BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, INCLUDING DAMAGES DUE TO ECP'S NEGLIGENCE.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

### CORRECT DISPOSAL OF BATTERIES IN THIS PRODUCT

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other wastes for disposal.

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

FC #VIIDMMZ1

©2016 Elexa Consumer Products, Inc.  
2275 Half Day Rd., Suite 333  
Bannockburn, IL 60015

www.domeHA.com



# DOME



## Mouser

Thank you for purchasing the DOME Mouser, which can humanely exterminate rats, mice, and other small rodents with a powerful electric shock. When used with Z-Wave Certified Controller, Mouser will send you a notification when it needs to be emptied.

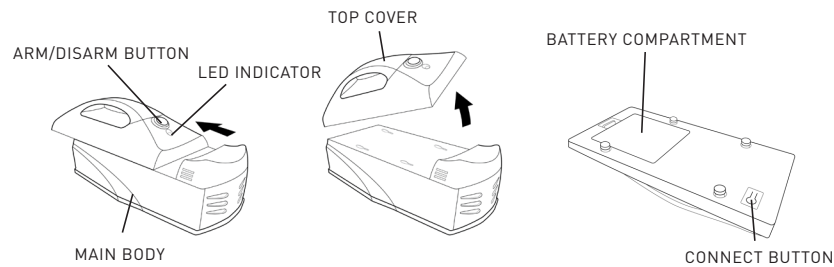


Figure 1 - Parts of the Mouser

### Including/Connecting into the Z-Wave Network:

Follow the instructions for your Z-Wave certified Controller to enter inclusion mode.

When prompted by the Controller:

1. For proper inclusion, bring the Mouser to within 10 feet of your Controller. After inclusion, the device can be moved to any desired location.
2. Remove the top cover of the Mouser by sliding it back and lifting up (Figure 1.)
3. Install the 4x Batteries.
4. Press the CONNECT BUTTON quickly 3 times in a row.

The LED INDICATOR will flash five times indicating inclusion.

### Excluding/Disconnecting from the Z-Wave Network:

Follow the instructions for your Z-Wave certified Controller to enter exclusion mode. When prompted by the Controller:

1. Remove the Cover of the Mouser.
2. Press the CONNECT BUTTON quickly 3 times in a row.

The LED INDICATOR will flash five times indicating exclusion/disconnection.

### Resetting the Mouser to Factory Default Settings:


To disconnect from the Z-Wave Network and restore factory default settings:

1. Open the Cover and make sure the Mouser is powered.
2. Hold the CONNECT BUTTON for 10 seconds until the LED INDICATOR blinks once, then release the button.

**Only do this if the controller is disconnected or otherwise unreachable!**

### Baiting the Trap:

1. Lift the Bait Compartment from the Mouser.
2. Add bait - dry foods leave less mess.
3. Replace Bait Compartment.

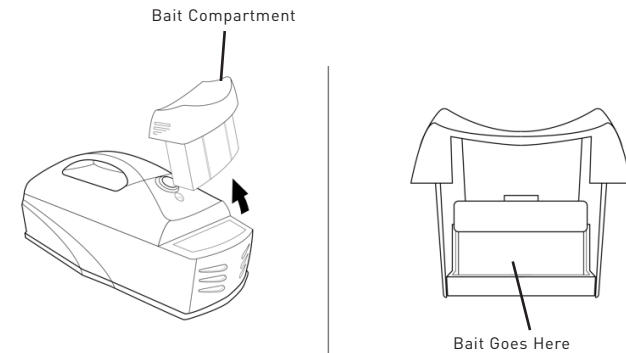

### Setting the Trap:

1. Bait the Mouser.
2. Place the Mouser in the desired location - rodents usually scurry around walls and other corners.
3. Flip On/Off Button to the On position - the LED will stay lit for two seconds indicating the Mouser is armed. A flashing LED indicates low battery.
4. When the Mouser is tripped, the LED will blink every five seconds, and an alert will be sent to your Z-Wave Controller.
5. Flip the On/Off Button to the Off position to empty the Mouser, and it is ready to use again immediately.