


# PARTS DIAGRAM

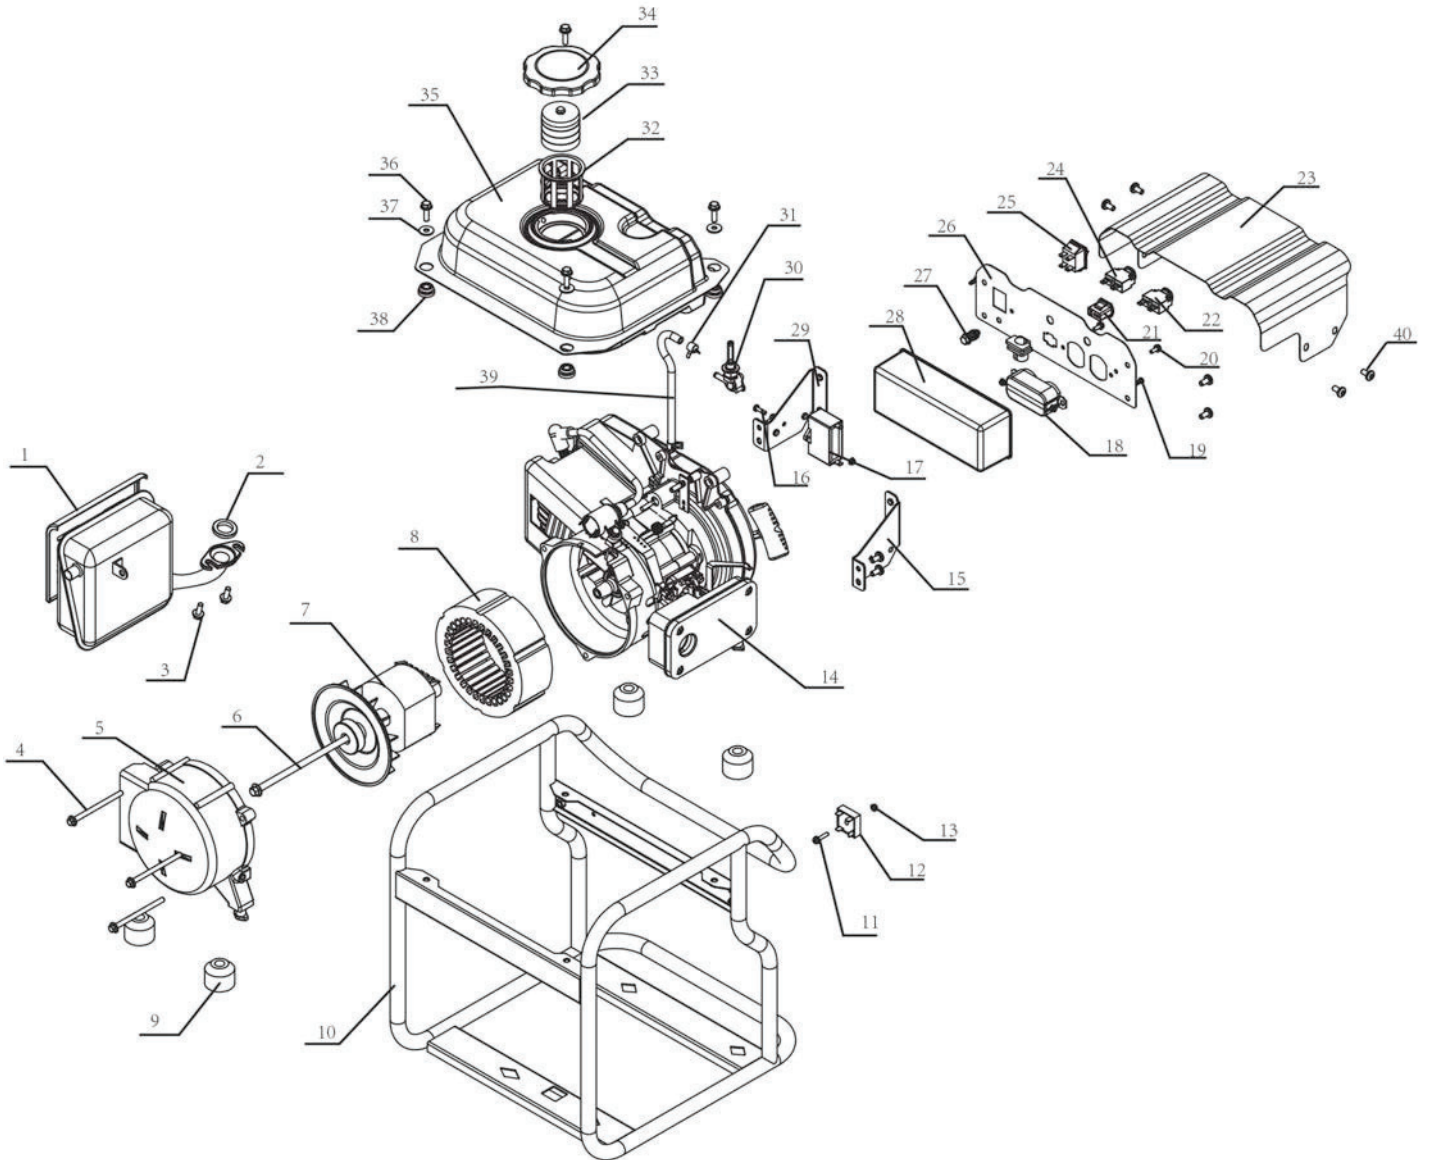


## PARTS LIST

No	Part number	Description	Qty
1	ST950A01-01-EPA	muffler	1
2	ST950A01-02	washer	1
3	GB16674 M6×18	hex head bolt,M6×18	2
4	GB16674 M6×85	hex head bolt,M6×85	3
5	ST950A02-03-GEN1500SS	alternator end cover	1
6	GB16674 M8×160	hex head bolt,M8×160	1
7	CT150-106P/850W-1	stator	1
8	CT150-106P/850W-2	rotator	1
9	ST950A02-04	rubber foot	4
10	GEN1500SS03-01	frame	1
11	GB9074.4 M4×20	Phillips screw set,M4×20	1
12	KBPC3510	rectifier	1
13	GB6177.1 M4	nut,M4	1
14	1E47F-EPA00	engine	1
15	GEN2000DF-SS03-08L	left bracket	1
16	GB823 M4×15	Phillips screw ,M4×15	1
17	CAPA-12uF	capacitor	1
18	B-016	AC socket	1
19	GB13806.2 ST3.9×12	tapping Phillips screw	2
20	GB9074.4 M4*12	Phillips screw set,M4×12	2

No	Part number	Description	Qty
21	YG T12-10	T-DC socket	1
22	88-8A	protector, 8A	1
23	GEN2000DF-SS03-06	control panel shade	1
24	88-8A	protector, 8A	1
25	KCD4	power switch	1
26	GEN1500SS04-01	control panel	1
27	GB5782 M6×18.00	grounding hex head bolt set	1
28	GEN2000DF-SS04-02	back cover, control panel	1
29	GEN2000DF-SS03-08R	right bracket	1
30	RBT05-04- I	fuel tap	1
31	GG-φ9	clasp 9	2
32	KJ1000A06.00-01	fuel filter	1
33	ST950A05-01.01	fuel gauge	1
34	KJ1000A06.00-02	fuel tank cap	1
35	GEN1500SS05-01	fuel tank	1
36	GB5789 M6×20	hex head bolt, M6×20	4
37	GB96 6	big washer 6	4
38	KJ2500A05-08	fuel tank cushion	4
39	YG 5×9-EPA/CARB	fuel hose	1
40	GB2672 M6×12	torx,M6×12	12

# PARTS DIAGRAM

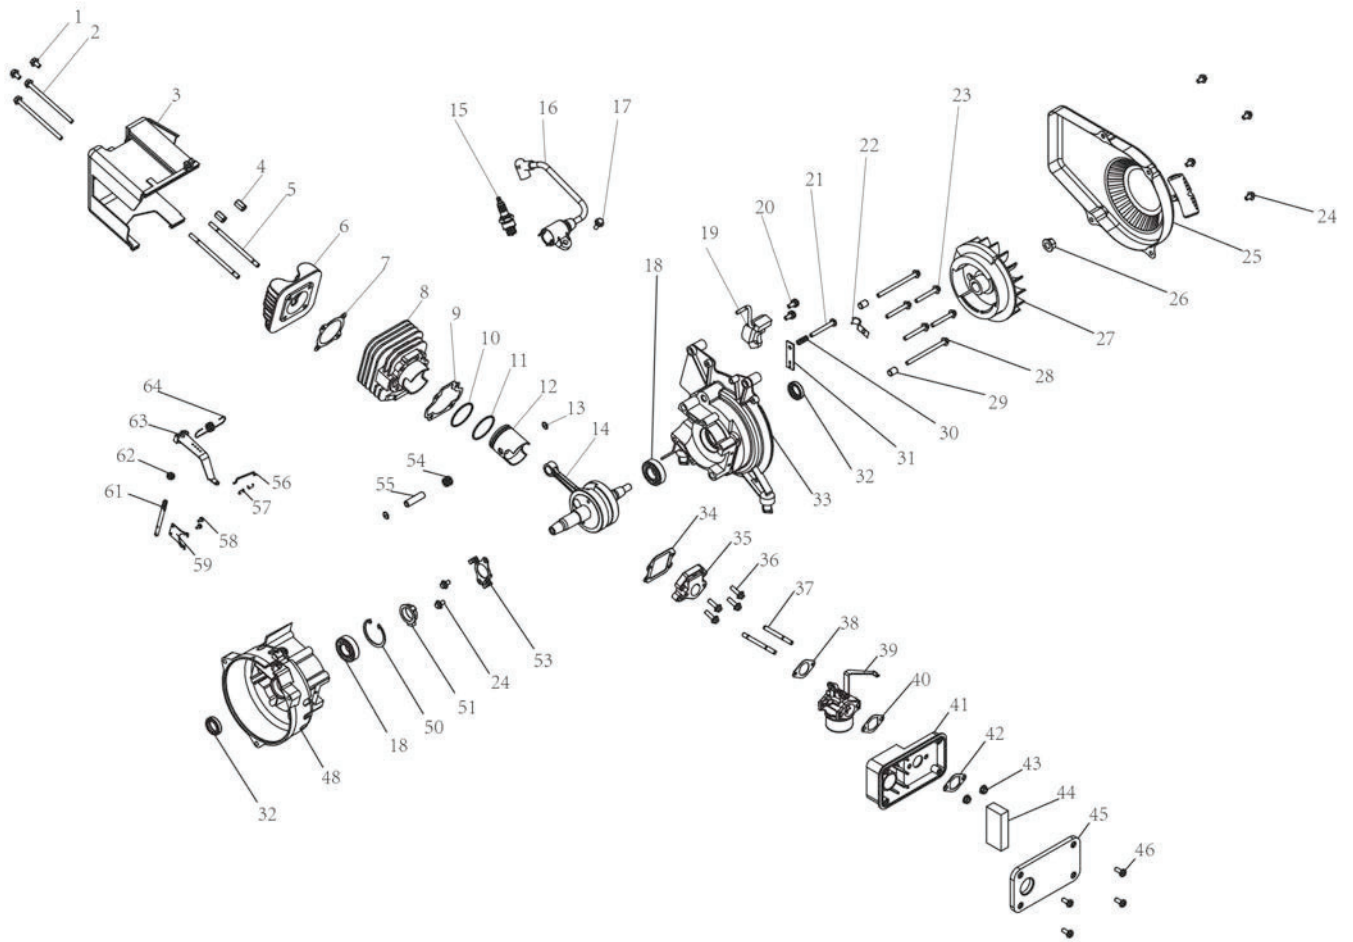

## PARTS LIST

No.	Part number	Description	Qty
1	GB5789 M6×10	hex head bolt,M6×10	2
2	GB5789 M6×100	hex head bolt,M6×100	2
3	1E45F05-01	cylinder head cover	1
4	1E45F02-09	connecting nut	2
5	GB900 M6×101	stud,M6×101	2
6	1E45F02-02	cylinder head	1
7	1E47F02-07	gasket,cylinder head	1
8	1E47F02-01	cylinder	1
9	1E45F02-06	gasket, cylinder	1
10	1E47F03-04	piston ring 1	1
11	1E47F03-05	piston ring 2	1
12	1E47F03-03	piston	1
13	1E45F03-07	clasp,piston pin	2
14	1E47F03-01	crankshaft,assy	1
15	F6TC	spark plug	1
16	1E45F04-04	high voltage set	1
17	GB5789 M6×16	hex head bolt,M6×16	1
18	GB276 6004	bearing,6004	2
19	1E45F04-02.00	ignition coil set	1
20	GB9074.4 M6×16	Phillips screw set,M6×16	2
21	GB823 M6×50	Phillips screw set,M6×50	1
22	1E45F01-05	clamp	1
23	GB16674 M6×45	hex head bolt,M6×45	4
24	GB16674 M6×10	hex head bolt,M6×10	6
25	1E45F05-02	starter	1
26	GB6177.2 M10×1.25	nut,M10×1.25	1
27	1E45F04-01	flying wheel	1
28	GB16674 M6×55	hex head bolt,M6×55	2
29	1E45F01-03	locating pin	2
30	1E45F06-09.02	adjusting spring	1

No.	Part number	Description	Qty
31	1E45F06-09.01	adjusting plate	1
32	1E45F01-04	oil seal	2
33	1E45F01-02-B	right crank case	1
34	1E45F02-08	gasket,inlet valve	1
35	1E45F02-05	air inlet valve	1
36	GB16674 M6×20	hex head bolt,M6×20	4
37	GB900 M6×60	stud,M6×60	2
38	1E45F07-02	gasket,carburetor	1
39	1E45F07-01-EPA	carburetor	1
40	1E45F07-03	gasket,air cleaner	1
41	GEN1500SS04-01	air cleaner	1
42	ST950A04-02	flange plate,air cleaner	1
43	GB6177.1 M6	hex head nut,M6	2
44	ST950A04-05	air sponge	1
45	ST950A04-03	air cleaner cover	1
46	GB818 M6×15	Phillips screw,M6×15	4
48	1E45F01-01-B	left crank case	1
50	GB893.1 45	clasp,bearing	1
51	1E45F06-02	slip ring	1
53	1E45F06-01	centrifugal set	1
54	1E45F03-02	needle bearing	1
55	1E45F03-06	piston pin	1
56	1E45F06-08	connecting rod	1
57	1E45F06-06	throttle return spring	1
58	GB9074.4 M3×8	Phillips screw set	2
59	1E45F06-03.02	governing fork	1
61	1E45F06-03.01	governing shaft	1
62	1E45F06-04	oil seal, governing shaft	1
63	1E45F06-05	governing arm	1
64	1E45F06-07/60Hz	governing spring	1