


# **Assembly Instructions**

## CM4327S

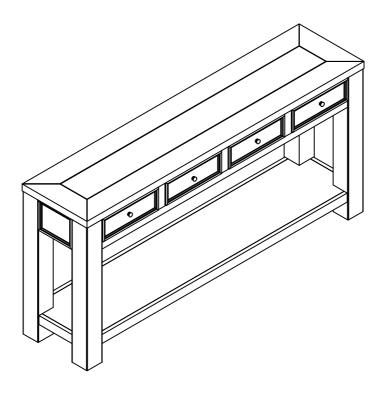

### **ASSEMBLY RATING**

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY ( ) ( ) ( ) DIFFICULT

Tools Required For Assembly:

Allen Wrench



Phillips Screwdriver



Rev: 16-01-14




2 PERSONS RECOMMENDED



# **ASSEMBLY & CARE ADVICE**

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


#### BASIC ASSEMBLY TECHNIQUES

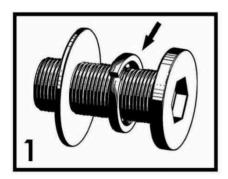


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

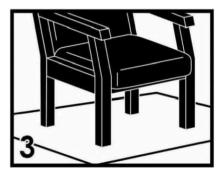

Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

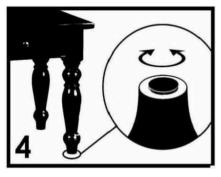

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

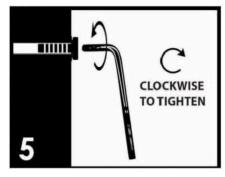

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.




Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

FURNITURE OF AMERICA ALL RIGHTS RESERVED.

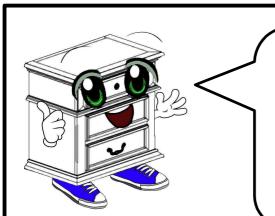

Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.


# Parts List #1 x 1pc Table Top #A x 12pcs Bolt 5/16"X 2"

 	#2 x 1pc			#B x 12pcs
	Shelf	丿(		Lock Washer








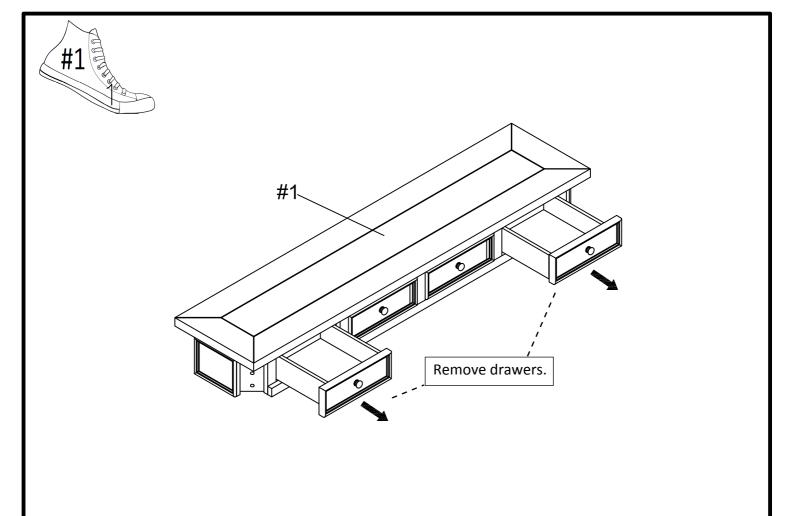





#A x 6pcs #B x 6pcs #C x 6pcs

- Place the table top (#1) face down onto a protected surface.
- 2. Prepare 6 bolt assemblies by first inserting a lock washer (#B) onto the bolt (#A) then a flat washer (#C) onto that same bolt (#A).
- 3. Align the legs (#3) to the corner holes, then insert 2 bolts into each corner. Secure using the Allen wrench (#D).

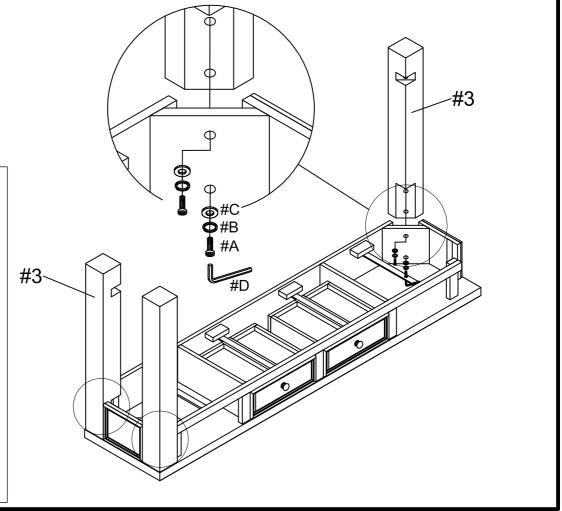

Page 4 of 6

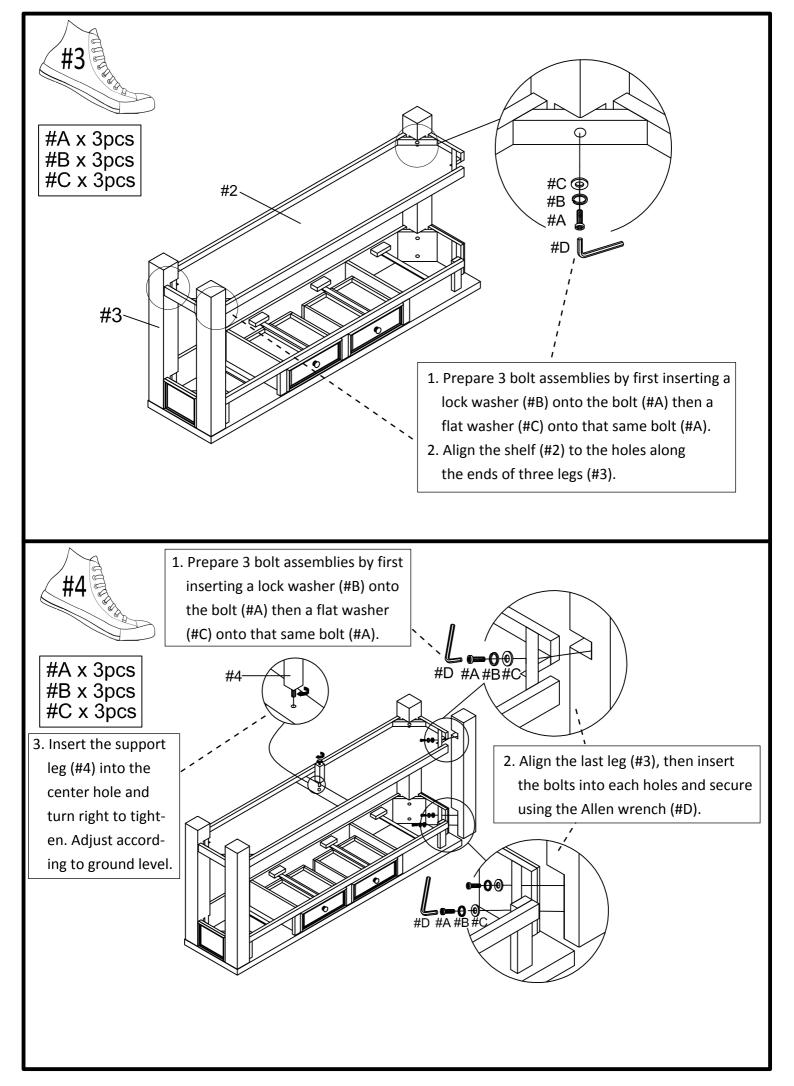


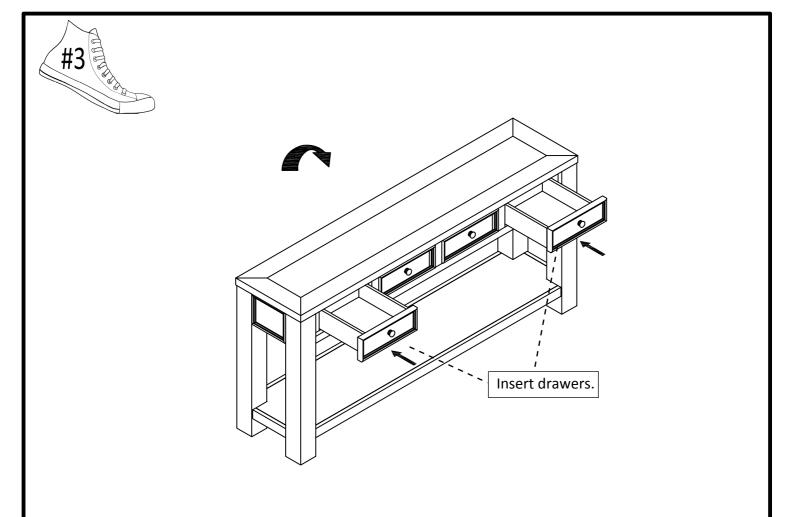



#### #E x 1Set

- 1. Drill a hole along the wall slightly smaller than the long screw, then align a bracket to the hole and insert a long screw, secure.
- 2. After that align the other bracket to the back of the assembly and insert a small screw. Secure using a screwdriver.
- 3. Secure the strap accordingly.

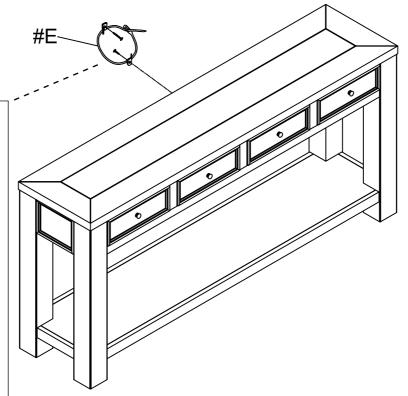

**ASSEMBLY IS COMPLETED**