



SKU # 1002 494 377  
 OMS THD SKU # 1002 455 677  
 Model # TY201-1714-1

# ASSEMBLY INSTRUCTIONS


## 5ft Tinsel LED Santa with "Merry Christmas" Sign

### USE AND CARE GUIDE

#### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center.

\*Assembly of this product may require more than one person.

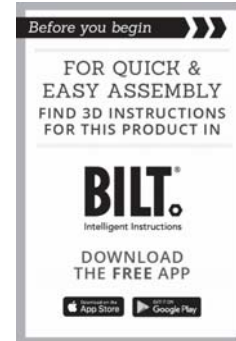

Download the free BILT app on any mobile device and access easy 3D interactive instructions to assemble this product.



#### Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 5ft Tinsel LED Santa with 'Merry Christmas' Sign. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-877-527-0313

HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Hat	1
B	Head/Face	1
C	Halves of Body	2
D	Arm	2
E	Foot	2
F	Sign	1

Hardware List		
Locater	Name	Qty.
G	Spare Fuse	2
H	Spare Bulb	5
I	Plastic Tie	15
J	Ground Stake	4

#### Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 12 Watts (0.1 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

#### Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and flat.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

#### Trouble Shooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

### Guarantee


#### What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

#### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday


#### Diagram of Parts

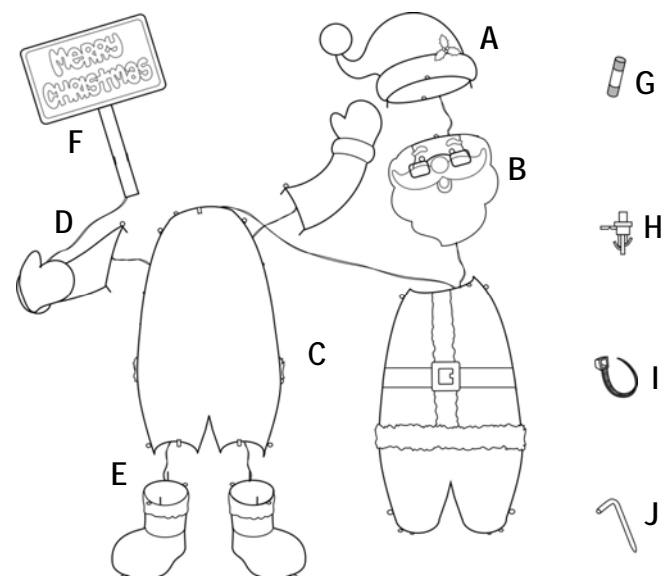

# ASSEMBLY


## 1 Assembling the Body

Align two Halves of Body (C) with each other then insert the connecting rod on one side into the connecting holes on the other side. Fasten together at the connecting loops with the Plastic Ties (I).

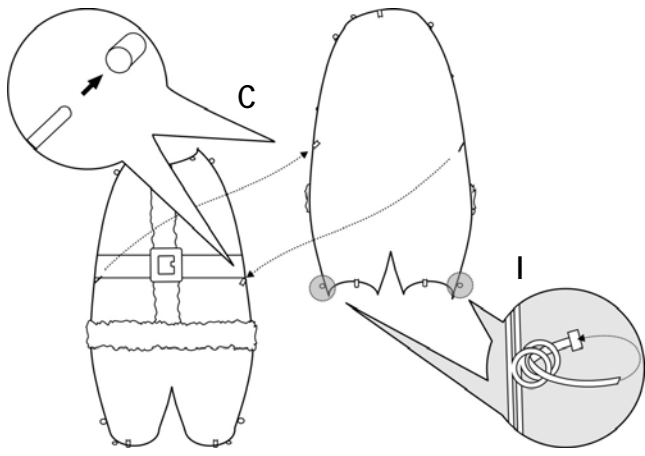


## 2 Assembling the Feet to the Body

Insert the connecting rods on each Foot (E) into the connecting holes on the bottom of the Body (C) and fasten together at the connecting loops with the Plastic Ties (I).

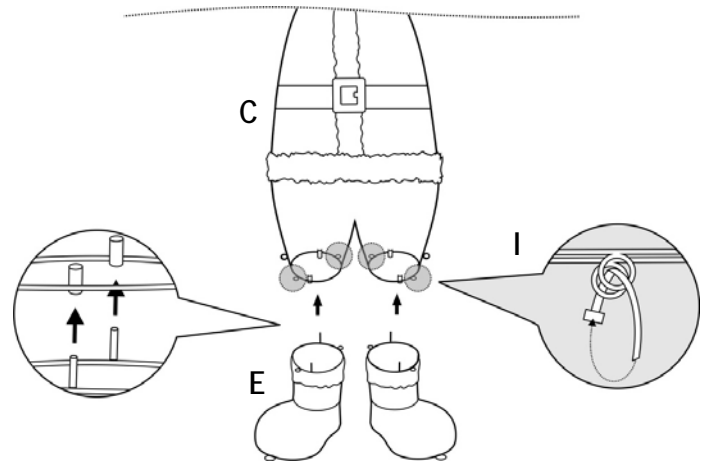


## 3 Assembling the Head/Face to the Body

Insert the connecting rods on the bottom of the Head/Face (B) into the connecting holes at the top of the Body (C) and fasten together at the connecting loops with the Plastic Ties (I).

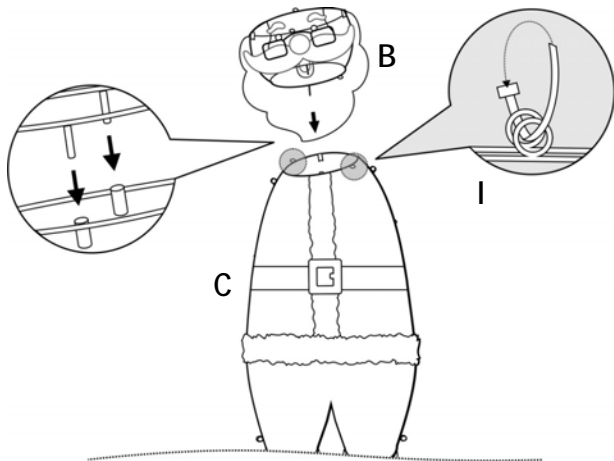


## 4 Assembling the Arms to the Body

Insert the connecting rods on each Arm (D) into the connecting holes on the sides of the Body (C) and fasten together at the connecting loops with the Plastic Ties (I). NOTE: The Right Arm has the cupped Hand to support the Sign.

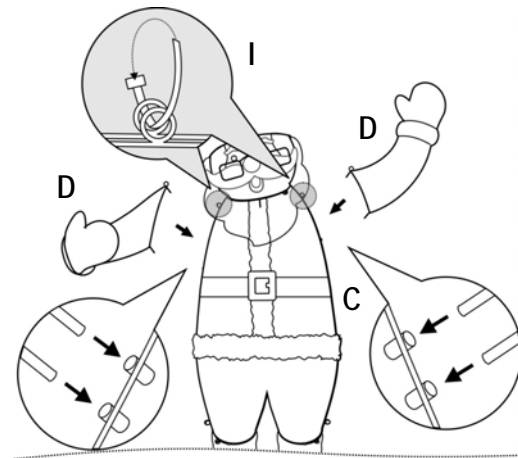


## 5 Assembling the Hat to the Head/Face

Insert the connecting rods on the bottom of the Hat (A) into the connecting holes at the top of the Head/Face (B) and fasten together at the connecting loops with the Plastic Ties (I).

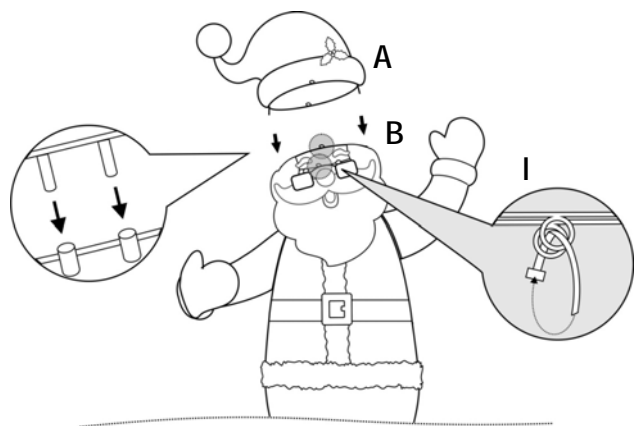

## 6 Assembling the Sign to the Right Hand

Insert the connecting rods on the backside of the Sign (F) into the connecting holes on the Right Hand (D).

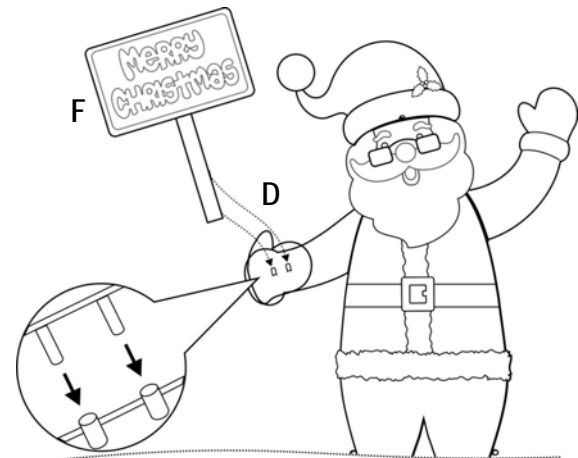

## 7 Assembling the Ground Stakes

Insert Ground Stakes (J) over the metal loops, at the front and back of the Santa's Boot, then firmly into the ground.

