


# REPLACEMENT PARTS - MODEL TB27VH

## 2-CYCLE BLOWER/VACUUM


PPN 41AR27VH766

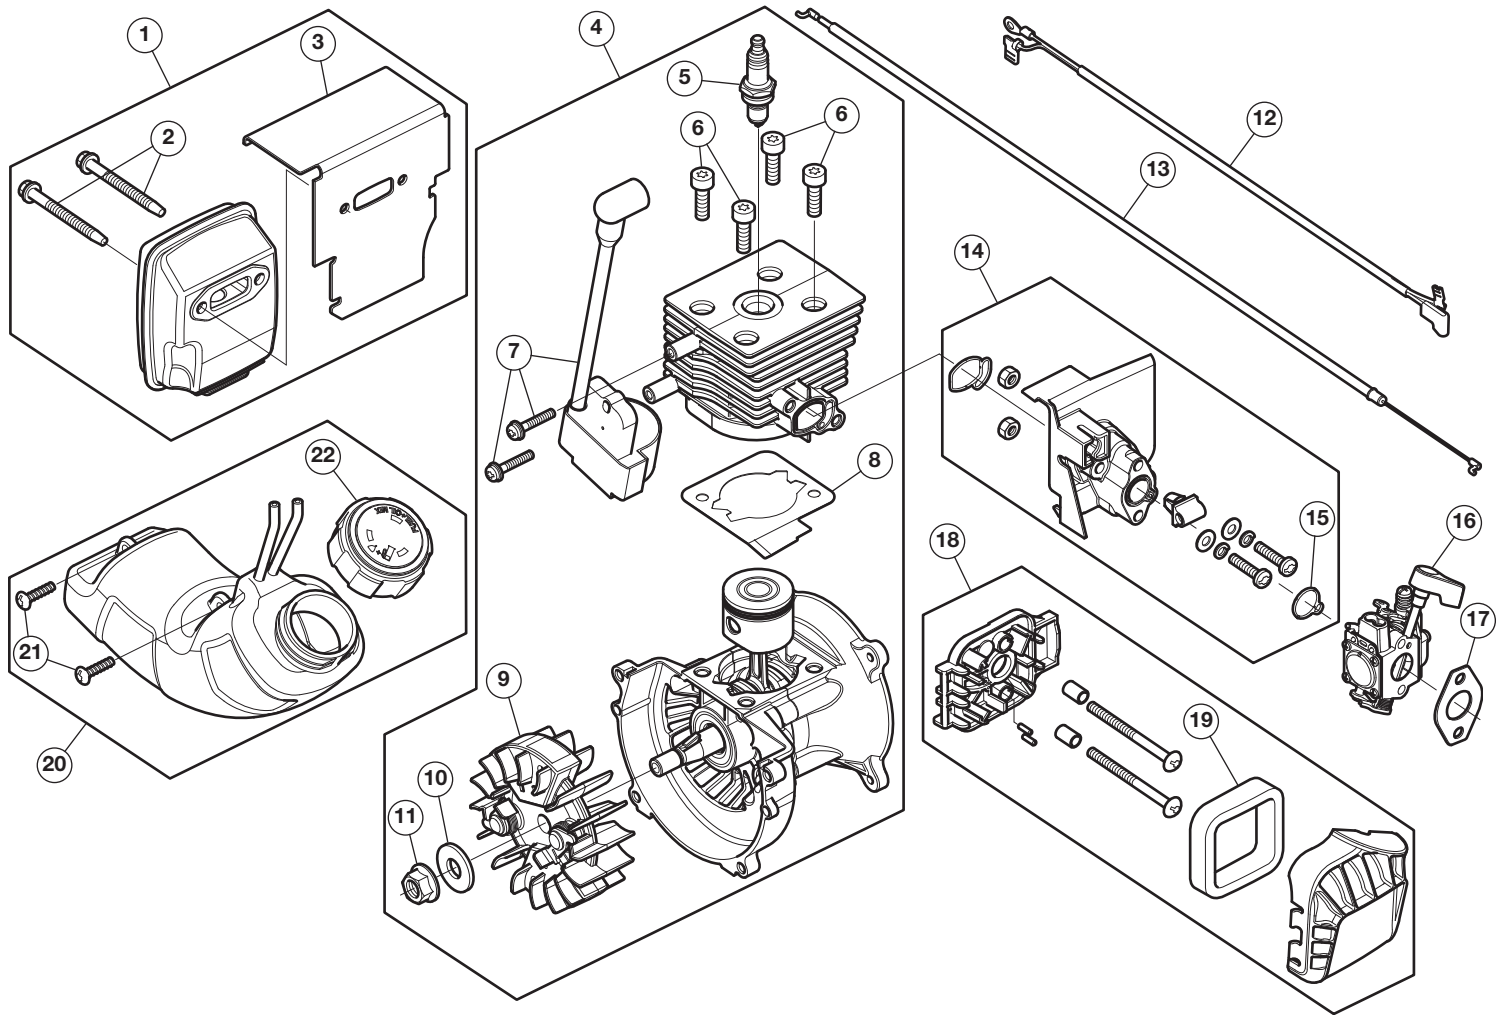

Item	Part No.	Description	Item	Part No.	Description
1	753-06027	Muffler Assembly (includes 2 & 3)	12	753-05949	Lead Wire
2	753-06294	Muffler Screws	13	753-06690	Throttle Cable
3	753-05946	Muffler Gasket	14	753-06189	Insulator Assembly (includes 15)
4	753-09004	Shortblock Assembly (includes 5 - 11)	15	753-06185	Insulator O-Ring
5	753-06847	Spark Plug	16	753-08517	Carburetor Assembly (includes 17)
6	710-04715	Screw	17	753-06253	Carburetor Gasket
7	753-08516	Module Assembly	18	753-08507	Aircleaner Assembly (includes 19)
8	753-06827	Cylinder Gasket	19	791-181757	Air Filter
9	753-06175	Flywheel Assembly	20	753-06720	Fuel Tank Assembly (includes 21 & 22)
10	736-04107	Washer	21	710-04194	Screw
11	712-04137	Nut	22	791-182529	Fuel Cap

# REPLACEMENT PARTS - MODEL TB27VH 2-CYCLE BLOWER/VACUUM

PPN 41AR27VH766

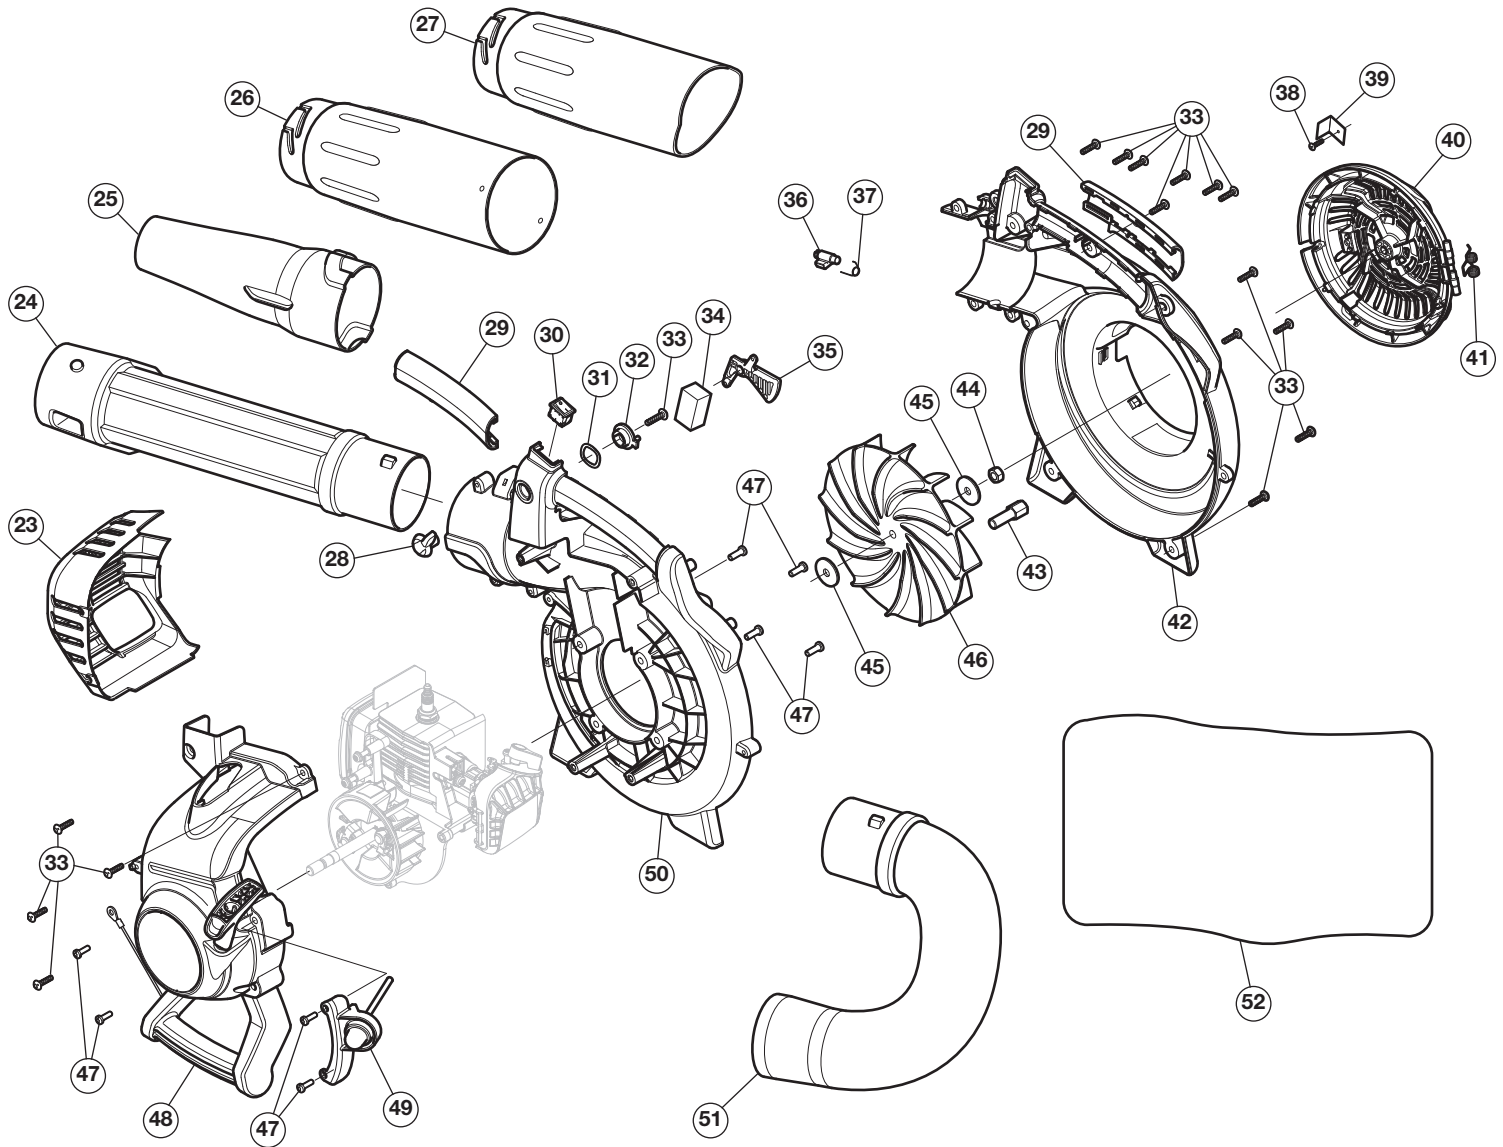

Item	Part No.	Description
23	753-06694	Muffler Cover Assembly (includes 33)
24	753-05936	Upper Tube
25	753-06000	Nozzle
26	753-06660	Upper Vac Tube
27	753-06661	Lower Vac Tube
28	753-05932	Outer Trigger Lock
29	753-05919	Handle Grips
30	791-182405	Switch
31	753-05925	Wavey Washer
32	753-05924	Inner Trigger Lock
33	710-04194	Screw
34	753-05254	Air Filter
35	753-05930	Throttle Trigger
36	753-05926	Latch Tube
37	753-05939	Latch Spring

Item	Part No.	Description
38	1755	Screw
39	753-06696	Door Lock
40	753-06678	Intake Cover
41	753-05918	Spring
42	753-06679	Impeller Housing
43	753-06700	Adapter
44	912-0237	Nut
45	753-05928	Washer
46	753-05929	Impeller
47	791-181862	Screw
48	753-10124	Engine Cover Assembly (includes 33 & 47)
49	753-09024	Remote Primer Bracket
50	753-06693	Impeller Housing
51	753-06658	Elbow
52	753-06659	Bag