


Assembly Instructions

WARNINGS:

- This fire bowl is intended for outdoor use only. Do not use on wooden decks.
- This fire bowl is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the fire bowl.
- Not for use by children. Keep children and pets away from the fire bowl.
- The fire bowl is hot. Use with caution. Do not touch the hot fire bowl with bare hands.
- Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fire bowl.
- Do not use near flammable or combustible objects or materials.
- When the fire bowl is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- Check local fire regulations and municipal by-laws for safe use.

FIRE PIT PARTS LIST

No.	PARTS	Qty
B	Screen	1
C	cooking grill	1
D	Decorative ring	4
E	Fire bowl	1
F	Leg	4
G	Supporter	4
H	Poker	1

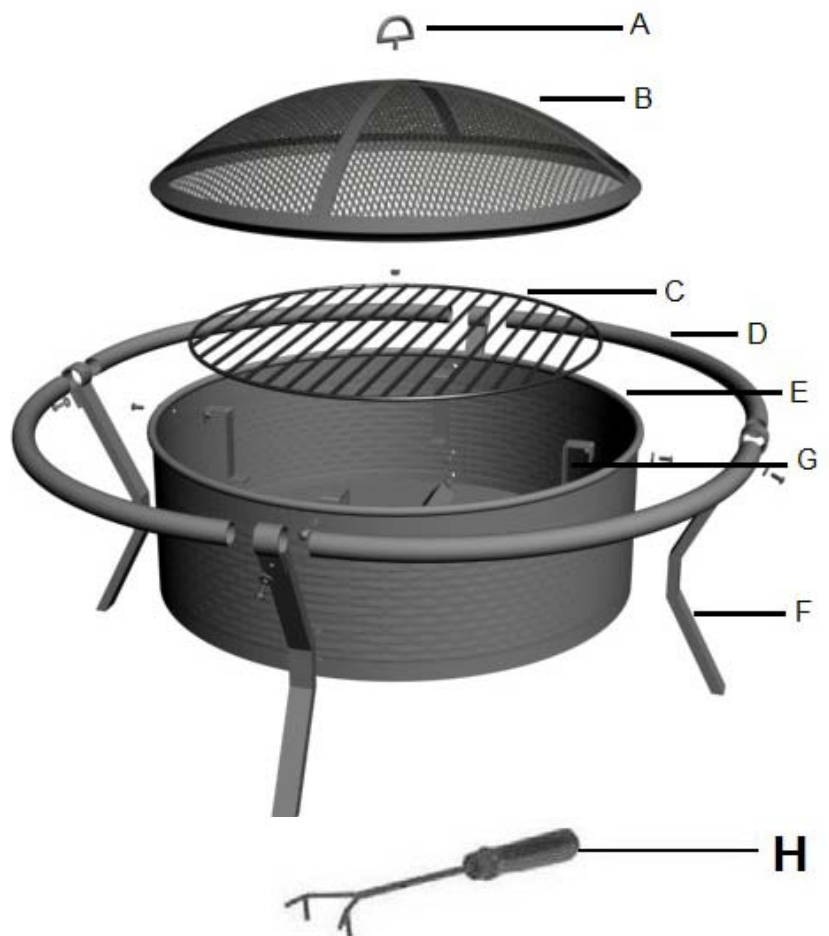


HARDWARE LIST

No.	Hardware	Qty
AA	M6*14 Bolt	12
BB	M6*16 Bolt	4
CC	M6 Nut	4
DD	FLAT WASHER	16




Step By Step Assembly Instructions:

Step 1: Attach Supporter (G) to the Fire Bowl (E) with M6 * 14 Bolt (AA) x 4pcs and flat washer (DD) x 4pcs

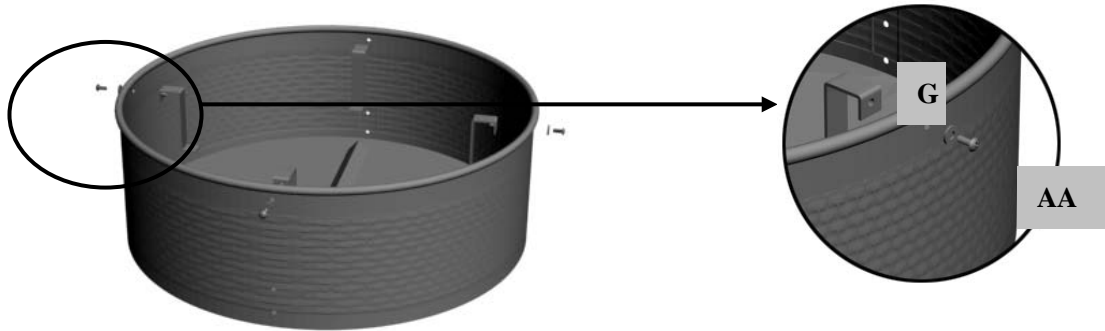

Step 2: Attach Leg (F) to the Fire Bowl (E) with M6 *14 Bolt (CC) x 8pcs and flat washer (DD) x 8pcs.
DO NOT TIGHTEN BOLTS FULLY.

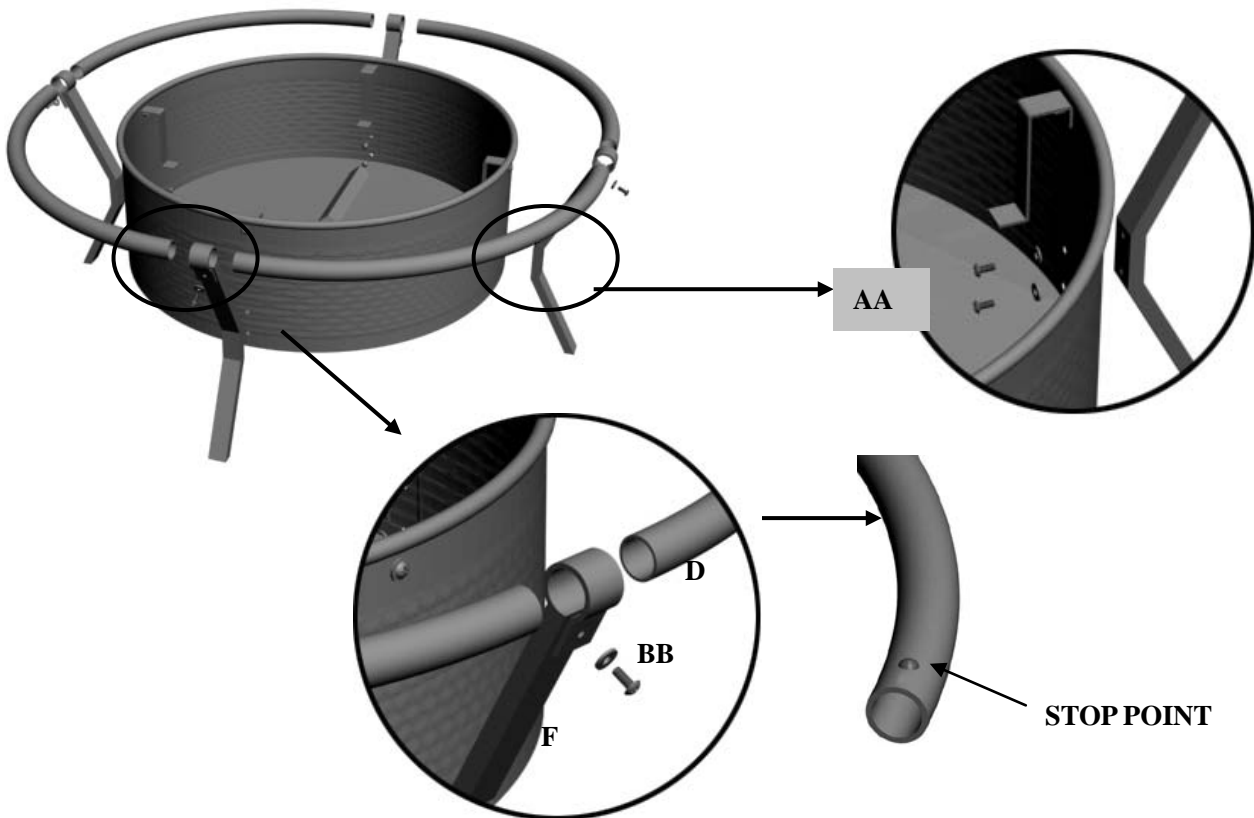

Step 3: Insert the Decorative ring (D) into the Leg (F) upper part. **DO NOT STOP INSERTING THE DÉCOR RING UNTIL THE STOP POINT TOUCHING THE LEG UPPER PART.** Lightly fasten it using M6 * 16 Bolt (BB) x 4pcs and flat washer x 4pcs.

Step 4: Tighten all hardware to secure all parts,
Place Fire Grill and Mesh Screen on the supporter.

