

Some Sink Models Have a Stopper Mechanism that Will Need to be Removed. In such cases -Unscrew the Retaining Nut, Pull Pivot Rod Out, and Remove the Stopper. Screw Retaining Nut back in place.

