

Cuisinart[®] INSTRUCTION BOOKLET



Double Induction Cooktop

ICT-60

For your safety and continued enjoyment of this product, always read the Instruction Book carefully before using.

CONTENTS

Important Safeguards.....	2
How Induction Cooking Works	3
Selecting Cookware for Induction Cooktops ...	3
Safety Functions and Features	4
Using Your Induction Cooktop	4
Cleaning and Maintenance	5
Warranty.....	5

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Unplug from outlet when not in use and before cleaning. Allow surface to cool before putting on or taking off parts.
3. Use unit only on a level surface.
4. Use only with induction-compatible cookware.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Dry outside of pan before use.
7. Do not heat empty pan.
8. Don't spill any liquids into vent areas.
9. To protect against electrical shock, do not immerse cord, plugs or housing unit in water or other liquids.
10. This appliance should not be used by or near children or individuals with certain disabilities.
11. Do not leave appliance unattended when it is on.
12. Do not touch hot surfaces. Use handles or knobs.
13. Do not cook on a broken cooktop. If cooktop should break, cleaning solutions and spillovers may penetrate the broken cooktop and create a risk of electric shock.
14. Clean cooktop with caution. If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn. Some cleaners can produce noxious fumes if applied to a hot surface.
15. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged in any manner. Call the nearest authorized Cuisinart consumer service center (see separate Warranty) to return for examination, repair or adjustment.
16. A short power-supply cord is supplied to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
17. Extension cords are available and may be used if care is exercised in their use. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
18. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
19. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
20. Do not use outdoors or while standing in a damp area.
21. Do not place on or near a hot gas or electric burner, or in a heated oven.
22. Extreme caution must be used when moving any pot or pan containing hot oil or other hot liquids from this appliance.
23. When using this appliance, provide at least 4–6 inches of air space above and on all sides for air circulation.
24. Do not use this appliance for anything other than its intended use. This appliance is for household use only.
25. To disconnect, turn the unit off, then remove plug from wall outlet.
26. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
27. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does

not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

28. Do not place metallic objects such as knives, forks, spoons, lids, cans and aluminum foil on the cooktop.
29. Keep items with a magnetic field away from unit. Items such as radios, televisions, automatic banking cards and cassette tapes can affect the unit.

This device complies with Part 18 of the FCC Rules.

This appliance is for 120 volts only and should not be used with a converter.

CAUTION

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug cooktop from the electrical outlet immediately after using.
 2. Do not use while bathing or in a shower.
 3. Do not place or store unit where it can fall or be pulled into a tub or sink.
 4. Do not place or drop into water or other liquids.
 5. Do not reach for unit that has fallen into water.
Unplug it immediately.
 6. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.
- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.
 - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO WATER OR MOISTURE.

PACEMAKER WARNING:

Persons with a pacemaker or similar medical device should exercise caution when using or standing near an induction unit while it is in operation. The electromagnetic field may affect the working of the pacemaker or similar medical device. It is advisable to consult your doctor or the pacemaker manufacturer about your particular situation.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

HOW INDUCTION COOKING WORKS

Induction cooking uses electromagnetism to transfer energy into the bottom of your cookware. The surface of the cooktop does not work the same way as conventional cooktops – it sends the energy directly to the cookware. As long as the energy is transferring into the cookware, the cookware will stay hot. Once the energy is stopped, removed or reduced, the cookware begins to cool instantly.

SELECTING COOKWARE FOR INDUCTION COOKTOPS

Use only induction-ready cookware

Selecting the proper induction-ready cookware is very important to the efficiency of your induction cooktop. As a general rule, copper, aluminum and glassware will not work on an induction cooktop. Cuisinart highly recommends using magnetic stainless steel, enamel, porcelain on steel, or cast iron. If you are not careful in your selection of cookware for your cooktop, the cookware may not work efficiently or possibly may cause damage to the electronics. As a general rule, if a magnet sticks to the bottom of the cookware, it will work on an induction cooktop. If a magnet does not stick to the cookware, it will not work on an induction cooktop. If you are unsure, it is best to check with your local merchant to make sure you are purchasing compatible cookware.

Note: Not for use with pans with diameters smaller than 4.7".

SAFETY FUNCTIONS AND FEATURES

- Pollution free: no burning, smoke or harmful gases like carbon monoxide, nitrogen dioxide and formaldehyde
- Safe: no flame, no exhaust
- Easy to clean: high-rigidity glass faceplate
- Automatic shutoff: cooktop turns off 30 seconds after pan is removed
- Protection against overheating

USING YOUR INDUCTION COOKTOP



1. Operation

Once the unit is plugged into an electrical outlet, place your induction-ready cookware on the glass top and press ON/OFF to turn on left burner, right burner or both.

Cookware detection: Unit will beep and automatically turn off after 30 seconds if cookware is not compatible.

NOTE: If the unit is turned on and no cookware is put on the cooking surface, the unit will beep and turn off after 30 seconds.

If you remove the cookware from the cooking surface during the operation mode, the unit will beep and will automatically turn off after 30 seconds.

2. Heat Settings

Left Burner: Cooktop has eight heat settings, from Low (1) to High (8). To operate the heat control, press the button labeled HEAT (indicator light labeled HEAT will illuminate). To increase heat, press up arrow ▲ to the desired setting. Press down arrow ▼ to lower the setting. The screen will indicate the current setting.

Right Burner: Cooktop has five settings, from Low (1) to Medium/Moderate (5). To operate the heat control, press the button labeled HEAT (indicator light labeled HEAT will illuminate). To increase heat, press up arrow ▲ to the desired setting. Press down arrow ▼ to lower the setting. The screen will indicate the current setting.

3. Timer Function

To operate the timer for each burner, press that burner's button labeled TIMER (indicator light labeled TIMER will illuminate). Press to set the timer to your desired cooking time. If you press and hold the up ▲ or down arrow ▼, the timer will advance rapidly. The timer can be adjusted to a maximum time of 150 minutes. At the end of the timed cycle, the timer will beep four times.

NOTE: Your induction cooktop runs for up to 180 minutes at a time. If it has been cooking for more than 30 minutes and you set a timer for 150 minutes, the cooktop will still turn off after 180 minutes. If you need to cook for more than 180 minutes, simply turn the cooktop on again. When the unit is off, the fan may continue running for a minute or more.

NOTE: The cooking surface will be hot after use, and care should be taken when adding on or removing cooking utensils from the cooktop to avoid burns.

SPECIFICATIONS

Model	Rating Voltage	Power rating	Power range
ICT-60	120V AC/60Hz	1800W	200-600W (right burner) 200-1200W (left burner)

CLEANING AND MAINTENANCE

Because it does not generate its own heat, the induction cooktop has no grates or carbon buildup to clean. Since you don't have scorching heat going up the sides of your cookware, the cookware stays cleaner longer.

Use a damp cloth with mild soap on the control panel, and for the cooktop, use a nonabrasive cleaning product (specifically made for smooth glass tops and available in most grocery stores). Any other servicing should be performed by an authorized service representative.

Limited Three-Year Warranty (U.S. and Canada ONLY)

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Double Induction Cooktop that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Double Induction Cooktop will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase. We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Double Induction Cooktop should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Consumer Service Representatives, or send the defective product to Consumer Service at Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product.

Please pay by check or money order made payable to Cuisinart (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart product, we suggest that you call our Cuisinart Service Center at 1-800-726-0190 before returning the product for service. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart® Double Induction Cooktop has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by

attempted use of this unit with a converter, as well as by use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

©2018 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

18CE052600

IB-13970-ESP-A