


## USE AND CARE GUIDE

### POOL ALARM

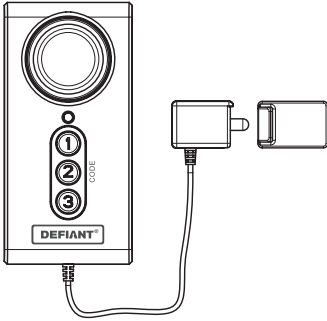

**THANK YOU**

We appreciate the trust and confidence you have placed in Defiant through the purchase of this pool alarm. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!

### Warranty

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 888-697-2389 for repair or replacement parts or return the product to the store from which it was purchased. Guarantee does not include normal wear and tear, bulbs or batteries.

### Safety Information



**WARNING:** Prolonged exposure to pitching alarm sound may cause permanent hearing loss.



**IMPORTANT:**

- Do not expose to rain.
- Install the product at least 5 ft. from the floor to keep it out of the reach of small children.
- Conforms to all standards of UL 2017.
- Check the condition of the batteries periodically.

Questions, problems, missing parts? Before returning to the store, call Defiant Customer Service  
M-F 9am-6pm PST

1-888-697-2389

HOMEDEPOT.COM

### Installation



Illustration #1

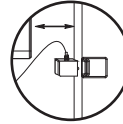


Illustration #2



Illustration #3

- Attach the device to the door, gate or window by peeling off the tape or by utilizing the butterfly hole.
- Affix the wired entry sensor pieces to the gate/door/window frame with the included peel and stick tape.
- Place the individual entry sensor pieces adjacent to the wired entry sensor as shown in illustration #1 (for pool gates and standard doors) & illustration #2 (sliding glass doors and windows), or disregard the individual entry sensor for doors or windows with an uneven door/window jamb as shown in illustration #3. (The raised door/window jamb is used instead of the other individual piece to activate the alarm.)

### Operating Instructions

#### Battery Installation & Password Setting

- Loosen the screw and slide down the battery cover in the lower part of the back panel.
- Install two AAA Alkaline batteries (not included); Slide the battery cover up.
- The red LED starts flashing continuously.
- Choose a 3-digit bypass code and enter it.
- If the alarm sounds off several short beeps and the red LED stops flashing, the code has been successfully set.

#### Operation

- Make sure the product is properly installed as directed.
- When you open the protected door, gate or window without entering your bypass code, the alarm goes off immediately and continuously and is accompanied by a flashing LED light.
- When you enter your bypass code to stop the alarm sound and flashing light, a series of beeps sound and the alarm turns off.
- Pass through the protected door, gate or window within 15 seconds after you enter your bypass code before opening the protected door, gate or window.

### Troubleshooting

Problem	Solution
The red LED flashes & the unit beeps periodically with door, gate or window closed.	Battery power is low, replace promptly.
Alarm sound becomes low.	Replace with new batteries.
Forget your bypass code.	Re-install the batteries, and reset bypass code.

### Warning



**WARNING:** Any battery may leak harmful chemicals which may damage skin, clothing or the inside of the alarm. TO AVOID RISK OF INJURY, DO NOT LET ANY MATERIAL LEAKED FROM A BATTERY COME IN CONTACT WITH EYES OR SKIN. Any battery may rupture or explode if put in a fire or otherwise exposed to excessive heat. TO AVOID RISK OF INJURY, DO NOT EXPOSE BATTERIES TO EXCESSIVE HEAT. To reduce the risk of personal injury or harm to your alarm, take the following precautions:

- Do not use different types of batteries in the same alarm.
- When replacing batteries always replace the whole set.
- Do not use rechargeable or reusable batteries.
- Do not allow children to install batteries unsupervised.
- Follow battery manufacturer's instructions as to proper handling, storage and disposal of batteries.