




500 West Warner Avenue, Santa Ana, CA ArielBath.com | AtlasUSA.net Email: sales@arelbath.com | Phone: 1-714-622-1565



Safety Information

- Product ground wire should be connected to permanent fixed ground wire.
- It is prohibited to use this product under the influence of alcohol or hypnotic.
- It is not allowed for children to operate this product without the supervision of adult.
- Special Notice: water temperature can not exceed 60 degrees centigrade or 140 fahrenheit.
- 5.Do not use strong corrosive detergent (such as vitriol, hydrochloric acid, lye) to disinfect or clean the body of steam shower house.
- Please read through this manual before usage and operate according to this manual.
- 7.This product only be allowed to connect to power with GFCI/RCD (leakage circuit breaker) Refer to current breaker correct test and operation, leakage circuit breaker should be installed and tested by qualified electricians.
- 8. The diameter of ground wire shall be more than 1.5 square.
- Caution: To prevent electric shock, the ground outlet must be connected to GFCI/RCD (leakage circuit breaker)
- 10.Caution: To prevent electric shock, do not use extended wire. And there must be well located supply power socket
- 11.Caution: To prevent being burnt by the steam, do not open the cover of the descale cleaning box during the motor is running.

Principle of the electric installation

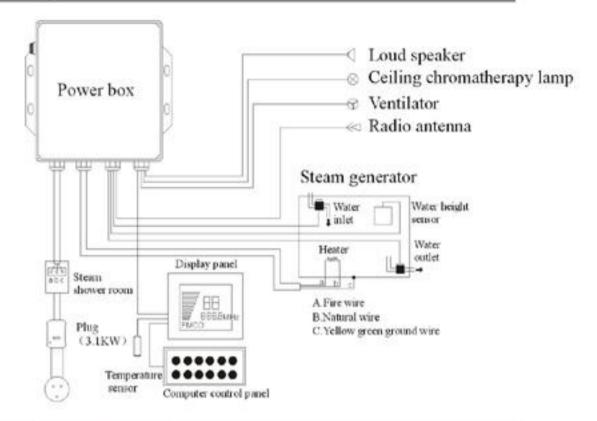


Parameter Components	Rated voltage	Rated voltage	Rated power
Pump	AC220-240V/50HZ	AC110-120V/60HZ	1125W
Steam generator	AC220-240V/50HZ	AC240V/60HZ	3000W
Chromatherapy lamp	DC12V	DC12V	10W
Ventilator	DC12V	DC12V	3W
Magnetic valve	DC12V	DC12V	5W
Computer control panel	AC220-240V/50HZ	AC240V/60HZ	
Loud speaker			10W
Remark			

CONTENTS

01-02	Component Introduction		
03	Water and wire connection dimension		


- 04-12 Installation Step
- 13-14 Control Panel Button and Function
 Demonstration for F3 Type Steam House
- 5 Steam House Removing Descale Cleaning Function
- 16 Troubleshooting

Component Introduction

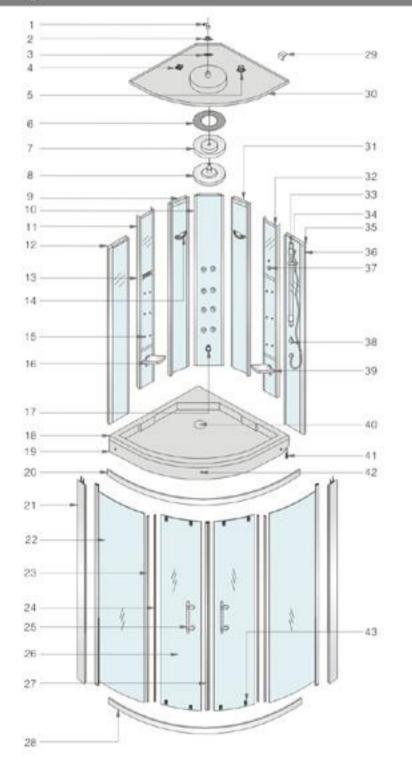



Component Introduction

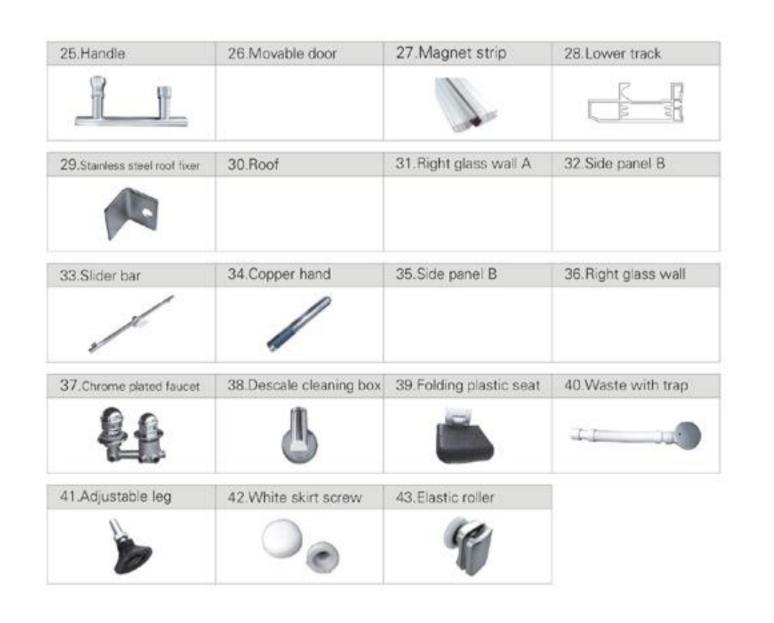


Spare parts bags:



Water and wire connection dimension


Specification: 1500 x 1500 x 2250

03

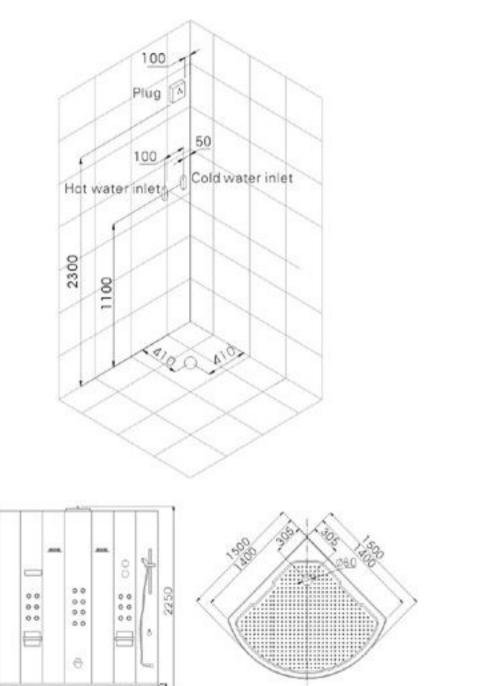


Installation Step 1

Move the shower tray to the suitable place, adjust the bottom of the screw, make it on the level. (Notice:adjust the height of the foot to make the bathtub on level. (As illustrated at drawing 1)

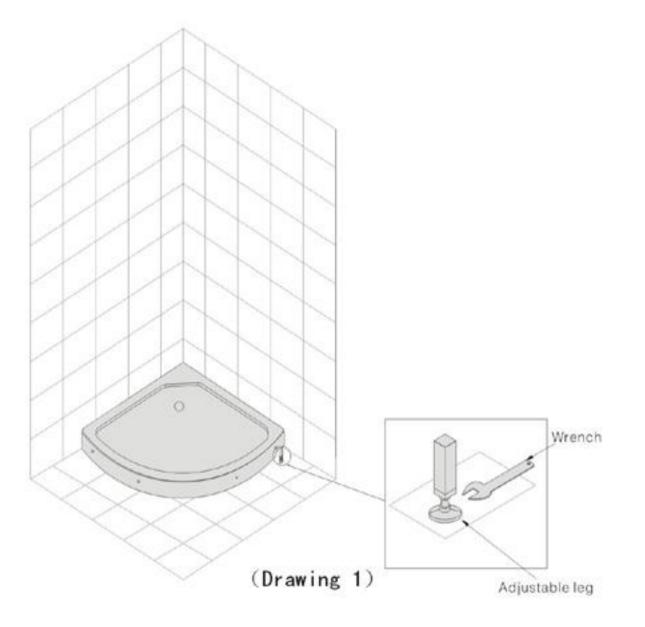


05

The glass walls(including middle panel A,left glass wall B and right glass wall C) should be placed on the tray and connect by 4 × 10 self-locking screws.(As illustrated at drawing A)

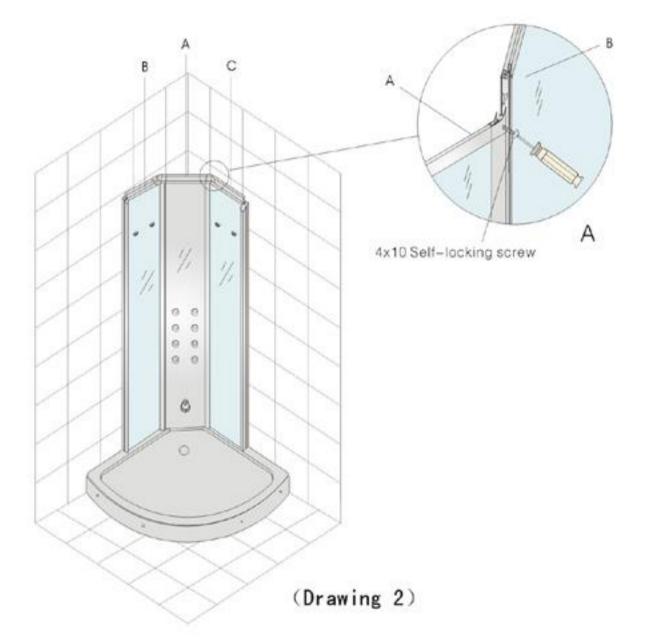


Installation Step 3


1.Side panels (A & B) should be insert into the glass walls groove and fixed with 4 x 10 self-locking screws.(As illustrated at drawing A) 2.Cover the decoration cover for panel in the panel hole.(As illustrated at drawing B)

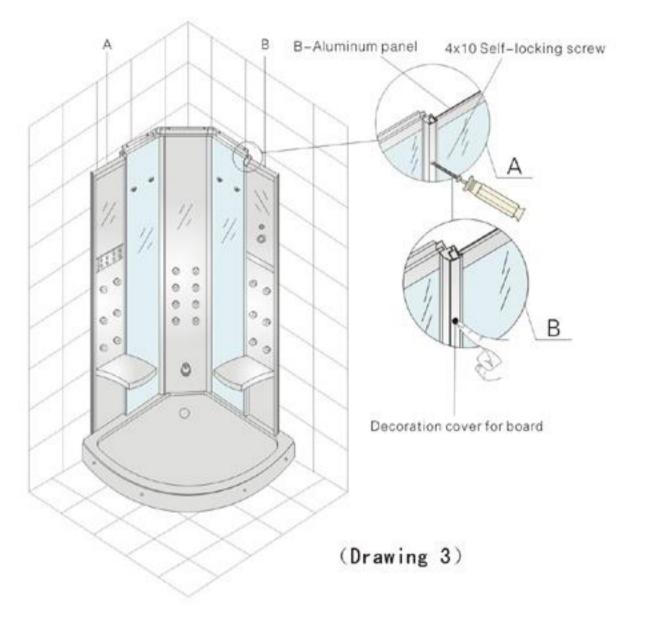

Use 3.5x30 self-locking screws to connect left right glass doors with upper & lower track. (As illustrated at drawing 4)

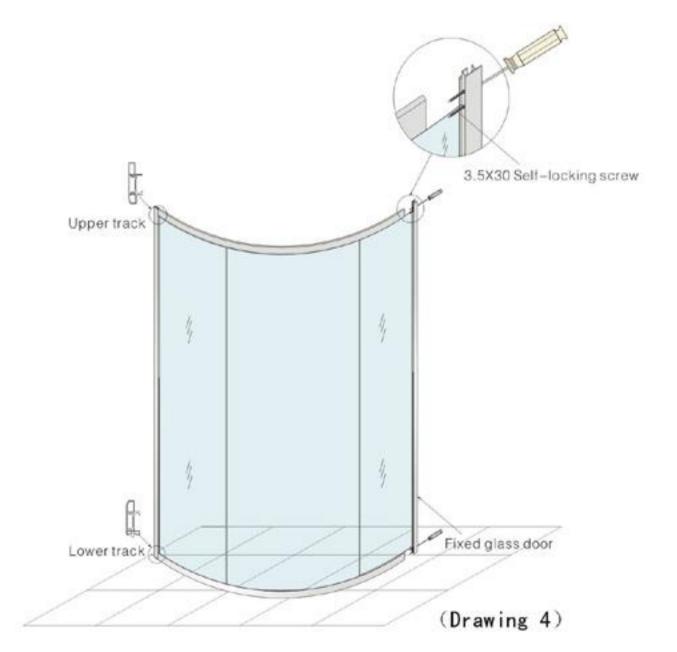


Put the left & right side glass wall separately insert into the aluminum profile groove. Then secure with 4x10 self-locking screws.(As illustrated at drawing A)

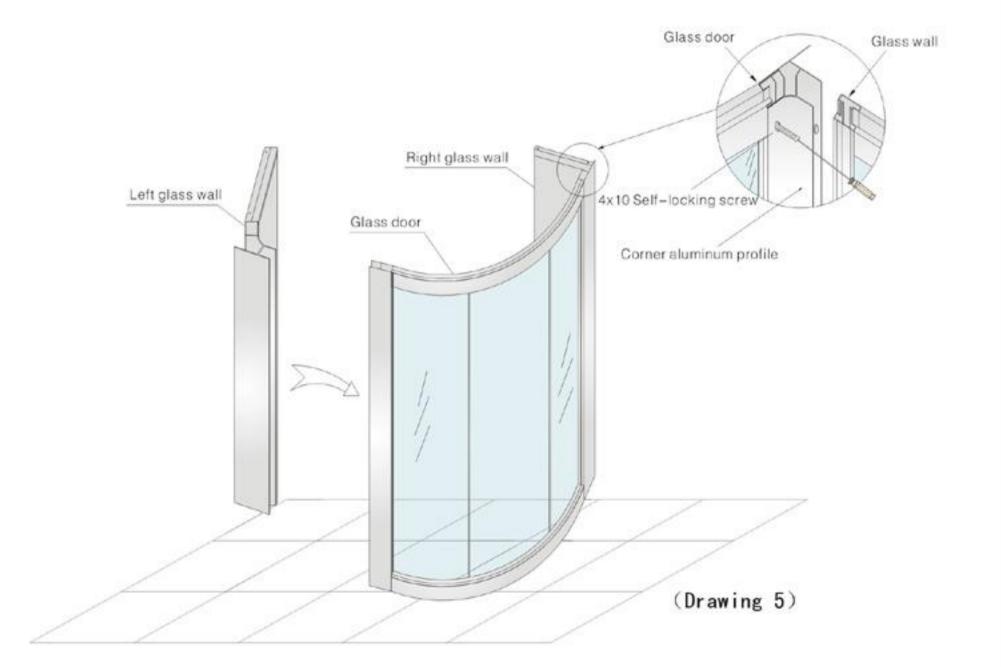

09


- 1.Install the whole set glass door on the shower tray and connect them with left & right glass wall by 4×25 self-locking screws.(As illustrated at drawing A)
- 2.Cover the decoration cover for panel in the panel holes.(As illustrated at drawing B)

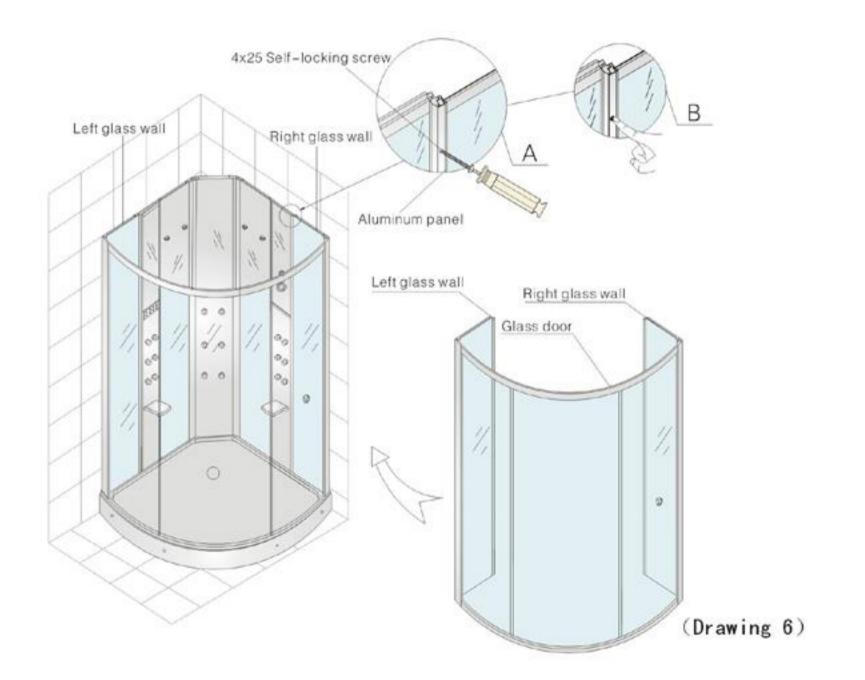

Installation Step 7


- 1.When installing the movable door please: Hang the sliding door on the upper track (As illustrated at drawing A), and press the lower roller to hook the lower track (As illustrated at drawing B). Using a small slotted screwdriver to adjust in case the two sliding doors are not entirely closed.
- 2.Install fixed door water-proof strip C, install magnetic strip D and water proof C to two movable doors .(As illustrated at drawing 7)
- 3.Install the handle on the movable doors(As illustrated at drawing F)

4.Install the slider bar on the glass wall(As illustrated at drawin G), connect the hand shower hose to the hand shower connector (As drawing H), then install the shampoo holder (As illustrated at drawing I).

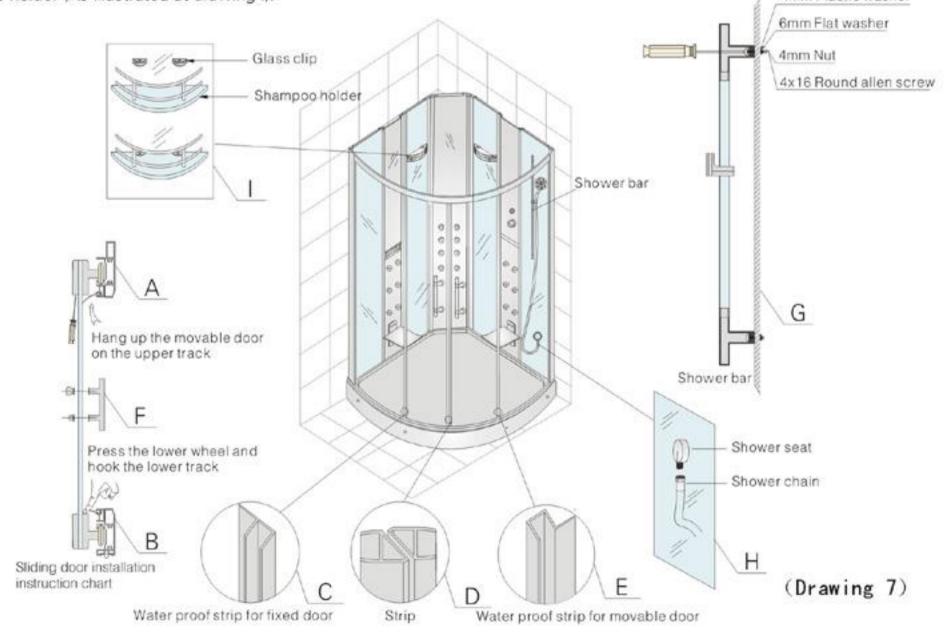


11

- 1.Connect the glass wall and shower tray by 6×30 hexangular screws.(As illustrated at drawin A)
- 2. Fasten the support iron bar on the panel with 4×10 self-locking screws. (As illustrated at drawin B)
- 3.Put the roof on the glass wall and secure with 4×10 self-locking screws.(As illustrated at drawin C)
- 4. Connect the loudspeaker, chromatherapy lamp, ventilator in accordance with relevant lable plug.

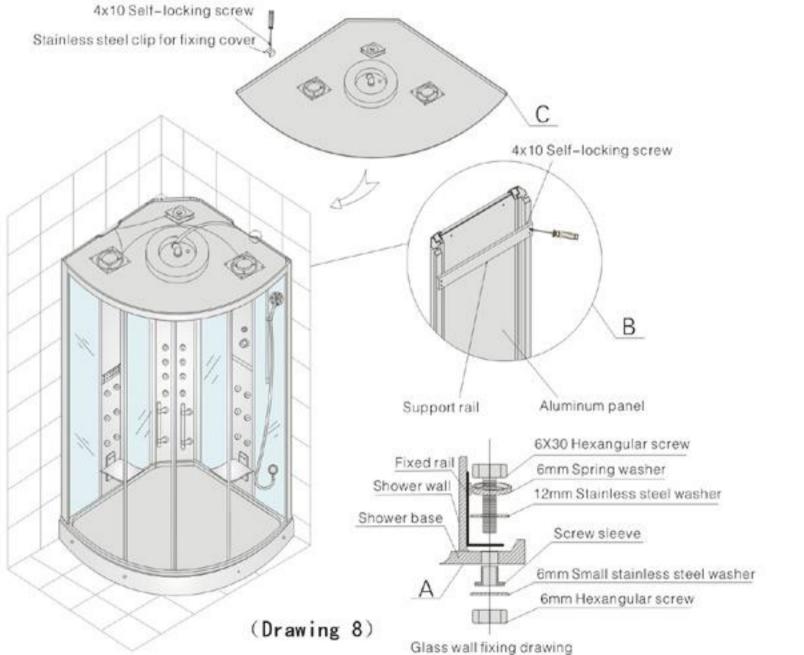


Installation Step 9

Install ceiling shower hose, steam hose, steam outlet, cold and hot water hoses. Finally test whether the electric equipment and fittings run well. (As illustrated at drawing 9)

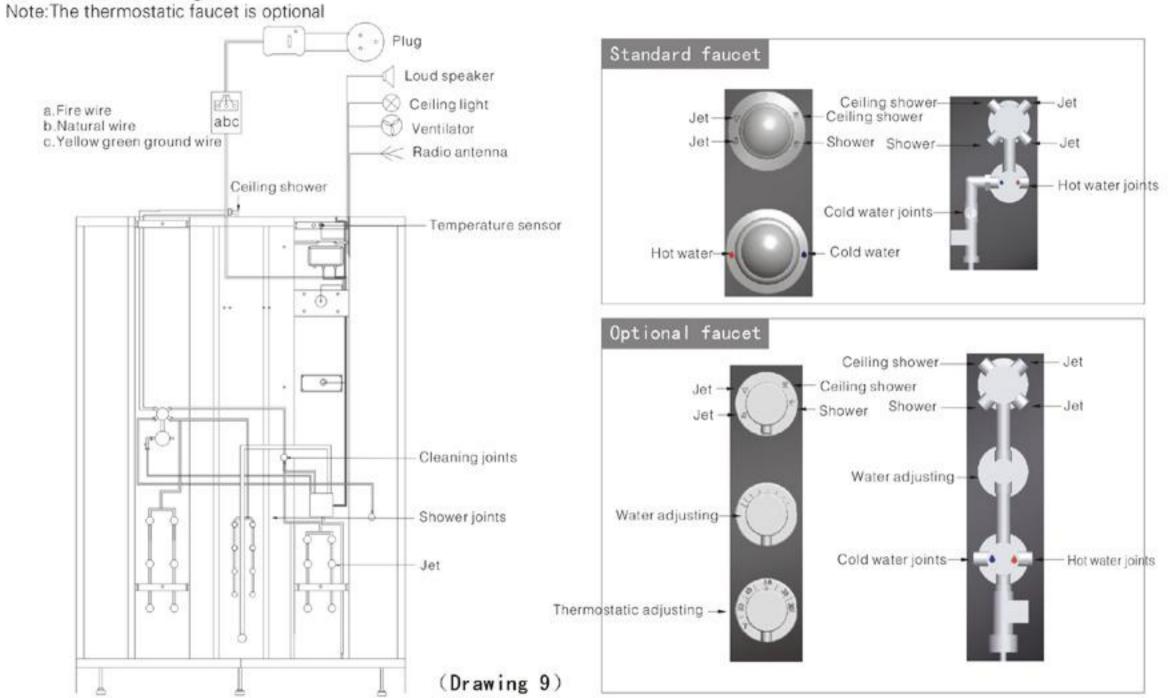

Control Panel Button and Function Demonstration for F3 Type Steam House

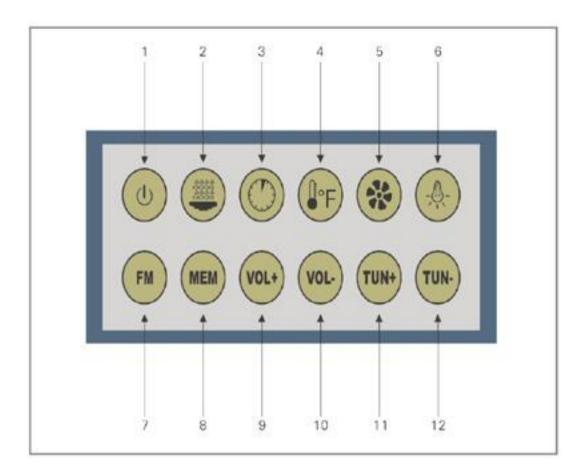

13

1. Power on/off



Turn on/off the system.

Press this key to open the control system. Press it once again to close the control system. It will be automatic shut down in one hour after it's been turn on.(As illustrated at drawinge 1)



2、Steam

Press this key, the steam function will be opened, the screen will show.(As illustrated at drawing 2)

3、Time setting



When the steam function is turned on, press this key will increase the setting of time. When press this key more than 1 second, the time setting will be increased until it reaches maximum limit(As illustrated at drawing 3), then it will turn to minimum limit automatically. The time setting range is between 5-50 minutes. The default time is 30 minutes.

Drawing 2

100

Drawing 3

Drawing 4

4. Temperature setting

When the steam function is turned on, press this key will increase the temperature. When press this key more than 1 second, the temperature will be increased until it reaches maximum limit, (As illustrated at drawing 4) then it will turn to minimum limit automatically.

The temperature range is between 68°F-122°F. The default time is 104 °F.

Control Panel Button and Function Demonstration for F3 Type Steam House

85

Drawing 5

85.

Drawing 6

78*

Drawing 7

5. Ventilator 🛞




Press this key the ventilator will turn on, and press it once again to turn off the ventilator.(As illustrated at drawing 5)

6. Chromatherapy



Press this key to turn on the chromatherapy. When it is turned on, color be changed each time the button is pressed. When press first time, the blue light on. When press the second time, the blue & red light on. When press third time, the red light on. When press the fourth time, the red & orange light on. When press fifth time, the orange light on. When press the sixth time, the orange & blue light on. When press seventh time, the chromatherapy will turn on cycling, when press the eighth time, the light will turn off,

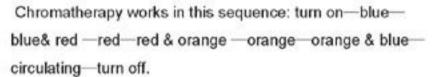

7、Radio

Press this key to turn on and press it to turn off the radio function(As illustrated at drawing 7).

8. Channel saving NEW



Press this key and release within 1 second, the frequency of current location will be found . press this key and hold it more than 1 second, the frequency will be saved to current location. It can save 8 channels.

9、Volume +



When the radio is turned on, press this key will increase the volume.

10 Volume - (VOL)



When the radio is turned on, press this key will decrease the volume.

11. Frequency + (TUN-)




When the radio is turned on, press this key will Increase the frequency. If hold it more than 1 second, the frequency will be increased automatically until one channel has been found. The frequency range is between 87.5-108.0MHZ.

12 Frequency - WOL+ When the radio is turned on, press this key will

Drawing 10

the frequency will be decreased automatically until one channel has been found. The frequency range is between 87.5-108.0MHZ.

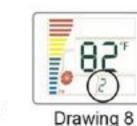

decrease the frequency. If hold it more than 1 second,

Drawing 9

Steam House Removing Descale Cleaning Function

Using steps: power off →open the descale cover →input cleaning solution →cover the descale cover→Power on, run the automatic cleaning function→power off and water discharge

1. Power off

For safety, it is forbidden to twist the cover of detergent box so as to avoid being burnt by the steam. Before using the cleaning function, if it is in an open state, please close all of the function, press key to power off.(As illustrated at drawing 1)

2. Open the descale cover

After confirming the system power off, press the right label and found the detergent box in the steam house. twist the cover by reverse direction and take out of the box cover .(As illustrated at drawing 2)

3. Input cleaning solution

Open the detergent box, use the spoon to pour the citric acid or compounds cleaning fluid into the box. (As illustrated at drawing 3)

4, cover the descale cover

After inputting the cleaning liquid, whirl the box cover in clock wise direction, twist the cover and avoid the steam hurting the people. (As illustrated at drawing 4)

5、Power on、run the automatic cleaning function

After covering the detergent box, press (b) to power on. Then press (a) key to open the cleaning function and let and system to automatically cleaning.(As illustrated at drawing 5)

6. power off and water discharge

After 5 to 10 minutes, press (a) key to close the steam function, and press (b) to power off. The dirty water will be discharged automatically. The cleaning process will be finished after 5 minutes .(As illustrated at drawing 6)



(Drawing 1)




(Drawing 2)




(Drawing 3)



(Drawing 4)

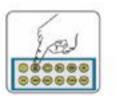

(Drawing 5)

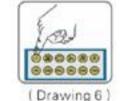

Attention:

- 1.It is forbidden use cleaning function when using other function.
- 2.It is forbidden t use the alkaline compounds to clean the stean generator:
- 3.It is forbidden t use the solid cleaning agent to clean the steam generate so as to avoid plugging the pipes.

We recommend that you use citric acid solution to clean the steam generator

Troubleshooting

Malfunctions	Causes	Solutions	Malfunctions	Causes	Solutions
Chromatherapy light doesn't work	Plug is off. Control circuit board is burnt.	Re-plug in the plug or replace plug. Contact with dealer or the manufacture after-sale department.	Steam key si- gnal on, but no steam comes	Temperature limiter works or heater is burnt.	1.Ask professional people to repair
Slow water	Supply water pressure is low.	1.Check supply water pressure.	out	1.The circuit of light connec-	
outlet 2.Water inlet block.		Clean water inlet filter.	Colorful light	tion is break or the lamp	Replace it or re-fasten it. Replace.
water outlet valve can' t pop-up or it is leaking the screw water dive 2. The pulling outlet is br	The waste cover is leakage, the screw is loose or the	outlet valve, fasten the screws or	doesn't work	seat is loose. 2.The light board is broken.	
	water divert adjusts too low. 2. The pulling cord of water outlet is broken. 3. The washer is upeven. 3. The washer is upeven.	adjust the top hole to the proper place. 2.Replace with new rubber. 3.Dismantel the water outlet, level the washer and re-install it.	ew rubber. vater outlet, level Ventilator do- esn't work	1.Plug is off. 2.Fan blade is blocked. 3.Ventilation fan broken.	Re-plug in. Drive the fan gentlely after opening. Replace broken ventilator.
Display panel doesn't work	Power off or wrong wiring. Switched off. Wire connection to control box is loose.	To provide power supply and do correct wiring. Turn on the switch. Refasten the wiring connection.			