

User Manual

Steam Iron

MODEL: WSI100
WSI200
WSI300
WSI400

1. READ these instructions carefully before installing and operating the steam iron.
Keep them for further reference.
2. Record in the space below the "SERIAL NO." found on the nameplate on your steam iron and retain this information for future reference.

SERIAL NO.:

Please save sales receipt for warranty.



Westinghouse

INNOVATION YOU CAN BE SURE OF

CONTENTS

SAFETY INFORMATION

Important Safety Instructions	3
Electrical Requirements	5

SET UP & USE

Installation Guide	5
Parts & Features	6
Operation Instructions	7
Functions	8
Helpful Tips	10

CLEANING & CARE

.....	11
-------	----

TROUBLE SHOOTING & WARRANTY

Before You Call For Service	13
Customer Service	13
Troubleshooting	13
Limited Warranty	14

MEMO

.....	15
-------	----

PRODUCT REGISTRATION

Thank you for purchasing our Westinghouse product. This easy-to-use manual will guide you in getting the best use of your steam iron.

Remember to record the model and serial numbers. They are on a label on the bottom of the steam iron.

Staple your receipt to your manual. You will need it to obtain warranty service.

Model number

Serial number

Date of purchase

SAFETY INFORMATION

DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death

WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death

CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, basic safety precautions should be followed, including the following

READ ALL INSTRUCTIONS BEFORE USING

1. Before connecting the appliance, check if the voltage indicated on the rating plate corresponds with the mains voltage in your home.
2. Use the iron only for its intended purpose, for ironing fabrics on ironing board. To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body.
3. The iron should always be turned to the MIN setting before connecting or disconnecting from the power supply. Do not pull on the cord to disconnect the plug from the wall socket. Instead, grasp the plug and pull on the plug to disconnect the iron.
4. If the power cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
5. When you have finished ironing or when you are leaving iron unattended:
 - turn the Steam Control Knob to position "0", and the Temperature Control Dial to "OFF" or MIN
 - stand the iron upright,
 - disconnect the iron from the wall outlet.
6. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Do not leave the iron unattended while the iron is connected or on ironing board.
7. Do not immerse the iron or the cord into water or any other liquid.
8. Burns can occur from touching hot metal parts, hot water or steam. These parts become hot and may cause burns. Take care if you turn the iron upside downs: there may be not hot water in the tank.

SAFETY INFORMATION

9. The plug and cord should not be allowed to touch the hot sole plate. Let the iron cool down completely before taking it away. Coil the cord loosely around the iron for storage.
10. Always disconnect the iron from the wall outlet before filling with water or when emptying the water after use.
11. To avoid an overloaded circuit, do not operate another high voltage appliance in the same electric circuit.
12. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the iron shall be used. A cord for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or tripped over.
13. The iron must be used and rested on a stable surface. When placing the iron on its Heel Rest, ensure that the surface on which the Heel Rest is placed is stable.
14. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
15. The iron is for household use only.
16. To protect against burns or injury to persons, do not direct steam toward the body when ironing or self-cleaning.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

- NOTE:** Some parts of the iron have been slightly greased and as a result, the iron may smoke slightly when switched on for the first time. It will not happen again after a few uses.
- Before using for the first time remove any protective films or stickers from the sole plate and the cabinet. Clean the sole plate with a soft cloth.
 - When using the iron for the first time, test it on an old piece of fabric to ensure that the sole plate and water tank are completely clean.

SAFETY INFORMATION

ELECTRICAL REQUIREMENTS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

NOTE: This appliance requires a minimum of 1200 watts* and it should be the only appliance operating on the circuit.

* May vary depending on model

POWER SUPPLY CORD

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
2. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman to install an outlet near the appliance.
3. If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.
 - a) Use an extension cord rated no less than 10-amperes.
 - b) The marked electrical rating of the cord set or extension cord must equal to or be greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

NOTE: Neither Westinghouse nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the steam iron
2. Check the steam iron for any damage. If there is any damage, do not operate the steam iron. Contact the Customer Satisfaction Center, see page 13.
3. Make sure that the power supply cord is undamaged and does not run under the steam iron or over any hot or sharp surface.
4. The receptacle used for power must be readily accessible so that the cord can be quickly reached and easily unplugged in an emergency.

SET UP & USE

PARTS & FEATURES

WSI100 & WSI200

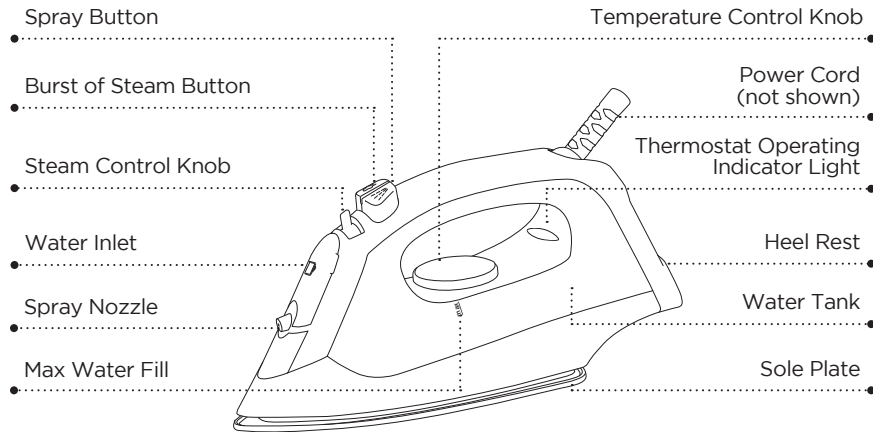


Diagram for instructional purposes only.

WSI300 & WSI400

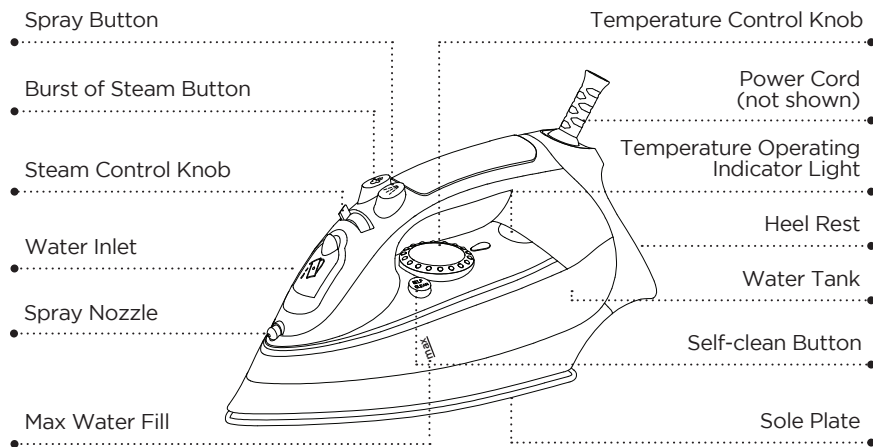


Diagram for instructional purposes only.

SET UP & USE

OPERATION INSTRUCTIONS

HOW TO FILL WITH WATER

1. Set the Steam Control Knob to "0" and the Temperature Control Dial to "MIN."
2. Unplug the iron from the wall outlet, and wait for the iron to cool down.
3. Pour water into the Water Inlet: -Fill up to the maximum level "MAX." Do not over fill.

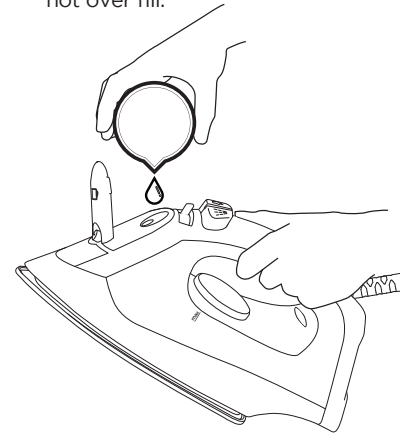


Diagram for instructional purposes only.

CHOICE OF WATER

This iron can be used with normal tap water. If the water in your area is particularly hard, it is advisable to use distilled or demineralized water. Do not use chemically descaled water or any other liquids for refilling.

TEMPERATURE SETTING

1. Stand the iron upright on a stable surface. Insert the plug in the wall socket.
2. Turn the Temperature Control Dial to the desired temperature setting.
3. The desired temperature has been reached when the thermostat operating light has turned off. The thermostat operating light will turn on and off from time to time, indicating that the selected temperature is being maintained.

TEMPERATURE CONTROL SETTING

1. Always check garment label for ironing instructions before ironing garment.
2. First you should sort the laundry: Wool with wool, Cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature and progress to the higher ones because the iron heats up quicker than it cools down.
3. If the fabric consist of various kinds of fibres (e.g. cotton with polyester) you must always select the ironing temperature for the material with the lowest advised temperature.

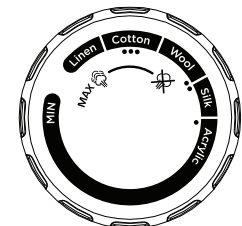



Diagram for instructional purposes only.

SET UP & USE

FUNCTIONS

SPRAYING (ALL MODELS)

This function can be used with steam or dry ironing and does not affect the ironing temperature

1. Check the water level. Add water if needed.
2. Aim the nozzle towards the garment.
3. Press the Spray Button, . Repeat if spray does not work immediately.

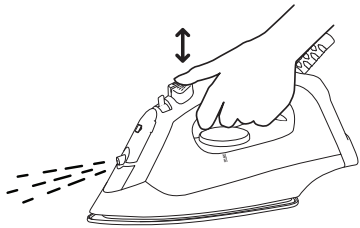


Diagram for instructional purposes only.

STEAM IRONING (ALL MODELS)

This function can be used only at higher ironing temperatures.

- For moderate steam
- or MAX For maximum steam

1. Check the water level. Add water if needed.
2. Stand the iron upright and be sure the temperature dial is set to MIN.
3. Plug the power cord into electrical outlet.
4. Turn the Temperature Control to the “••,” “•••” or MAX setting. Consider the fabric type to be ironed.

5. The temperature operating indicator light turns off when the required temperature is reached. The iron is ready for use. The light will go ON and OFF while ironing.
6. Turn the Steam Knob to the required position, steam starts coming out from the holes in the sole plate.

NOTE: · With conventional steam ironing, water may leak from the sole plate if too low a temperature as been selected. If this happens, turn the Temperature Control to the advised position. Steam will recommence as soon as the appropriate temperature has been reached.


DRY IRONING (ALL MODELS)

1. Ensure that the Steam Control Knob is in position “O.”
2. Select the setting on the Temperature Control. Consider the fabric type to be ironed.
3. When the temperature operating indicator light turns off, the required temperature is reached. The iron is ready for use.

SET UP & USE

BURST OF STEAM (ALL MODELS)

This function provides an extra amount of steam to remove stubborn wrinkles.

1. Check the water level. Add water if needed.
2. Turn the temperature control to the position “MAX.”
3. The temperature operating indicator light turns off when the required temperature is reached.
4. The iron is ready for use.
5. Press the Burst of Steam button once, .
6. Steam will penetrate into the garment removing the wrinkles.
7. Wait a few seconds before pressing the Steam Control Knob again when there are stubborn wrinkles.

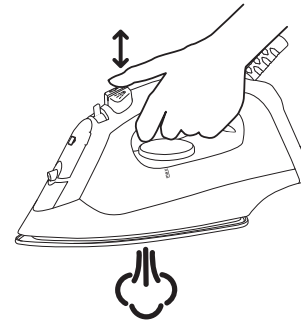


Diagram for instructional purposes only.

VERTICAL STEAMING (ALL MODELS)

To get better result when using vertical steam, hang the garment on a clothes hanger. Curtains and rapes may also be steamed once they're hung. Hold the iron away from your body, close to but not touching the fabric. Pull the fabric

tight with your free hand and pump the Vertical Steam Button (Steam Button) at 2-5 seconds intervals as you pass the iron over the wrinkled fabric.

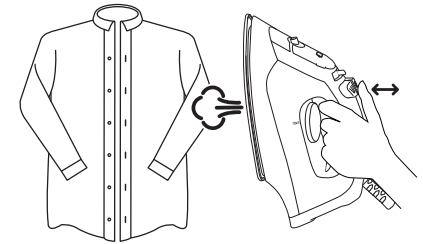


Diagram for instructional purposes only.

ANTI-DRIP SYSTEM (ONLY APPLIES TO WSI300 AND WSI400)

When the temperature of the iron drops too low, the water chamber valve automatically closes. This prevents hot water from spilling out through the vents of the soleplate.

ANTI-CALC SYSTEM (EXCLUDES MODELS WSI100 AND WSI200)

Your iron contains an anti-scale cartridge to reduce scale deposits.

This considerably prolongs the operational life of your iron.

The anti-scale cartridge is an integral part of the water tank and does not to be replace.

SET UP & USE

AUTO SHUT-OFF (TIMED, 3-WAY, ETC) (ONLY APPLIES TO WSI200, WSI300 AND WSI400)

The Auto Shut-Off feature (or setting the thermostat to "OFF") is not intended to take the place of unplugging the cord. Disconnect the electric iron when not in use! Even though the iron is unplugged the soleplate is still hot. Be sure to rest the iron on its heel, away from fabric.

1. When the iron is not moved with the soleplate facing down (Fig. A) or lying on its side (Fig. B) for 30 to 35 seconds approximately, the iron will automatically turn off the power to the heater.
2. When the iron is vertical on the Heel Rest (Fig. C) for more than 8 to 9 minutes approximately, the iron will automatically turn off the power to the heater.
3. To turn the heater back on and resume ironing, simply move the iron in any direction. Place the iron on its Heel Rest and allow the iron to reheat before resuming ironing.

NOTE: The Auto Shut-Off System works regardless of position of the Temperature Control Knob.

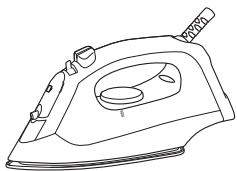


Fig. A
Soleplate facing down
30-35 seconds

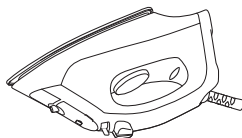


Fig. B
Steam iron on its side
30-35 seconds

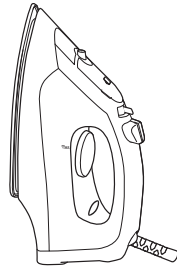


Fig. C
Steam iron on its heel rest
8-9 minutes

HELPFUL TIPS

- Always read garment labels and follow the manufacturer's ironing instructions.
- Sort the articles to be ironed according to the type of fabric.
- You should first iron garments requiring low temperature to avoid damaging them with an iron that is too hot.
- If you are unsure of the fabric content of the garment, test a small area, such as a seam or facing, before ironing a visible area. Start with a low temperature and gradually increase the heat to find the best setting.
- When changing the temperature from a high setting to a low setting, allow approximately 5 minutes for the lower temperature to be reached.
- When steam ironing, use long, slow passes over the fabric. This will allow the steam to penetrate the fabric while allowing the heat of the soleplate to dry out the moisture.
- To iron linens, turn garment inside out. Be careful not to use an iron that is too hot because the lining may melt or stick to the soleplate.
- To iron zippers, use an ironing cloth or make sure the zipper is closed and iron over the flap. Never use iron over an unprotected zipper.

CLEANING AND CARE

SELF-CLEAN FUNCTION

You can use the self-clean function to remove scale and impurities. Use the self-clean function once every two weeks. If the water in your area is very hard the self-clean function should be used more frequently.

ATTENTION: FOR MODELS WSI100 AND WSI200 ONLY

1. Make sure the steam iron is unplugged and the temperature is in the MIN position.
2. Check the water level which should be filled to the maximum.
3. Plug the unit into the electrical outlet and set the iron on its heel on a flat stable surface.
4. Set the steam control to the self-clean setting and select maximum on the temperature control dial.
5. When the temperature operating indicator light has gone out, unplug the unit.
6. Hold the iron horizontally over a sink, press and hold the steam control and gently shake the unit forward and back.

NOTE: Steam and hot water will come out of the vents of the soleplate. Flakes of impurities if present will be flushed out.

7. Release the steam control when all of the water in the tank has been used.

Repeat the self-clean process if the iron still contains a lot of impurities.

ATTENTION: FOR MODELS WSI300 AND WSI400 ONLY

1. Make sure the appliance is unplugged.
2. Set the steam control knob to position "O"
3. Fill the water tank to maximum level.

4. Select the maximum ironing temperature.
5. Put the plug in the wall socket.
6. Unplug the iron when the amber temperature operating indicator light has gone out.
7. Hold the iron over the sink, press and hold the self-clean button and gently shake the iron and fro. (Steam and boiling water will come out of the soleplate. Impurities and flakes (if any) will be flushed out.)
8. Release the self-clean button as soon as all water in the tank has been used up.

CLEANING THE EXTERIOR OF YOUR STEAM IRON (ALL MODELS)

1. Turn the Temperature Control Dial to MIN, then disconnect the iron from the wall outlet and let it cool down completely.
2. Deposits and other residues on the sole plate and can be removed with a cloth soaked in a vinegar/water solution.
3. The casing may be wiped with a damp cloth and then polished with a dry one.
4. Never use any abrasives to clean the sole plate.
5. Keep the sole plate smooth; avoid contact with metal objects.

CLEANING AND CARE

STORAGE (ALL MODELS)

1. Turn the Temperature Control to “•” and set the Steam Control Knob to position “0” (=no steam).
2. Disconnect the iron from the wall outlet.
3. Pour any remaining water out of the water tank.
4. Stand the iron upright and let it cool down completely.
5. The power cord can then be wound around the iron.
6. Always store the iron in an upright position.

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating. Then the iron should be taken to the nearest authorized service facility.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE STEAM IRON FAILS TO OPERATE:

- A) Check to make sure that the steam iron is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- C) Vigorously move the iron to re-set the auto shut-off.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE STEAM IRON YOURSELF.

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 1-855-855-0294.

DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the steam iron still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Soleplate stays cold	The Temperature Control is set too low Auto shut-off	Set the Temperature Control to the required position Move the iron
Steam iron does not produce steam	The steam iron is not hot enough	Set the Temperature Control to “••,” “•••” or MAX setting
Water droplets drip onto the fabric during ironing	The Temperature Control is set too low You have not closed the cap of the Water Inlet properly	Set the Temperature Control to the advised position. Make sure the Water Inlet is closed properly

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Westinghouse brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service.** W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured steam iron equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass or replaceable light bulbs or parts and other accessory items that are included with the unit.
12. Transportation and shipping costs associated with the replacement of the unit.
13. Food loss for loss due to product failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your steam iron.

15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **1- 855-855-0294**.

W Appliance Company LLC,
New York, NY 10018

MEMO



®
®, WESTINGHOUSE, and INNOVATION YOU CAN BE SURE OF
are trademarks of Westinghouse Electric Corporation. Used under
license by W Appliance Company LLC. All Rights Reserved.