

Use And Care Manual



Cleaning

Periodic Vacuuming with proper attachments suggested.
Spot clean with mild detergent free soap, testing first in an inconspicuous area.



Reminder

Unlike standard corded shades/blinds, Cordless shades/blinds utilize a spring tension device to lift and lower your window treatment. When your shade/blind is in the extended position for a long period of time you may experience temporary lifting difficulty; this can be corrected by completely raising the shade/blind. The best way to operate your shade is to gently push or pull to lift and lower your shade/blind with even pressure from the middle of the shade. This will ensure proper function of your window treatment for years to come.