

Item # 152354, 167974, 169089  
Model #5028

# Installation Guide

## Flexible Opening Cable Wall Plate

### PACKAGE CONTENTS

- (1) Flexible Opening Cable Wall Plate
- (2) Phillips head screws

### TOOLS NEEDED\*

- # 2 Phillips head screwdriver
- Drywall Saw
- Pencil

\*The use of power tools is not recommended




Scan Me

For video information visit [homedepot.com](http://homedepot.com), search SKU 152354, 167974, 169089, or model number 5028

## Installation


### 1 PREPARING THE INSTALL LOCATION

- Use a drywall saw (not included) and the included template to cut a hole in your install location. Then route your cables through the opening in the wall.

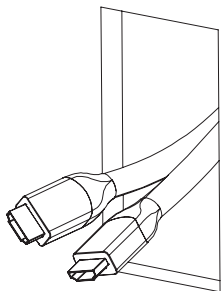


### 2 ROUTING THE CABLES

- Route your low voltage cables through the opening in the back of the Flexible Opening Cable Wall Plate and out through the front of the Plate.

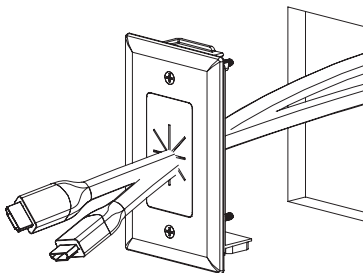


### 3 INSTALLING THE PLATE


- Secure the Plate to the wall using a #2 Phillips head screwdriver to tighten the attached screws with wings. **TIGHTEN BY HAND WITH SCREWDRIVER AND DO NOT OVER-TIGHTEN THE SCREWS.**

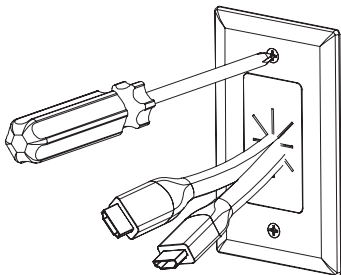

### 4 INSTALLATION COMPLETE

- Installation is complete. You can now connect your home theater devices and equipment.

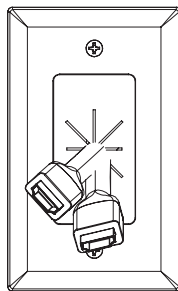

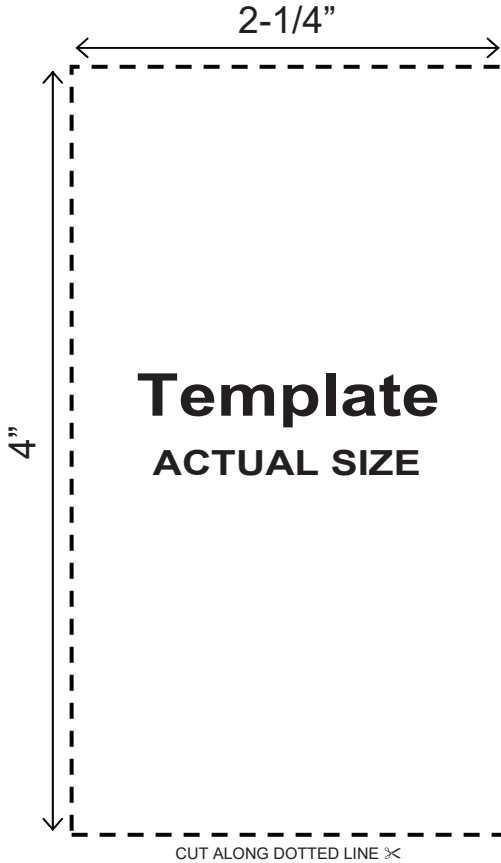

Please read all instructions and safety information before use.  
Retain this manual for future reference.



**CAUTION:** When using tools always follow the manufacturer's safety guidelines.