Assembly Instructions: 7019-5P (Calgary)

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.


- 1. From the parts bag remove the mounting strap (A) assembly. One end of nipple (F) should be attached to mounting strap (A) with washer (C) and hex nut (D) in place. The other end should have canopy loop (H) attached. Attach mounting strap (A) to the junction box using mounting screws (B) and a screwdriver. Tighten securely.
- 2. Unscrew canopy loop collar (I) from canopy loop (H). Pass canopy (G) over the mounted canopy loop to test the height. Approximately half of the canopy loop's exterior threads should be exposed, and the canopy loop collar should fit snugly onto the canopy loop. Remove canopy (G) and adjust the height of nipple (F) and canopy loop (H) until the desired height is reached.

ASSEMBLING THE FIXTURE

- 3. Thread the bottom end of the fixture's central rod (P) to the bottom nipple (Q). Carefully pull the fixture wires straight from the central rod (P) and then thread the top end of the fixture's central rod (P) to the connector (W). Attach the top loop (L) to the top nipple (M).
- 4. Attach the top end of the decor arms (N) to the central housing (X) using a screwdriver and small screws (O). Attach decor arms (N) to the mesh frame (S) using a screwdriver and screws (R). Attach screws (R) through the mesh frame (S) and secure using small nuts (T).
- 5. Attach chain connectors (K) to each end of chain (J) before attached one end of the chain with chain connector to the top loop (L) and the close the chain connector to secure. Connect the remaining end of the chain with chain connector (K) to the canopy loop (H).
- 6. Feed the fixture's wires up through the chain (J) (every three links or so), canopy loop (H). and canopy (G). Pull the wires until taut. Gently slide canopy loop collar (I) and canopy (G) down onto the chain/wires.

CONNECTING THE WIRES

7. Have an assistant support the weight of the fixture while completing the wiring. Cut away excess wire leaving 8 to 10 inches of excess wire. Attach the fixture's wires to the house wires which were pulled earlier from the junction box through the mounting strap (A). Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

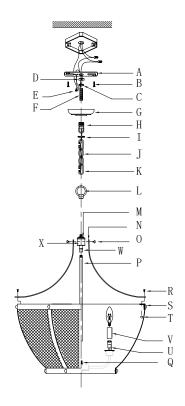

How to Identify the Fixture's Wires		
<u>Hot</u>	<u>Neutral</u>	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	
M 7		House Wire
		House Wire
Fixture Wires		—— Hot
Fixture Wires		——— Neutra
		—— Hot

FINISHING THE INSTALLATION

- 8. Lift canopy (G) up to the ceiling and mounting strap (A) and slide canopy loop collar (I) up beneath the canopy (G). Tightly thread the canopy loop collar (I) onto the canopy loop (H) to secure canopy (G) in place.
- 9. Slide candle sleeves (V) over sockets (U).

Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

