


USE AND CARE GUIDE

ARROW GAZEBO REPLACEMENT NETTING

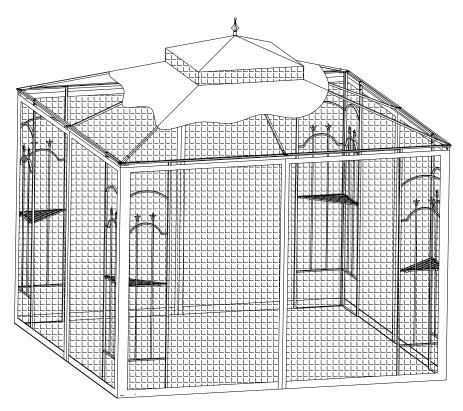

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	
Safety Warnings	
Warranty	2
What is Covered	2
What is Not Covered	2
Pre-Assembly	2
Planning Assembly	

Package Contents	3
Assembly	4
Care and Cleaning	5

Safety Information

SAFETY WARNINGS



WARNING: Keep all flame and heat sources away from this gazebo fabric.



WARNING: This application of any foreign substance to the gazebo fabricc may render the flame resistent properties ineffective.



WARNING: This gazebo is made with fabric that meets CPAI - 84 specifications for flame resistence. It is not fire proof. The fabric will burn if left continuous contact with any flame source.

Warranty

1 YEAR FABRIC WARRANTY

WHAT IS COVERED

We warrant the fabric to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HamptonBay.com

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.


To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to complete the assembly of this product.

Pre-Assembly (continued)

PACKAGE CONTENTS

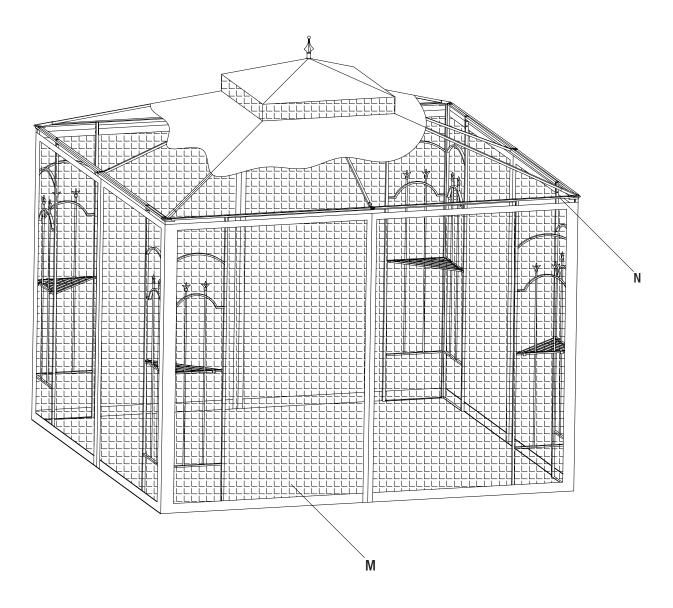


Part	Description	Quantity
М	Netting	4
N	Plastic ring	48

Assembly

1 Putting up the netting

- Put up the netting (M) onto the track tubes (F) with the plastic rings (N).
- □ Hang the fabric buckles in the middle of the netting (M) onto the bolts of the corner connectors (I).

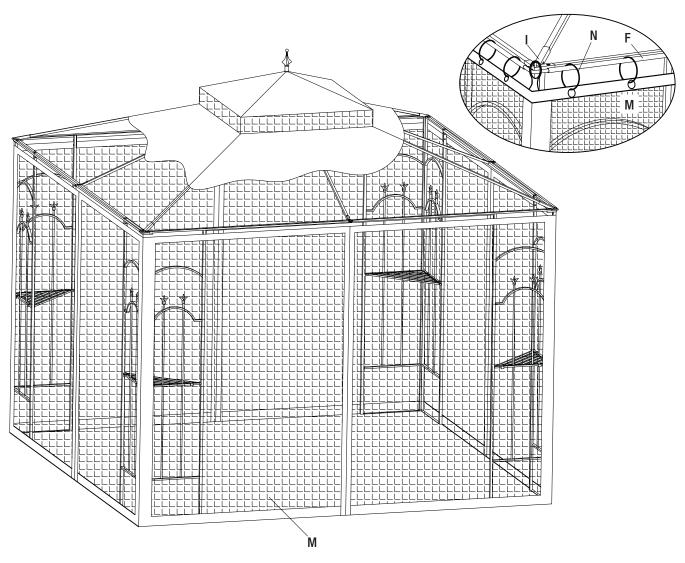

Care and Cleaning

- For best results, clean the net with a damp cloth, and dry the frames thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- □ Do not clean with abrasive materials, bleach, or solvents.
- Store the netting in a dry, sheltered place when not in use.
- □ Keep the netting away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON HAMPTONBAY.COM

Retain this manual for future use.