Model No: WM3669

**UPC CODE:** 0-65857-15761-1

### **NOTE:**

THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



### **LOT NUMBER:**

(TAKEN FROM CARTON)

### **DATE OF PURCHASE:**

\_\_\_\_\_/ \_\_\_\_\_/ \_\_\_\_\_\_/

#### DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

#### **CUSTOMER SERVICE**

If you are missing parts or have any questions about this product, contact our customer service representative first!



#### CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413 12345 Albert-Hudon Boulevard, Suite 100 Montreal, Quebec Canada H1G 3L1

E-MAIL: das@dorel.com

### **A** WARNING

- \*Ensure all parts and components are present before beginning assembly.
- \*Assemble on soft, smooth surface to prevent damage to product finish.
- \* Assembly and handling may require two people.
- \* Estimated assembly time is 45 60 minutes.
- \* Read all instructions completely before assembly.
- \* **Do not** use power tools.
- \* CAUTION: Adult assembly required.
- \* Phillips head screw driver is not included.

#### CARE AND CLEANING

Dust table regularly with a soft, dry cloth to prevent soil build up. A dampened cloth may be used occasionally to clean the surface. Dry immediately and buff lightly, following the grain. Avoid using harsh cleaners and abrasive products. Use coasters to prevent the formation of moisture rings and trivets to protect from hot items. Cover extension leaves (if applicable) with a soft protective fabric before storing. Do not slide objects across the surface - always lift them. Wipe away spills immediately off the seat fabric to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

#### **MAINTENANCE**


Check bolts/screws periodically and tighten them if necessary.

#### LIMITED WARRANTY


Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing or fading of the fabric is not covered under the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.


WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

### HARDWARE LIST

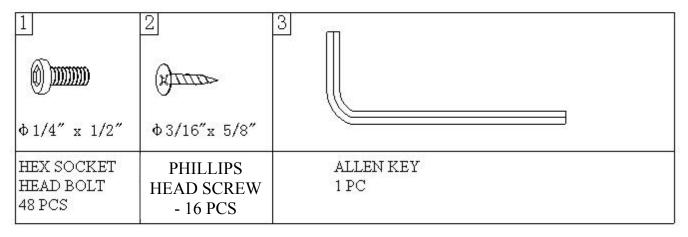

### PARTS LIST

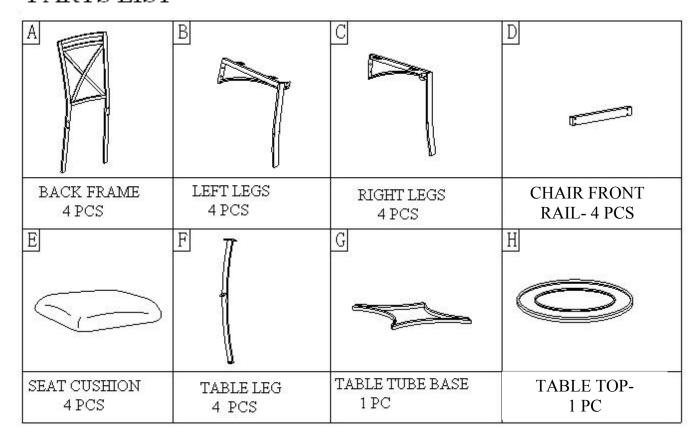


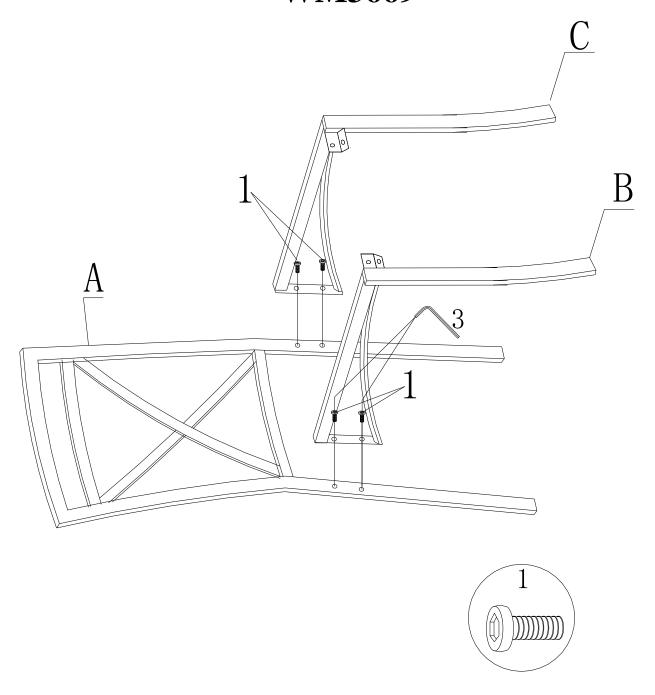

### STEP 1

Attach left leg (B) and right leg (C) to the back frame (A) with hex socket head bolts (1). Use Allen key (3) to tighten bolts.


**NOTE:** Do not fully tighten bolts. Loose bolts will help you to assemble other parts in the following steps.

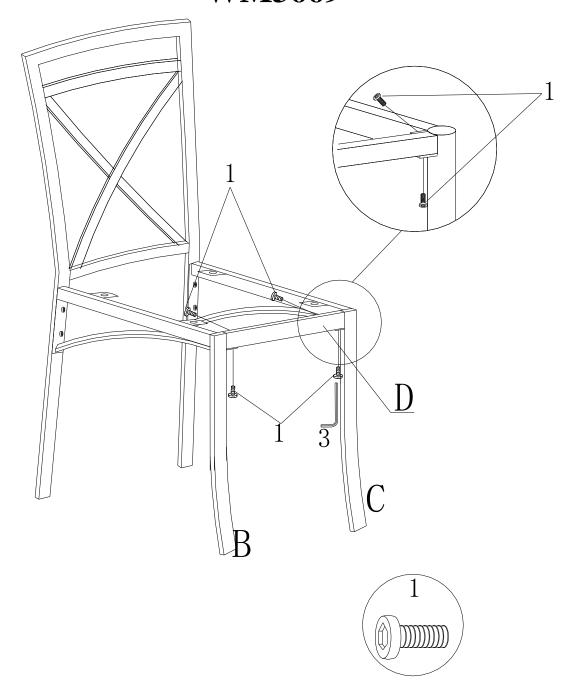

### STEP 2

Attach chair front rail (D) to left leg (B) and right leg (C) with hex socket head bolts (1). Use Allen key (3) to tighten bolts.

**NOTE:** Do not fully tighten bolts. Loose bolts will help you to assemble other parts in the following steps.

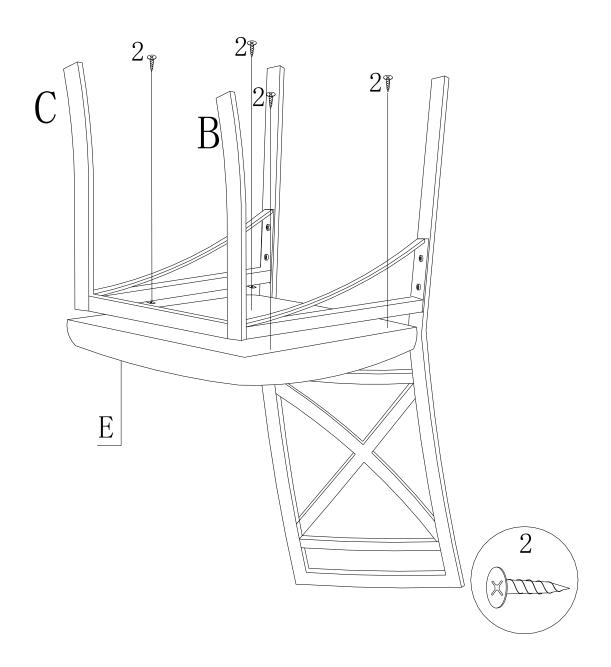



### STEP 3

Attach seat cushion (E) to left leg (B) and right leg (C) with Phillips head screws (2) using a Phillips head screwdriver (not included).

Fully tighten all bolts and screws previously installed in steps 1, 2 and 3.

Repeat step 1 to step 3 to assemble the other three chairs.

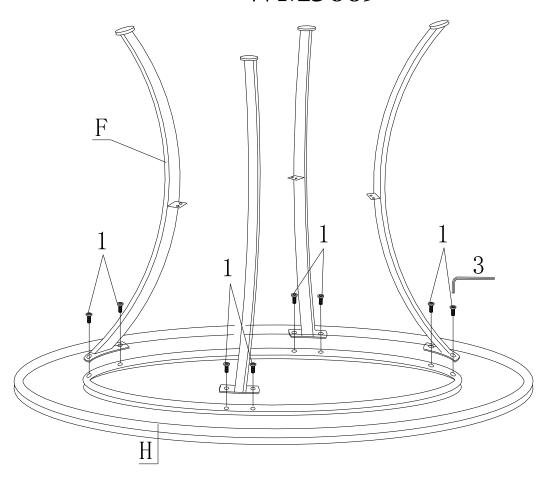


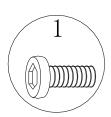

### STEP 4

Attach table legs (F) to table top (H) with hex socket head bolts (1). Use Allen key (3) to tighten bolts.

NOTE: Do not fully tighten bolts. Loose bolts will help you to assemble other parts in the following steps.

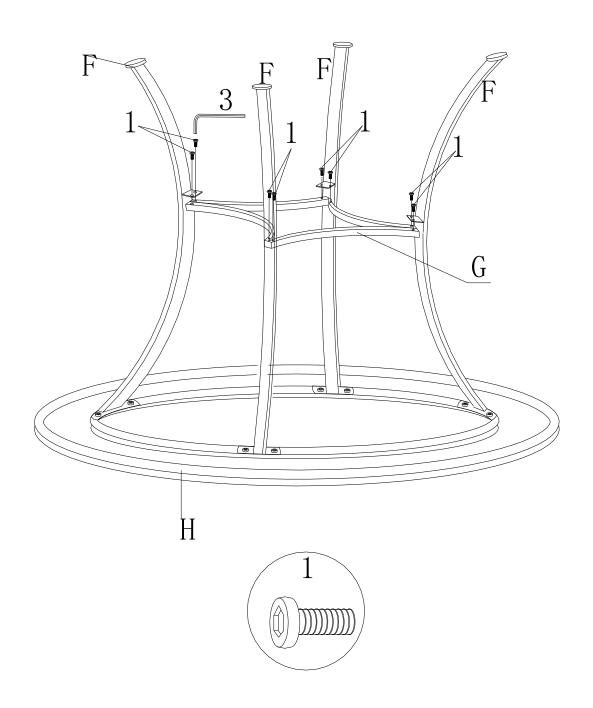

### STEP 5

Attach table tube base (G) to table legs (F) with hex socket head bolts (1). Use Allen key (3) to tighten bolts.


**NOTE:** Fully tighten all bolts installed in steps 4 and 5.



### STEP 6

Turn the table upright.

! CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

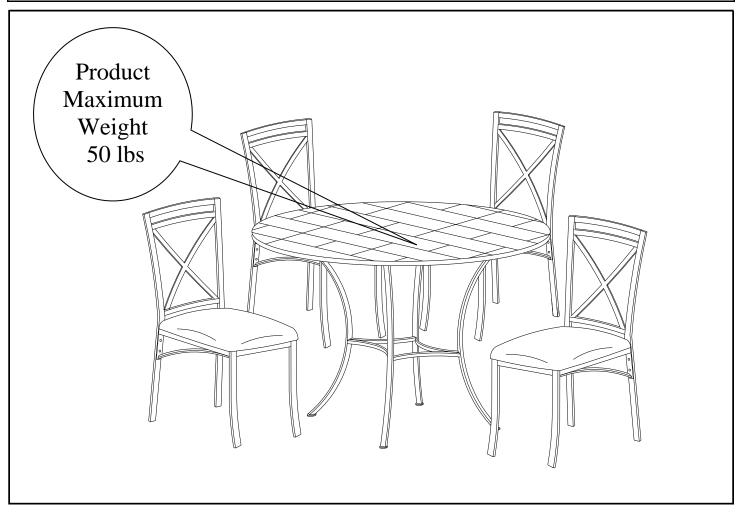

That's it! You've finished assembling your dining set.

#### DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

### **Customer Service**

#### PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

	Service Phone Number 1-800-295-1980 Service Fax Number 514-353-7819	Email: das@dorel.com
Request Date:		
Name:		
Shipping Address:		
Street & Number:		
City & State:		
Zip Code:		
Time Phone Number:		
(including area code)		
& Place of Purchase:		
Part(s) description and quantity: (Please be sure to list model number or SKN number)		