
HAMPTON BAY

USE AND CARE GUIDE

FLINTRIDGE METAL GLIDER

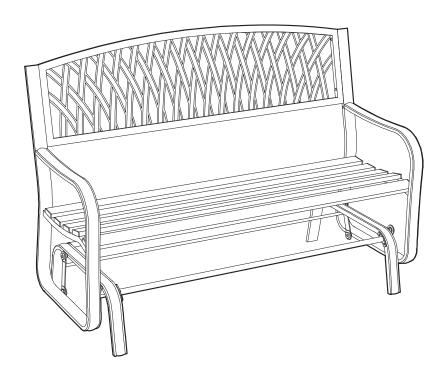

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

Table of Contents

Fable of Contents	2
mportant Safety Instructions	2
Narranty	_
What is Covered	
What is Not Covered	

Pre-Assembly	3
Planning assembly	3
Hardware Included	
Package Contents	
Assembly	
Care and Cleaning	_

Important Safety Instructions

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by, or near children, or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.
- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish ,please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation(rusting) will occur once these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint(not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

2 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 2 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit HAMPTONBAY.COM.

Production Number: 2020200012

Pre-Assembly

 
PLANNING INSTALLATION

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.






















Part	Description	Quantity	Additional hardware
AA	Bolt M6*15	8	1
BB	Bolt M6*30	18	2
CC	Bolt M6*40	4	1
DD	Spring Washer Outer diameter9*Inner diameter6.5*Thickness1.5	22	3
EE	Flat Washer Outer diameter12*Inner diameter6.5*Thickness0.7	30	3
FF	Plastic Washer Outer diameter15*Inner diameter7*Thickness4	8	1
GG	Hex wrench	1	0
НН	Foot Pad Pre-assembled	2	0
II	Foot Pad Pre-assembled	2	0
JJ	Plastic Plug Pre-assembled	10	0

Pre-Assembly (continued)

PACKAGE CONTENTS

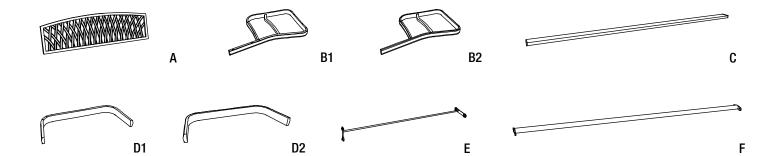

Part	Description	Quantity
Α	Back	1
B1	Handrail (Left)	1
B2	Handrail (Right)	1
С	Seat	5
D1	Leg (Left)	1
D2	Leg (Right)	1
E	Glide bar	2
F	Connect bar	2


Assembly

Connecting the Back and Handrail

□ Attach the Handrail (B1&B2) to the Back (A) using the bolts (CC), spring washers (DD) and flat washers (EE) with the hex wrench (GG). Do not tighten the bolts.



DANGER: To avoid destroying the finish, do not put the parts on the ground directly.

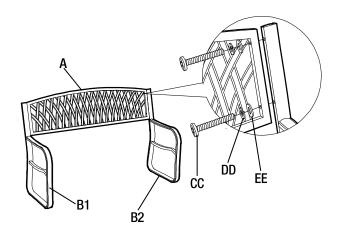


Connecting the Handrail and Seat

Connect the Handrail (B1&B2) with the Seat Insert a space (C) using the bolts (BB), spring washers (DD) and flat washers (EE) with the hex wrench (GG). Do not tighten the bolts.



DANGER: To avoid destroying the finish, do not put the parts on the ground directly.

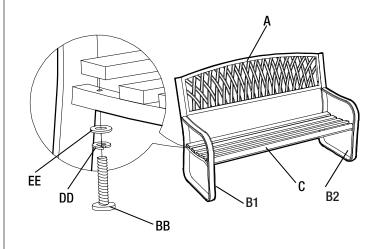


3 Connecting the Handrail and Glide bar

Connect the Handrails (B1&B2) with the Glider Bar (E) using the bolts (BB), flat washers (EE) and plastic washers (FF) with the hex wrench (GG). Do not tighten the bolts.



DANGER: To avoid destroying the finish, do not put the parts on the ground directly.

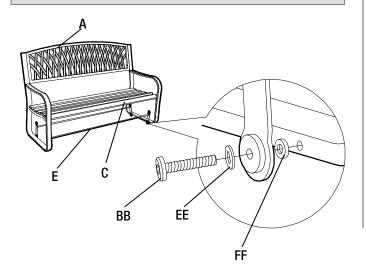


Connecting the Legs and Connect bar

Attach the Legs (D1&D2) to the Connect bar (F) using the bolts (AA), spring washers (DD) and flat washers (EE) with the hex wrench (GG). Do not tighten the bolts.



DANGER: To avoid destroying the finish, do not put the parts on the ground directly.

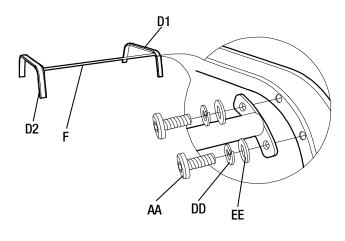


Assembly (continued)

5 Attaching the Legs

Attach the Legs (D1&D2) to the Connect bar (F) using the bolts (AA), spring washers (DD) and flat washers (EE) with the hex wrench (GG). Do not tighten the bolts.



DANGER: To avoid destroying the finish, do not put the parts on the ground directly.

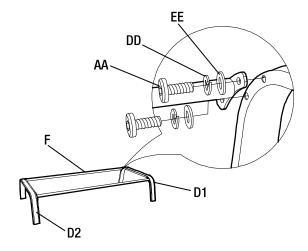


6 Connecting the Glide bar and Leg

Connect the Glider bar (E) with the Legs (D1&D2) using the bolts (BB), flat washers (EE) and plastic washer (FF) with the hex wrench (GG). Tighten all the bolts using wrench (GG).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

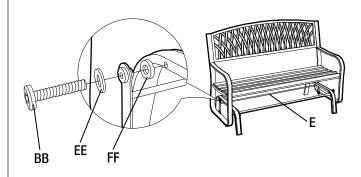

Care and Cleaning

Before using, clean the glider completely with a soft dry towel.
Do not put your glider in wet conditions where there is a risk of rust developing.
When not in use, store in a cool, dry area.

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.