
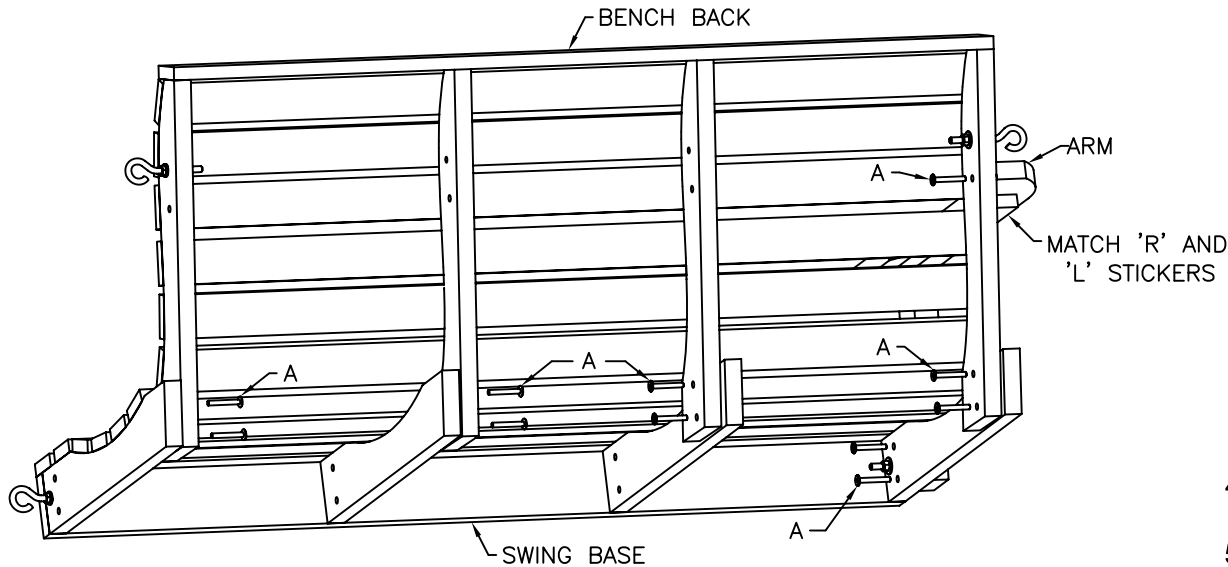
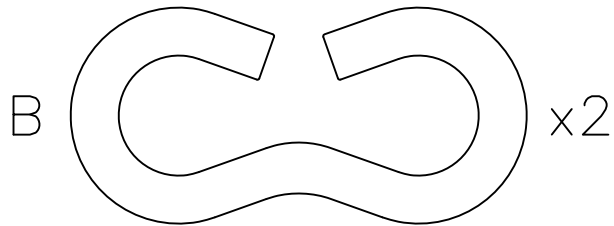




Do not fully tighten the bolts until all bolts are started. Once all bolts are inserted, then go back and tighten all the bolts.

WEATHERLY COLLECTION PORCH SWING ASSEMBLY INSTRUCTIONS

HARDWARE

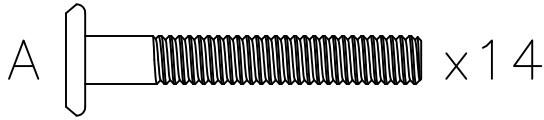

- 1) Attach Swing Back to Swing Base using eight A bolts
- 2) Attach the Arm Assembly to the Bench Base using two A bolts in the front and one A bolt in the arm
- 3) Repeat on other side

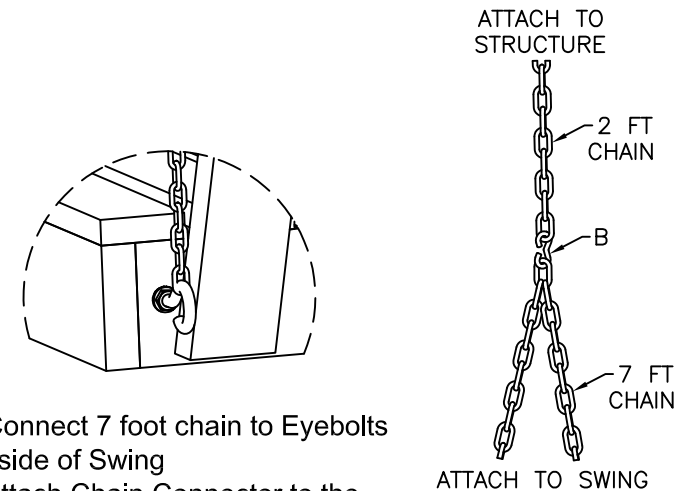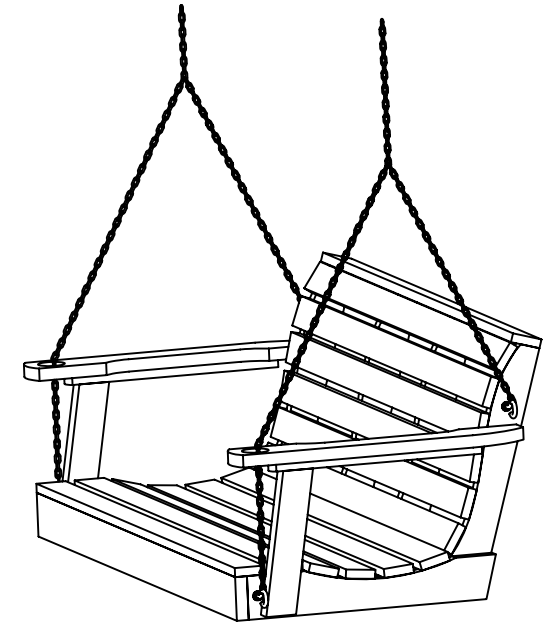

- 4) Connect 7 foot chain to Eyebolts on side of Swing
- 5) Attach Chain Connector to the center point of the 7 foot chain and to the 2 foot chain
- 6) Repeat on other side

IMPORTANT NOTE

Be sure to select a suitable structure when hanging the swing.

PORW1/PORW2
12.12.13

highwood[®]
NATURE'S CLOSEST RIVAL

For information on Care and Cleaning your **highwood**[®] product visit www.highwood-usa.com/care.html
Visit our Website and Facebook page to see more **highwood**[®] products!
www.highwood-usa.com www.facebook.com/highwoodUSA