

An illustration of various tools. On the left, a set of seven drill bits of increasing size is arranged in a row, next to a long-handled drill bit with a textured grip. To the right of the drill bits is a screwdriver with a black handle and a silver shaft. Below the screwdriver is a black flashlight with a silver lens and a silver switch. At the bottom left is a silver adjustable wrench with a blue and white patterned handle.

OWNER: Read your dishwasher *Use and Care Manual*. It contains important safety information for operating this appliance. It also has many suggestions for getting the best results from your dishwasher.

PN: 154427301/H
AW: 154427301/008
4/15

Read all instructions before installing dishwasher.

A black rectangular warning label with a white exclamation mark icon on the left. To the right of the icon, the word "WARNING" is printed in large, bold, white capital letters. Below "WARNING", the text "Tip Over Hazard" is printed in a smaller white font. At the bottom of the label, there are three lines of white text: "Do not use dishwasher until completely installed.", "Do not push down on open door.", and "Failure to follow this warning can result in serious injury."

Tools and Materials Needed for Installation

- Drill, Electric
- Driver, Socket $\frac{5}{32}$ ", $\frac{1}{4}$ ", $\frac{5}{16}$ "
- Flaring Tool / Tube Cutter (for copper tubing)
- Flashlight
- Gloves
- Level
- Pipe Joint Compound (for iron pipe plumbing) or
Pipe Thread Tape (for sealing threads)
- Pliers
- Safety Glasses
- Saw, Keyhole or $\frac{1}{2}$ ", $1\frac{1}{2}$ " to 2" Hole Cutters
- Screw Drivers, Slotted and #2 Phillips (magnetic tip preferred)
- Tape, Electrical or Duct
- Tape, Measuring
- Wire Stripper or Utility Knife
- Wrench, Hex-end
- Wrenches, 2 Adjustable (for copper tubing)
or 2 Pipe wrenches (for iron pipe plumbing)

- Drain Hose Clamp, 1 1/4" Diameter
- Elbow, 90° with a 3/8" National Pipe Thread or 3/4" Hose Thread Fitting
- Conduit Connector
- Wire Nuts, two (2) for 12-14 gauge wire
- Plumbers Tape

- “Y” Branch Tailpiece and Connector Kit (**See Step 4**)
- Air Gap Kit (**See Step 4**)
- Fasteners for floor anchoring (**See Step 9**)


Plumbing Supply Store
Plumbing Supply Store
Hardware Store

⚠ WARNING	
	Electric Shock Hazard Disconnect electrical power at the fuse box or circuit breaker box before beginning installation. Failure to follow this warning could result in death or serious injury.

- **Examine dishwasher and locate connections.** *See Step 4.*
- **Locate dishwasher where there is easy access to drain, water, and electrical lines.** The best location is on either side of the kitchen sink for access to existing plumbing and ease in loading dishes. *See Step 4.*
- **Electrical, water, and drain connections are not the same for all age, brands, or models of dishwashers.** Check the location and length of home utilities. *See Step 4.*
- **A 15-20 amp, grounded, 120 volt AC only, electrical supply is required.** *See Steps 4 and 8.*
- **If dishwasher drain hose will be connected to a food disposer for the first time, knock out plug located inside disposer inlet.** *See Steps 4 and 6.*
- **Kinked water or drain hoses can cause problems.** *See Step 6.*
- **Dishwashers need to be connected to a hot water supply with enough water pressure to insure an adequate fill.** *See Steps 4 and 7.*
- **Each home installation differs. You will need additional parts listed above to complete your installation.** *See Steps 4 and 7.*
- **Flush water line prior to making the final connection to prevent clogging of dishwasher's filter screen.** *See Step 7.*
- **The dishwasher will look, sound, and perform best when properly leveled.** *See Step 5.* (NOTE: If levelers are removed during installation, make sure the floor is flat and free of any obstruction.)
- **Anchor the dishwasher.** *See Step 9.*

1. Remove two (2) screws at front of the kickplate assembly using a #2 Phillips screw driver.
2. Tilt and pull forward to remove. **See Figure 1.**

NOTE: It is not necessary to remove the outer door for installation. However, you might find it more convenient to do so. You can find directions for removing door in Step 10.

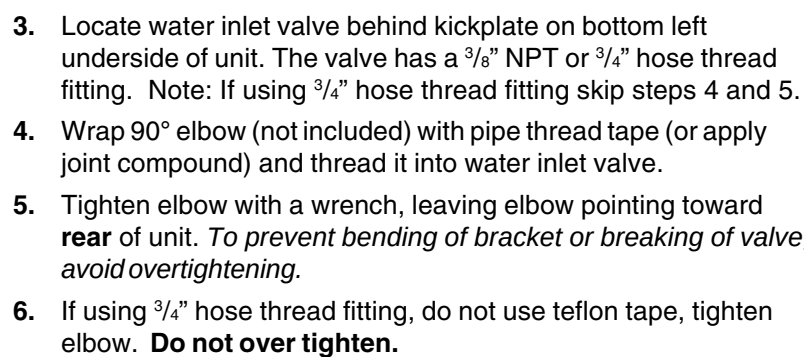

As a precaution, it is recommended, but not required that the cabinets enclosing all sides of the dishwasher (including the underside of the countertop) be sealed with an oil based paint or moisture-proof polyurethane to prevent possible steam/moisture damage.

WARNING	
	Electric Shock Hazard Observe all local codes and ordinances for electrical and plumbing connections. All electrical and plumbing work should be performed by qualified persons. Failure to follow this warning could result in death or serious injury.

-

2. Remove any carpet from area to provide motor clearance. *Floor should be flat and free of any obstruction.*

NOTE: If dishwasher is installed at end of a cabinet line, sides and back must be fully enclosed.

NOTE: You can order a Cabinet Seal Kit (Kit # 154528701) by contacting your dealer or parts supplier. This kit provides a seal between the unit and cabinets once installation is complete.

 
IMPORTANT: Do not cross drain, water, and electrical lines in front of dishwasher motor or frame.

- Figure 3**
-
- Left Side**
- 25
- 33 1/2" Min.
- From rear to center of water inlet valve.
- Front**
- 24
- 3 3/4"
- From floor to water inlet valve.
- Right Side**
- 49 1/4"
- 22 1/2"
- Door in open position
- Floor Line
- From rear to junction box.
- 17 3/4"
- Junction Box (not visible)
- *DIMENSIONS DO NOT INCLUDE INSULATION

1. The dishwasher operates on a 120 volt, 60 Hz electrical supply. Provide a separate circuit with a fuse or circuit breaker rated for at least 15 amps (20 amps if connected with disposer) but not more than 20 amps.
2. Note the locations of electrical supply and dishwasher's electrical junction box on right underside of unit behind kickplate assembly. **See Figure 3.**
3. Cut access hole in shaded area shown in **Figure 2.**
4. Pull electrical cable through hole into installation area.



1. Determine where you will connect to hot water supply. Review **Figure 3** and note the location of water inlet valve.

2. Be sure water inlet valve is protected from freezing. If valve freezes and ruptures, flooding may occur.
3. Determine amount of tubing needed to connect hot water supply to the unit's water inlet valve. Copper tubing must have a minimum $\frac{3}{8}$ " OD. High-pressure and high-temperature rated plastic tubing with a minimum **inner** diameter of $\frac{1}{4}$ " may be used. A shut-off valve installed **outside** dishwasher cabinet is best. **See Figure 4.**




IMPORTANT: Incoming hot water temperature should be at least 120°F (49°C). Water pressure should be between 20–120 psi.

1. Review **Figures 5, 6** and **7** to see the different ways to connect dishwasher to drain system. Choose method that best suits your need.

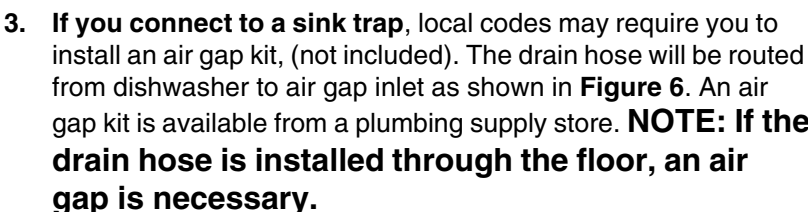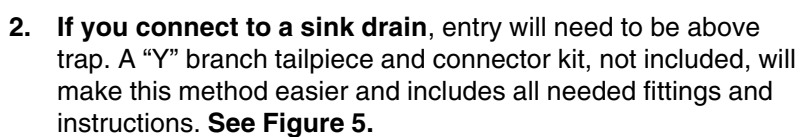


- 4. If you connect to a disposer**, the large end of drain hose will fit. **Figure 7(a). The knock out plug must be removed from inside disposer inlet before making the final fit to drain hose. See Figure 7(b).**

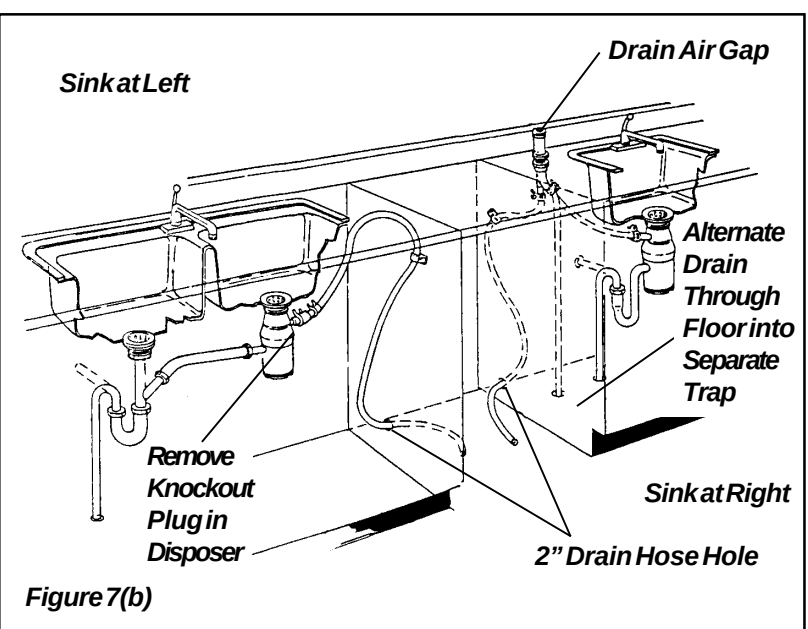


5. **Before cutting** drain hose access, check both sides of selected area to avoid interference. Cut a 2" diameter hole in shaded area shown in **Figure 2**.
6. If the cabinet wall is wood, sand edges of hole until smooth and rounded. If cabinet wall is metal, cover all sharp edges with electrical or duct tape to avoid cutting drain hose.

Care must be given during installation and removal of the dishwasher to avoid disconnection of the vent hose that is attached to the top of the dishwasher.

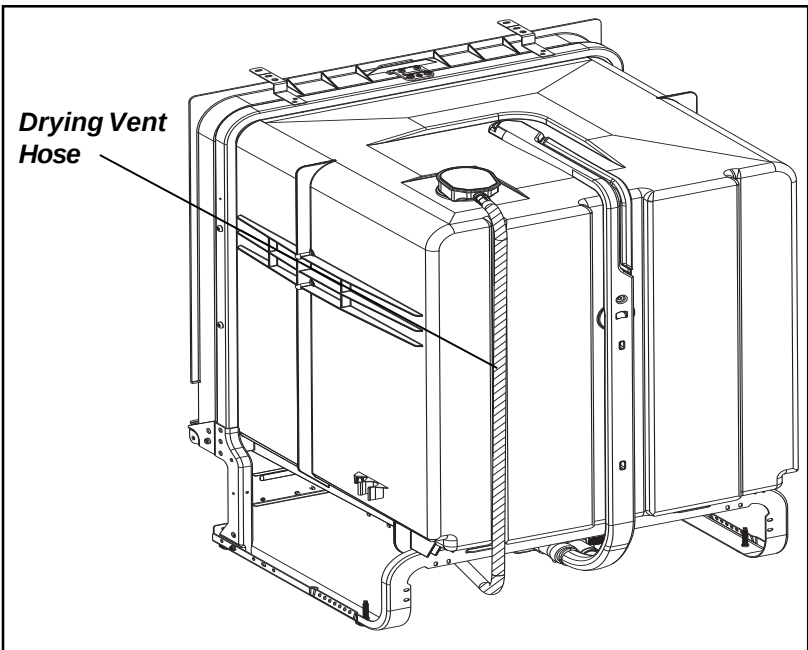

Leveling Dishwasher within Cabinets5


1. Measure height of cabinet opening from underside of countertop to floor. Check chart for height opening and suggested adjustment.

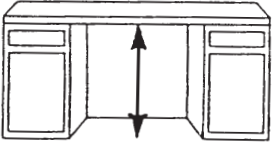


Leg Leveler Adjustment Chart	
Height of Cabinet Opening	Number of Turns to Adjust Levelers
34" (86.4cm)	0
34 1/8" (86.7cm)	2
34 5/16" (87.2cm)	6
34 1/2" (87.6cm)	9

For additional height add shims under levelers.

2. Move dishwasher to front of installation area.
3. Loosen the front and rear leveling legs by turning counterclockwise. Refer to chart for number of turns. **See Figure 8.** Front levelers should allow 1/4" below underside of countertop.

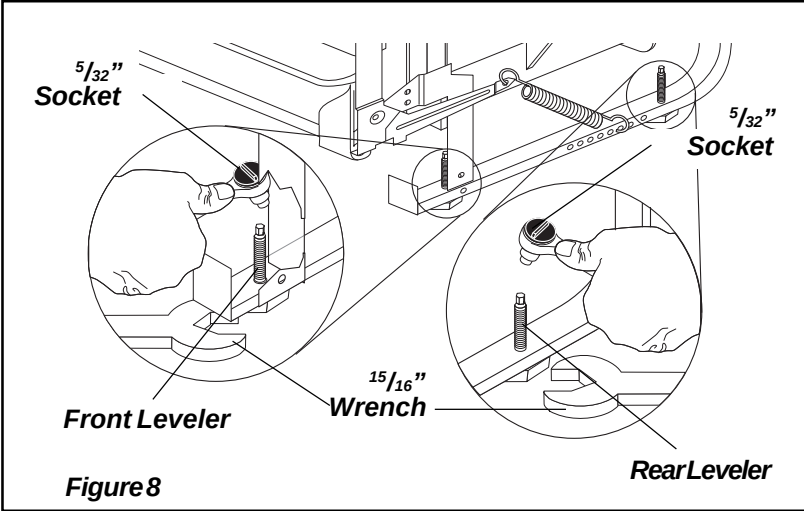

4. If levelers have to be removed, make sure floor is free of obstructions.
5. Place dishwasher inside cabinet area so that it is centered in opening. Use caution when moving dishwasher to prevent damage to dishwasher, floor, and cabinets.
6. Remove lower rack to check that dishwasher is level from side to side by placing a level on the bottom of the inner door. **See Figure 9a.**

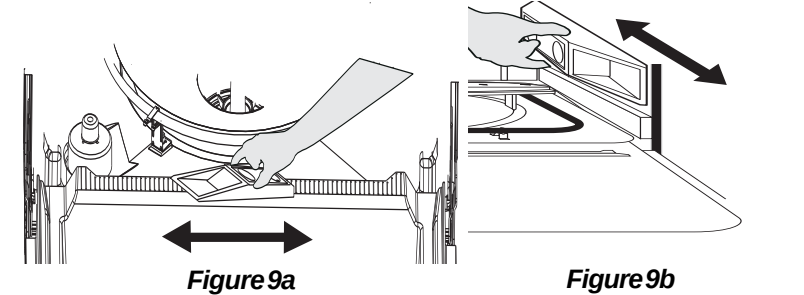

7. Remove lower rack to check that dishwasher is level from front to back by placing the level at the bottom of the tub at the lower rack wheel support. **See Figure 9b.**
8. Adjust levelers up or down until dishwasher is level.


Finishing the Drain Connection6

WARNING

Electric Shock Hazard

Plumbing material and drain hose must not come in contact with wiring or electrical components. Failure to follow this warning could result in personal injury from exposed wiring.

1. Pull out unit and check to see if drain hose is correctly attached to the drain pump assembly. If drain hose **is not attached** to drain pump, follow the instruction sheet (included with drain hose) on how to correctly install the drain hose to the drain pump assembly.
2. Move unit back in place while routing drain hose through access hole. Use caution to prevent damage to the dishwasher, floor and cabinets. **IMPORTANT: Make sure there are no sharp bends or kinks that might restrict drain flow.**
3. Secure drain hose to sink drain, disposer, or separate trap with a clamp. **IMPORTANT: Be careful not to overtighten clamp or you may damage end of hose.** Do not connect hose to horizontal pipe between sink drain and disposer.
4. Be sure unit does not rest on drain hose. It should be free of electrical components and door springs. Do not cut corrugated drain hose. Pull excess through cabinet and place under sink. Make sure hose does not come in contact with any sharp edges. **See Figure 10.**

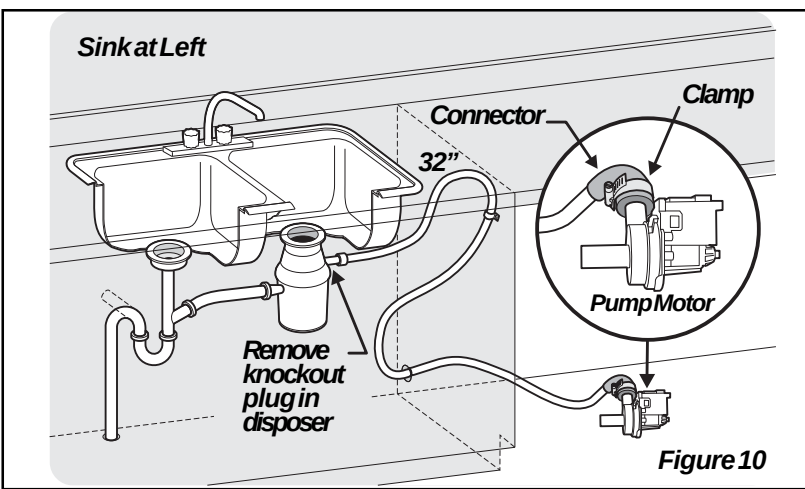

The drain hose loop must be at least 32" high from the floor to insure proper drainage.

Finishing the Water Connection7

CAUTION


Property Damage

Do not solder within 6" of the water inlet valve. Damage to the plastic parts in the valve may occur.

Use care that no sealer, dirt, or other objects enter the valve. Damage to the filter screen may occur.

Be sure the dishwasher is placed where the water inlet valve will be kept from freezing. If the valve freezes, it may rupture and flooding may occur.

1. Flush water line before connecting it to water inlet valve to prevent early clogging of filter screen. Place a bunched towel over end of line to prevent splashing. Open water supply valve for a few seconds and let water drain into a pan. **Turn off water supply at shut-off valve.**

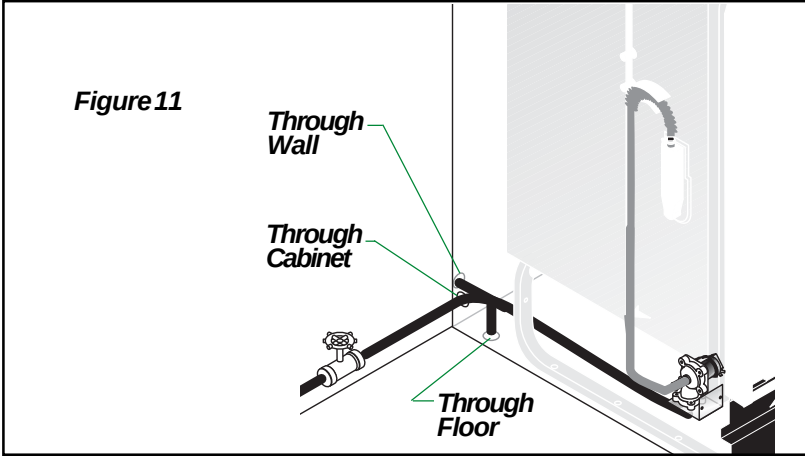

2. Route water line to water inlet valve as shown in **Figure 11.**
3. While firmly pulling water supply line into 90° elbow, tightly connect water supply to water inlet valve. Supply line must be free of kinks, scales, chips, and lubricants.
4. Turn on water supply and check for leaks.
5. If water inlet valve clogs, make sure water supply is off. If using a 3/8" NPT valve, remove four (4) screws at inlet end of valve and clean filter screen. If using 3/4" hose thread fitting simply clean filter screen.

Finishing the Electrical Connection8

WARNING

Electric Shock Hazard

Make sure electrical power has been disconnected at fuse box or circuit breaker box.

The dishwasher must be connected to a grounded metal, permanent wiring system. The equipment-grounding conductor must be run with the circuit conductors and connected to the appliance's equipment grounding terminal or lead. It is the consumer's responsibility to contact a qualified installer to make sure the electrical installation conforms with the National Electrical Code and local codes and ordinances. Do not connect the dishwasher to the power supply until the appliance is permanently grounded. All wiring connections must be enclosed in the junction box. This unit has copper lead wires.

Joining aluminum building wire to stranded copper wire should be done by a qualified electrician using materials recognized by UL and local codes.


Do not use an extension cord. Such use can result in fire, electrical shock, or other personal injury.

Failure to follow these instructions could result in death or serious injury.


Electrical Supply

1. Remove junction box cover and pull house wiring into junction box. **See Figures 12 and 13.**
2. Use a UL listed conduit connector, (not included), at box to stabilize wiring.

IMPORTANT: Be sure electrical cable is not routed behind dishwasher's motor.

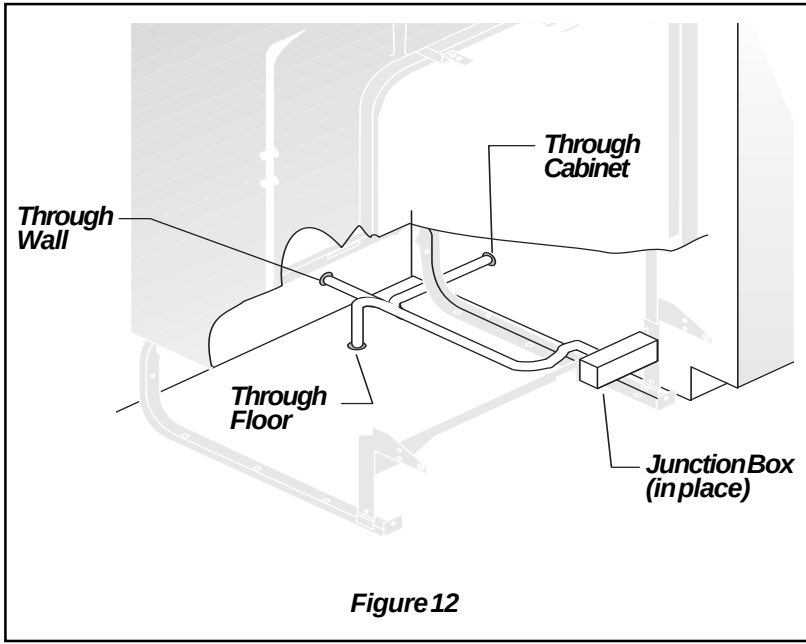

3. Inside junction box, attach ground wire under head of grounding screw and tighten. **See Figure 13.**
4. Connect incoming black lead to dishwasher's black lead and incoming white lead to dishwasher's white lead with wire nuts or other suitable connectors, (not included). Wire nuts should be tight.

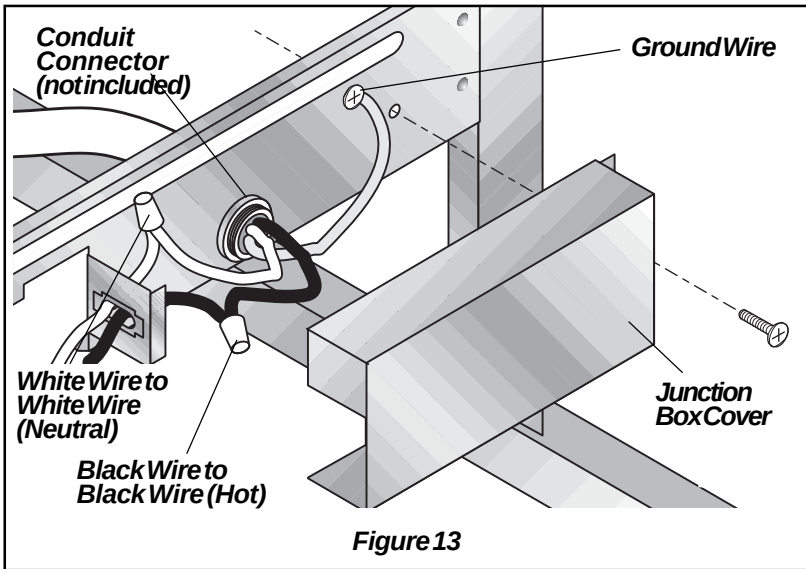

5. Replace junction box cover. **See Figure 13.**


Securing the Dishwasher9

The dishwasher must be secured to keep it from tilting when door is opened. Choose one of the methods described below to secure unit.

Countertop Anchoring

1. Install the Cabinet Seal Kit (Instructions included in Kit)
2. Replace Kickplate. **See Figure 1**
3. Adjust levelers (see Step 5) so mounting brackets touch underside of countertop. **IMPORTANT: Dishwasher must rest on floor—do not hang from countertop.** See Figure 14.
4. Tub needs to be even with the front of adjoining cabinets.
5. Screw mounting brackets firmly to countertop using screws provided in literature packet.
6. Open and close dishwasher door slowly. If door hits mounting brackets lower the dishwasher in front and rear.

Note: Open and close door to make sure it does not hit surrounding cabinets or countertop.

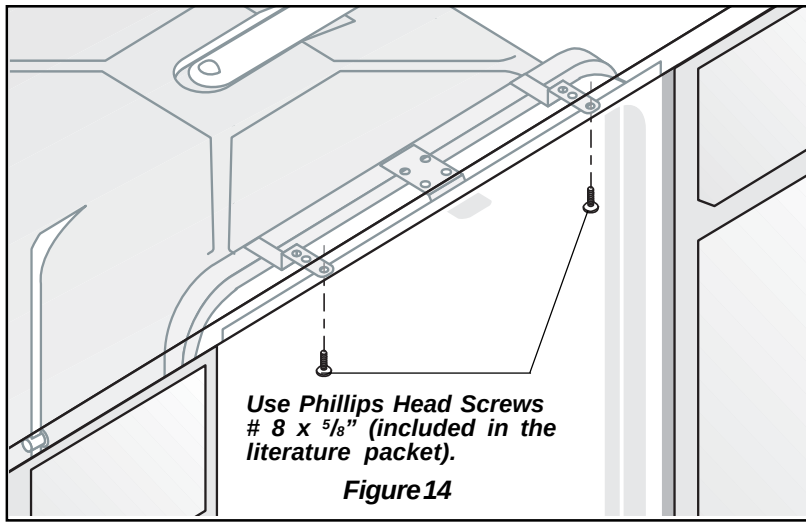


Floor Anchoring

This procedure is difficult and should be used only if countertop mounting brackets cannot be used.

1. Screw 1/4" lag screws, (not included), through holes provided in frame rail. **See Figure 15.**
2. Use expansion fasteners if floor is concrete.

Before starting the dishwasher,

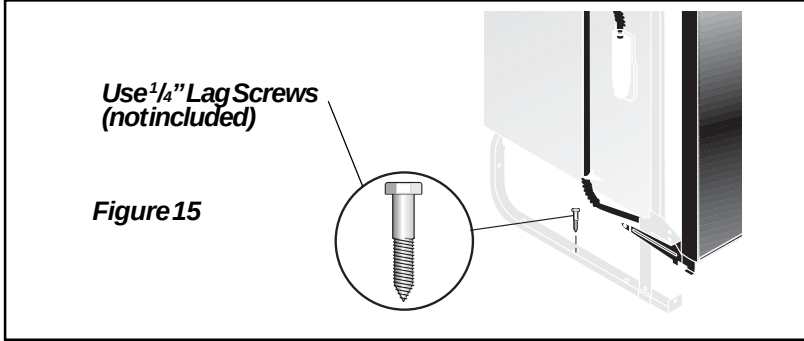

Note: If mounting your dishwasher to the countertop or to the floor is not a desirable option, you can order the side mount kit, 154806601/02, by contacting your dealer or parts supplier. This allows you to install the dishwasher by securing it to the cabinets or partitions on either side of the unit. The kit utilizes the front frame of the dishwasher to secure the unit to the cabinet or partitions.

Removing & Replacing Door10

WARNING

Electric Shock Hazard

Disconnect electrical power at the fuse box or circuit breaker box before beginning installation. Failure to follow this warning could result in death or serious injury.


CAUTION

Cut Hazard

Metal color panels are sharp and should be handled with care. Wear gloves to protect hands. Failure to follow this warning may result in injury.


To Remove and Replace Outer Door

1. Unlatch and open door. Using a Phillips head screw driver, remove two (2) screws from inner door. Save screws to reassemble. **See Figure 16a.**

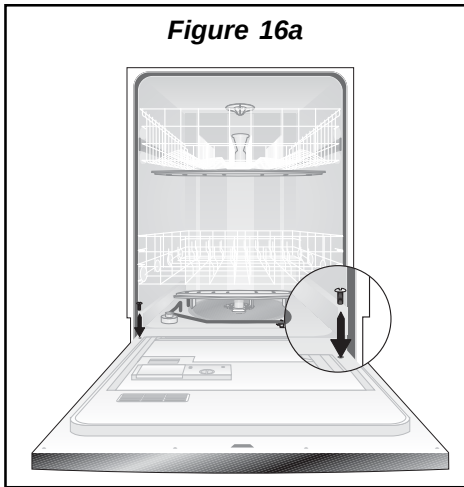


2. Close and latch door while holding both sides.

3. Place one hand on each side of door and pull down at top approximately 1/4". Pull entire door assembly toward you to remove. **See Figure 16b.**

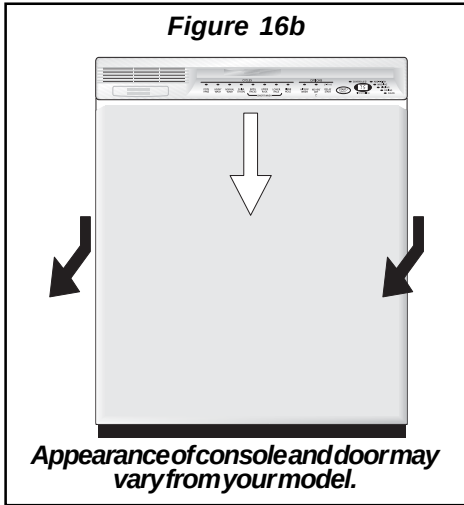

4. Place door where it will not get scratched or damaged while completing installation.
5. When ready to replace door, fit the slots on each side of top door edge over the tabs on the metal liner. Push on sides to insure the door is flat. Push up from bottom until there is no gap between door and console. **See Figure 16c.**

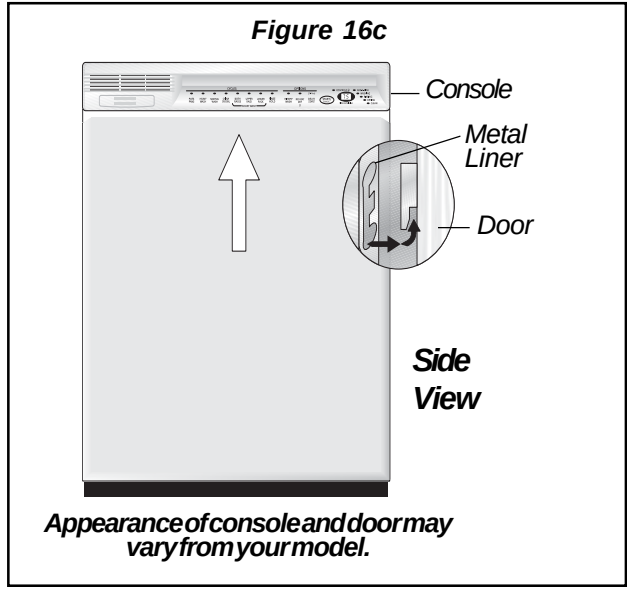

6. Unlatch door and open while supporting outer door on both sides at bottom to keep in place. Align screw holes and replace screws.

Checking the Installation11

check these items:

- Drain hose is assembled to drain pump.
- All packing materials and consumer literature have been removed from unit.
- Dishwasher is level and securely fastened.
- Open and close door to make sure it does not hit surrounding cabinet or countertop.
- Water and drain lines have no kinks.
- Wiring connections to junction box are tight.
- Water supply is turned on.
- Joints are free of leaks.

Replacing Door

1. Refer to **Step 10**, numbers 5 and 6, for replacing outer door.
2. Adjust door springs to balance weight of door. A correct spring setting allows door to remain horizontal in opened position, yet will rise to close with slight lift of finger.
3. If necessary, increase tension by moving springs to a hole toward rear of unit or decrease by moving them toward front.
4. Turn electrical supply on.

Operate the machine through at least one fill and pump-out, checking the following items:

- At first fill, make sure water completely covers filter surface. (Motor pump sound may be heard before water enters unit).
- At pump-out, make sure all water is pumped out.
- Check water connections again for leaks.

WARNING

Electric Shock Hazard

If all connections are correct, there are no leaks, and unit runs properly, replace the kickplate assembly before placing unit into operation.

Failure to follow this warning could result in electric shock.