



Load centers on this page through 225 amp feature a split neutral insulated bars. For service entrance applications, install bonding strap, and use both bars for neutral and ground conductors. For non service entrance applications, do not install bonding strap and use insulated bars for neutral conductors and bonded bar for ground conductors.

12-42 Circuit, 125–225 Amperes

Amps Max.	No. of Spaces	Max. Circuit	Indoor Type 1 ^③			Outdoor Type 3R ^{③④}			Dimensions ^⑤		
			Catalog Number	Height	Width	Depth	Catalog Number	Height	Width	Depth	
125	12	24	LC1224L1125	21	14 $\frac{3}{8}$	4	LW1224L1125	20	14 $\frac{1}{4}$	4 $\frac{1}{2}$	
125	16	32	LC1632L1125	21	14 $\frac{3}{8}$	4	LW1632L1125	29	14 $\frac{1}{4}$	4 $\frac{1}{2}$	
125	20	40	LC2040L1125	24	14 $\frac{3}{8}$	4	LW2040L1125	29	14 $\frac{1}{4}$	4 $\frac{1}{2}$	
125	30	40	LC3040L1125	30	14 $\frac{3}{8}$	4	—	—	—	—	
150	16	32	LC1632L1150	24	14 $\frac{3}{8}$	4	—	—	—	—	
150	24	40	LC2440L1150	30	14 $\frac{3}{8}$	4	—	—	—	—	
200	12	24	—	—	—	—	LW1224L1200	29	14 $\frac{1}{4}$	4 $\frac{1}{2}$	
200	20	40	LC2040L1200	30	14 $\frac{3}{8}$	4	LW2040L1200	29	14 $\frac{1}{4}$	4 $\frac{1}{2}$	
200	24	40	LC2440L1200	30	14 $\frac{3}{8}$	4	—	—	—	—	
200	30	40	LC3040L1200	36	14 $\frac{3}{8}$	4	LW3040L1200	38	14 $\frac{1}{4}$	4 $\frac{1}{2}$	
200	40	40	LC4040L1200	39	14 $\frac{3}{8}$	4	—	—	—	—	
225	40	60	LC4060L1225	39	14 $\frac{3}{8}$	4	—	—	—	—	

Copper Bus^⑥

Amps Max.	No. of Spaces	Max. Circuit	Indoor Type 1 ^③			Outdoor Type 3R ^③			Dimensions ^⑤		
			Catalog Number	Height	Width	Depth	Catalog Number	Height	Width	Depth	
125	20	40	LC2040L1125CU	24	14 $\frac{3}{8}$	4	—	—	—	—	
200	20	40	LC2040L1200CU	30	14 $\frac{3}{8}$	4	—	—	—	—	
200	30	40	LC3040L1200CU	36	14 $\frac{3}{8}$	4	—	—	—	—	
200	40	40	LC4040L1200CU	39	14 $\frac{3}{8}$	4	—	—	—	—	
225	12	24	—	—	—	—	LW1224L1225CU	29	14 $\frac{1}{4}$	4 $\frac{1}{2}$	
225	42	42	LC4242L1225CU	42	14 $\frac{3}{8}$	4	LW4242L1225CU	42	14 $\frac{1}{4}$	4 $\frac{1}{2}$	

① Convertible to main breaker by using the following main breaker kits:
 100A load centers: MBK100M only.
 125A load centers: MBK100M and MBK125M only.
 150A load centers: MBK150M only.
 200A load centers: MBK150M and MBK200M only.
 225A load centers: MBK150M, MBK200M, and MBK225M only.

② 100-225A only.

③ Standard package quantity equal to 1.

④ Dimensions shown are representative of outside box length, width & depth ($\pm \frac{1}{8}$ ") and do not include allowance for mounting bumps, endwalls, hubs or hardware protrusions. Allow approximately 1 $\frac{1}{2}$ " additional in length and width dimensions for surface or combination overhang. Consult factory for specific details if required.

⑤ Hub provision only. Closure plate included. Panels through 225A require HS type hub; panels over 225A require HV type hub. See accessories page 3-8 for hub selection.

⑥ Copper bus load centers are recommended for those applications where the environment may be severe (ie farm and coastal areas).