


# HOW TO USE THE TOUCH SCREEN PANEL

Your Digital Air Fryer features a Touch Screen Panel. Use your finger to lightly touch/press/tap the buttons on your fryer when making selections. It is not recommended or necessary to push down with excessive force on the buttons as this may lead to damaging the control panel of your fryer.

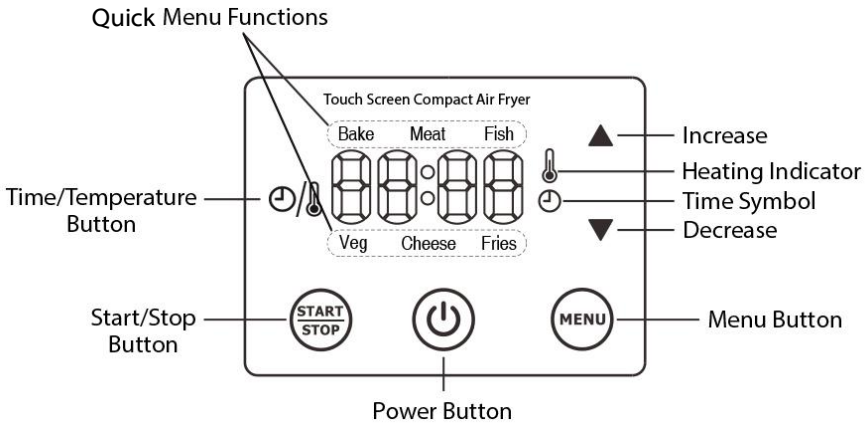

**POWER BUTTON:** Powers the *Digital Air Fryer* ON/OFF.

**START/STOP BUTTON:** Starts or Cancels selected cooking function.

**MENU BUTTON:** Use this button to cycle through and select a QUICK MENU function - The arrow on the display will point to the selected function - Bake, Meat, Fish, Fries, Cheese, Veg (Vegetables).

**TIME/TEMP BUTTON:** Use this button to toggle between adjusting Cook Time (from 1 minute up to 60 minutes) and Temperature (from 302°F up to 392°F).

**▲ ▼ BUTTON:** Use these buttons to increase/decrease the Time and/or Temperature settings.

**HEATING INDICATOR:** This icon will illuminate when the Air Fryer is heating.

## QUICK MENU CHART

Menu	Default Temperature	Default Cook Time	Recommended Cooking Temperature Range	Recommended Cooking Time Range
BAKE	302°F	10 min	302°F ~ 392°F 1°F increments	8 ~ 15min 1 min increments
MEAT	320°F	10 min	320°F ~ 392°F 1°F increments	8 ~ 25min 1 min increments
FISH	356°F	12 min	356°F ~ 392°F 1°F increments	6 ~ 18min 1 min increments
FRIES	356°F	14 min	320°F ~ 392°F 1°F increments	12 ~ 25min 1 min increments
CHEESE	320°F	10 min	302°F ~ 360°F 1°F increments	8 ~ 15min 1 min increments
VEG (VEGETABLES)	302°F	10 min	302°F ~ 392°F 1°F increments	5 ~ 18min 1 min increments

## PREPARING YOUR AIR FRYER FOR USE

1. Before using your **Digital Air Fryer** for the first time, carefully remove all packaging material.
2. Remove the parts from the box and wash the Pan (12) and Basket (13) with warm, soapy water and a non-abrasive sponge.

**IMPORTANT: DO NOT IMMERSE THE MAIN HOUSING IN WATER.** Wipe the interior and exterior of appliance clean with a damp cloth.

**IMPORTANT: THIS IS NOT A DEEP FRYER. DO NOT FILL THE APPLIANCE OR ITS PAN (12) WITH OIL OR FRYING FAT.**

3. Place the appliance on a flat, horizontal and stable surface (make sure surface is heat-resistant). Place away from walls and other appliances. Leave approximately 4 inches of space from nearby objects. (See Figure 1)

4. Lift the Lid Handle (3) and open the Top Cover (9) to the position shown in Figure 2. The Top Cover (9) will remain open and locked into place. Grasp Basket Handle (5) to lift out Basket (13). (See Figure 2)

**TIP:** Never place food directly into the Pan (12). In place of using the Basket (13), an oven-safe plate or bowl (not included) can be placed onto a wire rack (not included) into the Pan (12).

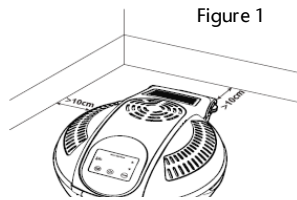


Figure 1

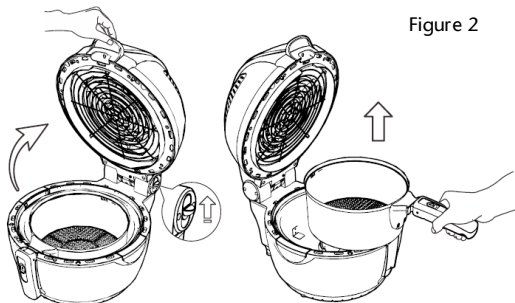


Figure 2

## HOW TO USE YOUR AIR FRYER

1. Make sure the Pan (12) is properly inserted into the Main Base (10) of the unit.
2. Place ingredients into Basket (13) and place Basket (13) into the Pan (12). (See Figure 3)

**TIP:** -Do not press the Basket Fold-Down Switch (4) when placing the Basket (13) into the Pan (12).

-Do not fill the Basket (13) over the MAX fill position.

-If cooking food that expands, make sure the cooked capacity will not exceed the MAX fill position.

3. To close the Top Cover (9), hold the Lid Handle (3) with one hand and use your other hand to push down on the Lid Release Switch (2). Slowly lower the Top Cover (9) down until it fully closes. (See Figure 4)

**TIP:** Always be sure to have a firm hold on the Lid Handle (3) before pressing the Lid Release Switch (2). Do not allow Top Cover (9) to forcefully drop down onto Main Base (10).

**CAUTION:** Do not touch the pan(12) during and immediately after use as it gets very hot. Only hold the pan by the handles (11).

**NOTE:** The initial 15 minutes of use may result in minimal smell and smoke. This is normal and harmless and comes from the protective substance applied to the heating elements during manufacturing.

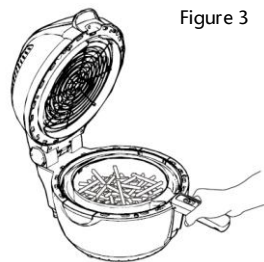


Figure 3

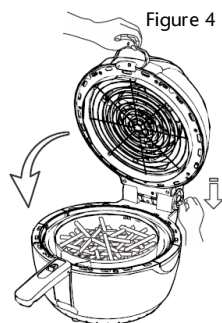


Figure 4

# HOW TO USE YOUR AIR FRYER (CONT.)

## HOW TO MANUALLY PROGRAM FRYING TIME AND TEMPERATURE:

1. Plug Power Cord (6) into an electrical outlet. The appliance will be in standby mode.
2. Tap the POWER button.
3. Tap the TIME/TEMP button, the display will flash the default time of 60 minutes. Use the INCREASE/DECREASE buttons to program the air frying time. Hold down the INCREASE or DECREASE button for rapid increase/decrease of time.
4. Once you have selected your air fry time, touch the TIME/TEMP button again and the display will flash the default temperature of 392°F.
5. Use the INCREASE/DECREASE buttons to program the air frying temperature. Hold down the INCREASE or DECREASE button for rapid increase/decrease of temperature.
6. Once you have selected your air frying temperature, tap START.  
*TIP: It is recommended to pre-heat the air fryer on empty for 3 min. if the appliance is cold.*

## HOW TO SELECT A QUICK MENU FUNCTION:

1. Plug Power Cord (6) into an electrical outlet. The appliance will be in standby mode.
2. Tap the POWER button.
3. Tap the MENU button and the 6 Quick Menu functions will appear on the display. Keep tapping the MENU button until you've reached the desired Quick Menu function. It will begin flashing.  
*NOTE: Each Quick Menu function is pre-programmed with a default time and temperature (please reference QUICK MENU CHART on page 5).*
4. To manually adjust the Times and Temperatures for each Quick Menu function, tap the TIME/TEMP button while the Quick Menu function is flashing.
5. The display will flash the default air fry time. Use the INCREASE/DECREASE buttons to adjust the time up or down. Hold down for rapid increase/decrease of time.
6. Once you have selected your air fry time, tap the TIME/TEMP button again and the display will flash the default temperature.
7. Use the INCREASE/DECREASE buttons to adjust the temperature up or down. Hold for rapid increase/decrease of temperature.  
*NOTE: Please reference the QUICK MENU CHART on page 5, for the recommended ranges of time and temperature for each Quick Menu function.*
8. Once you have selected your air fry temperature tap START.  
*TIP: It is recommended to pre-heat the air fryer on empty for 3 min. if the appliance is cold.*

## DURING THE COOKING/FRYING PROCESS:

1. Once you tap START, the Timer will begin counting down and the Heating Indicator will illuminate red.  
*NOTE: You will notice that during the hot air frying process, the Heating Indicator will come on and go out from time to time. This indicates that the heating element is maintaining the set temperature.*  
*NOTE: Any excess oil from food will collect at the bottom of the Pan (12).*
2. Some recipes require stirring/mixing the contents mid-way through cooking (see Cooking Time Chart on page 10). You can do this in the middle of the cooking process by first pressing the STOP button. To stir the ingredients, grasp the Lid Handle (3) and lift to open. Allow the Top Cover (9) to click and lock into position and remain open on its own. Grasp the Basket Handle (5) and lift out of fryer. Shake or stir the contents of the basket using a non-metallic utensil and then place Basket (13) back into the Pan (12).

## HOW TO USE YOUR AIR FRYER (CONT.)

**TIP:** If you set the timer to half the required cook time, you will hear the timer indicator when you have to stir the ingredients. However, this means that you will need to set the timer again to the remaining cook time after stirring.

- To resume the air frying process, tap START.

**TIP:** After you tap STOP, if you do not resume cooking by tapping START within 3 minutes, the unit will automatically turn off and go into standby mode.

**CAUTION:** During cooking, the Pan (12) and Basket (13) will be very hot, only use the cool-touch handles or oven mitts.

### WHEN COOKING/FRYING IS COMPLETE:

- When the timer completes its countdown, the air fryer will beep and stop heating - this signals it is time to remove your food. (Please note that the fan motor will continue to operate in order to cool down the Pan (12) and the Basket (13), this will stop within approximately 30 seconds).

**NOTE:** You can also switch off the appliance manually by tapping STOP at any time during the cooking process.

- Open the Top Cover (9) and allow it to click and lock into position and remain open on its own. Grasp the Basket Handle (5) and lift out of the fryer. Place it onto a flat, heat-resistant surface. (See Figure 5)

**CAUTION:** When opening the Top Cover (9), be careful of hot air and steam. Keep hands and face away from the opening.

**CAUTION:** After cooking, the Pan (12) and Basket (13) will be extremely hot to the touch. Do not touch surfaces of the Pan (12) or Basket (13) directly.

- Check that your foods are ready. If not, then place the Basket (13) back into the Pan (12) and set the timer for a few more minutes.

- Empty the contents of the Basket (13) into a bowl or onto a plate. (See Figure 6) If necessary, you can also use Tongs to remove foods from the Basket (13).

**CAUTION:** Do not press the Basket Fold-Down Switch (4) while holding the Basket (13). (See Figure 7)

**TIP:** If food contents within Basket (13) are too heavy to lift using the Basket Handle (5), use oven mitts to lift out the Pan (12) and Basket (13) together by grasping the Pan Handles (11). Place on a flat, heat-resistant surface and use Tongs to remove contents from the Basket (13).

**TIP:** Do not turn the Basket (13) and Pan (12) upside down together, as any excess oil that has collected in the bottom of the Pan (12) will be poured onto the foods.

- When the next batch of ingredients is ready, the air fryer is instantly ready to use again.

- When cooking is complete, tap the POWER button to shut down and remove the Power cord (6) from the electrical outlet. (See Figure 8)

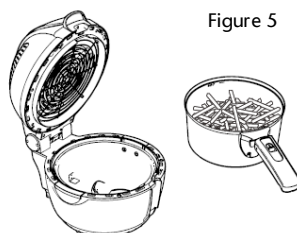


Figure 5

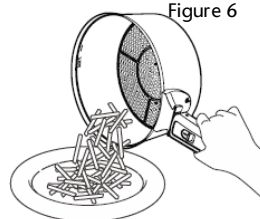


Figure 6

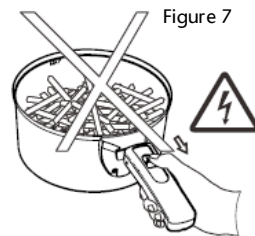


Figure 7

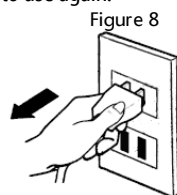


Figure 8

## CLEANING & MAINTENANCE

The *Digital Air Fryer* should be cleaned thoroughly after every use.

1. Make sure the Power cord (6) is disconnected from the electrical outlet and that the appliance has cooled down before attempting to clean.
2. The Pan (12), Basket (13) and the inside of the appliance have a nonstick coating. Do not use metal utensils or abrasive cleaning materials on them, as this can damage the non-stick coating.
3. Wipe the outside of the appliance with a damp cloth.  
**CAUTION:** Do not allow water to seep into the LED control panel as that may damage the appliance.
4. Clean the Pan (12) and Basket (13) with hot water, dishwashing soap and a non-abrasive sponge.
5. You can use a degreaser to remove any stuck-on residue.  
**NOTE:** The Pan (12) and Basket (13) are dishwasher-safe (top rack only).  
**TIP:** If food residue is stuck to the Basket (13) or the bottom of the Pan (12), place the Basket (13) into the Pan (12) and fill with dishwashing soap and water and let soak for 10 minutes.
6. Clean the inside of the appliance with hot water and a non-abrasive sponge.
7. Never immerse the power cord, plug or the appliance body in water or any other liquids.
8. Dry all parts after each use, re-assemble and store in a cool, dry location.