



MODEL N° 90227

.....

OWNER'S MANUAL

COPY

Keep this Product ID Number and use when contacting Customer Service:

REGISTER YOUR PRODUCT ONLINE AT WWW.LIFETIME.COM

At Lifetime, we are committed to providing innovative and quality products. While registering, you will have the opportunity to give us your feedback. Your input is valuable to us.

- You can also opt in to receive new product notifications or promotions.
- In the unlikely event of a product recall or safety modification, your registration provides the information we need to notify you directly.
- Registration is fast, easy, and completely voluntary.

Lifetime's Promise to You:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

Save this owner's manual for future reference and in the event that the manufacturer has to be contacted.

****U.S. and Canada customers ONLY****

IF ASSISTANCE IS NEEDED,

DO NOT CONTACT THE STORE!

CALL OUR CUSTOMER SERVICE DEPARTMENT at

1 (800) 225-3865

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)

Call us or visit our Web site for Saturday hours

Lifetime Products, Inc.

PO Box 160010 • Freeport Center, Bldg. D-11 Clearfield, Utah 84016-0010

For customers outside the U.S. or Canada, please contact the store for assistance.



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this product without reading and following all instructions carefully. Check the entire box and inside all packing materials for parts and/or additional instruction material. Before beginning assembly, identify and inventory all parts and hardware using the parts and hardware lists and identifiers in this document. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury. A high probability of serious injury exists if this product is not installed, maintained, and/or operated properly. Failure to comply with any of the warnings in this instruction manual may result in serious personal injuries such as cuts, broken bones, nerve damage, paralysis, brain injury, or death. Failure to comply may also result in property damage. Please heed all warnings and cautions.

- If using a ladder during assembly, use extreme caution.
- Two capable adults are recommended for this operation.
- Check base daily for leakage. Leaks may cause product to fall.
- Assemble the pole sections properly. Failure to do so could cause the pole sections to separate during play or transport.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.

BEFORE BEGINNING ASSEMBLY



Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.



Identify and inventory all parts and hardware using the parts and hardware lists and identifiers in this document.



Test fit all Bolts by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating buildup from inside the holes. Do not scrape away all of the powder coating. Bare metal may rust. You may need to pound some Bolts into place with a hammer or mallet.



TOOLS AND PARTS REQUIRED FOR THIS ASSEMBLY

1/2" Wrench



(2)

7/16" Wrench



(2)

9/16" Wrench



(2)

3/4" Wrench



(2)

Pliers




(1)

3/16" Allen Wrench



(2)

Phillips Screwdriver



(1)

Rubber Mallet




(1)

Scrap Wood



(1)

Funnel



(1)

Sand




(362 lb)

Water Hose



(1)

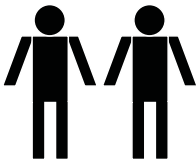

****Two adults required to complete assembly****

Only adults should set up the product. Do not allow children in the setup area until assembly is complete.

ASSEMBLY GUIDES

Refer to the following areas throughout the instructions to assist in the assembly process:

This area is located at the top, left-hand corner of the page and indicates which tools and hardware are needed to complete the assembly steps on a page.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

This area is usually located in the bottom, left-hand corner of a step and indicates that special attention is needed to perform a particular part of a step.



Note:

These areas are usually located in the bottom, right-hand corner of a step and indicate that damage to the product or serious injury may occur if the caution or warning is not heeded.



CAUTION



WARNING

PARTS LIST

<u>ID</u>	<u>Item Description</u>	<u>Qty</u>	<u>✓</u>
ALH	Top Pole	1	<input type="checkbox"/>
ALF	Middle Pole	1	<input type="checkbox"/>
ALE	Bottom Pole	1	<input type="checkbox"/>
AMY	Backboard Bracket	2	<input type="checkbox"/>
AJI	Backboard	1	<input type="checkbox"/>
ALX	Rim	1	<input type="checkbox"/>
AKZ	Net	1	<input type="checkbox"/>
AJQ	Center Frame Pad	1	<input type="checkbox"/>
AJX	Corner Frame Pad	2	<input type="checkbox"/>
AJY	Counterbalance Spring	1	<input type="checkbox"/>
DFD	U-Bolt Support Bracket	1	<input type="checkbox"/>
AKC	Short Extension Arm	2	<input type="checkbox"/>
AKB	Long Extension Arm	2	<input type="checkbox"/>
ALB	Outer Tube	1	<input type="checkbox"/>
AKQ	Inner Channel	1	<input type="checkbox"/>
AMN	Trigger	1	<input type="checkbox"/>
AKL	Left Handle	1	<input type="checkbox"/>
AKN	Right Handle	1	<input type="checkbox"/>
ALL	Pole Bracket	1	<input type="checkbox"/>
ALD	Plastic Guard	1	<input type="checkbox"/>
AJM	Base	1	<input type="checkbox"/>
ALI	Pole Brace	2	<input type="checkbox"/>
AMU	Wheel	2	<input type="checkbox"/>
AJC	1/2" x 15 3/4" Axle	1	<input type="checkbox"/>
AJE	1/2" x 7" Axle	1	<input type="checkbox"/>
AEF	Base Plug	2	<input type="checkbox"/>
AKP	Height Sticker (not shown)	1	<input type="checkbox"/>
AMT	Warning Sticker (Applied to Middle Pole)	1	<input type="checkbox"/>

HARDWARE LIST


<u>ID</u>	<u>Item Description</u>	<u>Qty</u>	<u>✓</u>
BCO	Pole Assembly Hardware		
ADS	1/4" x 3/4" Screw	2	<input type="checkbox"/>
ABH	3/8" x 3 1/2" Hex Bolt	2	<input type="checkbox"/>
ADA	1/2" x 2.91" Spacer	2	<input type="checkbox"/>
AAF	3/8" Washer	2	<input type="checkbox"/>
ABB	3/8" Centerlock Nut	2	<input type="checkbox"/>
CIH	Domed Countersink Washer	2	<input type="checkbox"/>
BCQ	Pole to Base Assembly Hardware		
AAO	5/16" Nylock Nut	2	<input type="checkbox"/>
ABD	5/16" Washer	4	<input type="checkbox"/>
AAE	5/16" x 1" Hex Bolt	2	<input type="checkbox"/>
ABN	1/2" x 1/8" Spacer	2	<input type="checkbox"/>

HARDWARE LIST


ID	Item Description	Qty	✓
BCQ	<i>Pole to Base Assembly Hardware (Continued)</i>		
BTS	1/4" Barrel Nut	1	<input type="checkbox"/>
BZO	1/4" x 3" Shoulder Bolt	1	<input type="checkbox"/>
CCL	3/16" Allen Wrench	2	<input type="checkbox"/>
BCS	<i>Backboard to Rim Assembly Hardware</i>		
AAM	5/16" x 1 1/2" Tap Bolt	2	<input type="checkbox"/>
DFE	3/8" x 3/4" Bolt	4	<input type="checkbox"/>
ABK	5/16" Nylock Flange Nut	4	<input type="checkbox"/>
ABB	3/8" Centerlock Nut	4	<input type="checkbox"/>
ABD	5/16" Washer	2	<input type="checkbox"/>
ABF	7/16" Rubber Washer	2	<input type="checkbox"/>
AAJ	5/16" Hex T-Nut	2	<input type="checkbox"/>
AAV	5/16" Jam Nut	2	<input type="checkbox"/>
AJW	Compression Spring	2	<input type="checkbox"/>
AOW	Spring Retainer Plate	1	<input type="checkbox"/>
APZ	4" U-Bolt	1	<input type="checkbox"/>
BCR	<i>Backboard to Pole Assembly Hardware</i>		
DFB	1/2" x 7 1/2" Hex Bolt	2	<input type="checkbox"/>
AAX	1/2" Centerlock Nut	4	<input type="checkbox"/>
AAD	1/2" x 7 1/16" Hex Bolt	2	<input type="checkbox"/>
ABL	.69" x .59" Black Spacer	4	<input type="checkbox"/>
DFC	3/8" x 7 1/2" Hex Bolt	1	<input type="checkbox"/>
ABB	3/8" Centerlock Nut	1	<input type="checkbox"/>
DFA	3/4" x 4" Spacer	2	<input type="checkbox"/>
BCT	<i>Handle Assembly Hardware</i>		
AAL	1/4" x 1 1/4" Hex Bolt	1	<input type="checkbox"/>
ADJ	1/4" Cap Nut	1	<input type="checkbox"/>
AAN	5/16" Cap Nut	1	<input type="checkbox"/>
AAM	5/16" x 1 1/2" Tap Bolt	1	<input type="checkbox"/>
ACZ	.69" x 1.4" Spacer	2	<input type="checkbox"/>
AQG	Lock Tab	1	<input type="checkbox"/>
AAZ	3/8" x 7" Hex Bolt	1	<input type="checkbox"/>
ABB	3/8" Centerlock Nut	1	<input type="checkbox"/>
AAD	1/2" x 7 1/16" Hex Bolt	1	<input type="checkbox"/>
AAX	1/2" Centerlock Nut	1	<input type="checkbox"/>
AQH	Trigger Spring	1	<input type="checkbox"/>
ADR	#7 x 3/8" Phillips Pan Head Screw	2	<input type="checkbox"/>
ADT	#6 x 5/8" Screw	7	<input type="checkbox"/>
BCU	<i>Frame Pad Assembly Hardware</i>		
ADP	#10 x 7/8" Self-Drilling Screw	10	<input type="checkbox"/>

PARTS IDENTIFIER

Parts shown at 10% of Actual Size




ALH (x1)
Top Pole




ALF (x1)
Middle Pole


*Warning Sticker applied to side not shown




ALE (x1)
Bottom Pole




ALB (x1)
Outer Tube




AKQ (x1)
Inner Channel




AJE (x1)
1/2" x 7" Axle




ALI (x2)
Pole Brace




AKB (x2)
Long Extension Arm



AJC (x1)
1/2" x 15 3/4" Axle



AKC (x2)
Short Extension Arm

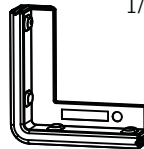


AJX (x2)
Corner Frame Pad



AJQ (x1)
Center Frame Pad


PARTS IDENTIFIER

Parts shown at 10% of Actual Size

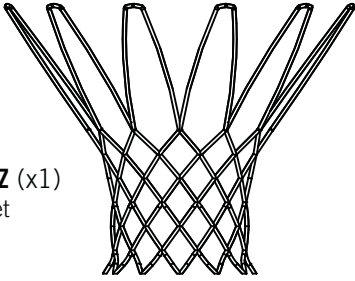


AKZ (x1)
Net


ALX (x1)
Rim

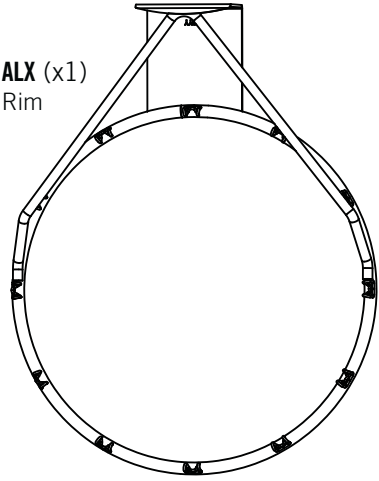

Parts shown at 5% of Actual Size

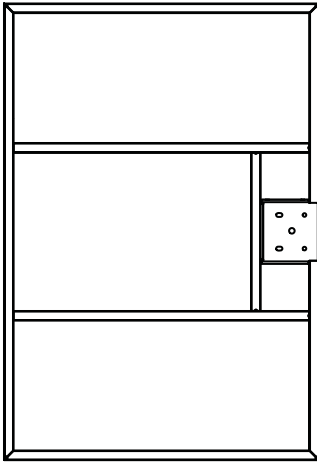


AJI (x1)
Backboard

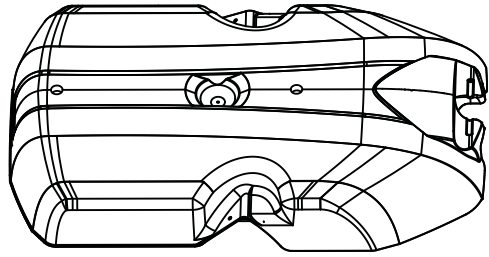

AJM (x1)
Base

PARTS IDENTIFIER

Parts shown at 25% of Actual Size

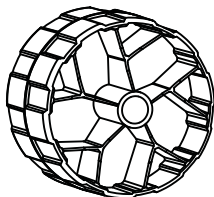


AMU (x2)
Wheel




AKL (x1)
Left Handle




AKN (x1)
Right Handle

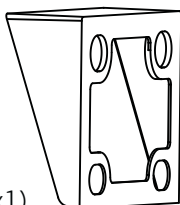

ALD (x1)
Plastic Guard




AJY (x1)
Counterbalance Spring




ALL (x1)
Pole Bracket



AMN (x1)
Trigger

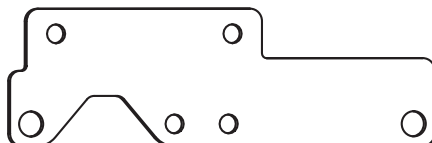


AMY (x2)
Backboard Bracket



DFD (x1)
U-Bolt Support Bracket

Part shown at Actual Size

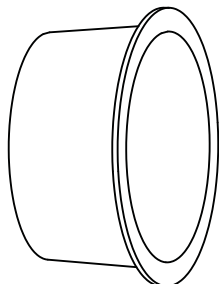


AEF (x2)
Base Plug


HARDWARE IDENTIFIER

POLE ASSEMBLY HARDWARE

Hardware shown at Actual Size




ABH (x2)
3/8" x 3 1/2" Hex Bolt

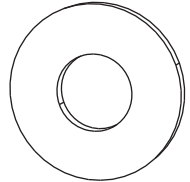


AAF (x2)
3/8" Washer



ADA (x2)
1/2" x 2.91" Spacer

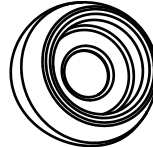

CIH (x2)
Domed Countersink Washer



ADS (x2)
1/4" x 3/4" Screw


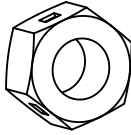



ABB (x2)
3/8" Centerlock Nut

POLE TO BASE ASSEMBLY HARDWARE


Hardware shown at Actual Size




AAE (x2)
5/16" x 1" Hex Bolt




BTS (x1)
1/4" Barrel Nut

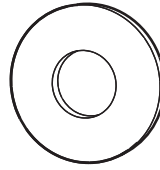


ABD (x4)
5/16" Washer

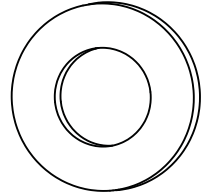

ABN (x2)
1/2" x 1/8" Spacer



BZO (x1)
1/4" x 3" Shoulder Bolt




AAO (x2)
5/16" Nylock Nut




CCL (x2)
3/16" Allen Wrench

BACKBOARD TO RIM ASSEMBLY HARDWARE

Hardware shown at Actual Size



AAM (x2)
5/16" x 1 1/2" Tap Bolt



DFE (x4)
3/8" x 3/4" Bolt

HARDWARE IDENTIFIER

BACKBOARD TO RIM ASSEMBLY HARDWARE (CONTINUED)

Hardware shown at Actual Size



ABK (x4)
5/16" Nylock Flange Nut



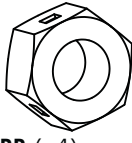



ABB (x4)
3/8" Centerlock Nut




AAV (x2)
5/16" Jam Nut

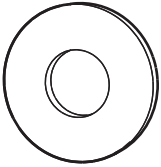

ABD (x2)
5/16" Washer

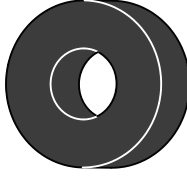

ABF (x2)
7/16" Rubber Washer

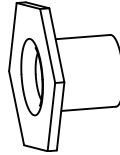


AAJ (x2)
5/16" Hex T-Nut


Hardware shown at 25% of Actual Size



AOW (x1)
Spring Retainer Plate




AJW (x2)
Compression Spring

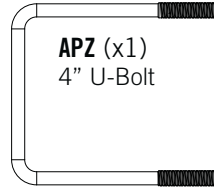


APZ (x1)
4" U-Bolt

BACKBOARD TO POLE ASSEMBLY HARDWARE


Hardware shown at Actual Size

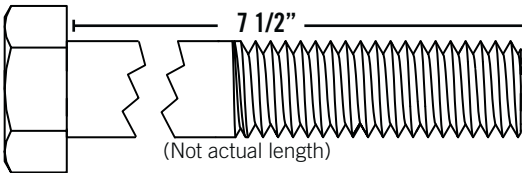


DFB (x2)
1/2" x 7 1/2" Hex Bolt

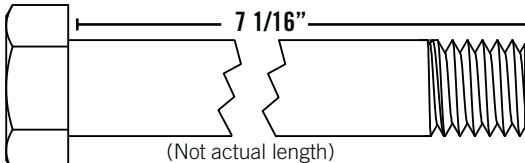

AAD (x2)
1/2" x 7 1/16" Hex Bolt

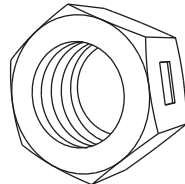

AAX (x4)
1/2" Centerlock Nut

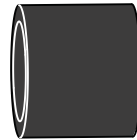


ABL (x4)
.69" x .59" Black Spacer

HARDWARE IDENTIFIER

BACKBOARD TO POLE ASSEMBLY HARDWARE (CONTINUED)

Hardware shown at Actual Size



DFC (x1)
3/8" x 7 1/2" Hex Bolt

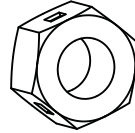



ABB (x1)
3/8" Centerlock Nut




DFA (x2)
3/4" x 4" Spacer

HANDLE ASSEMBLY HARDWARE


Hardware shown at Actual Size




AAL (x1)
1/4" x 1 1/4" Hex Bolt




ADJ (x1)
1/4" Cap Nut




AAM (x1)
5/16" x 1 1/2" Tap Bolt



AAN (x1)
5/16" Cap Nut

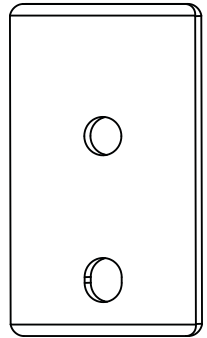

AQG (x1)
Lock Tab

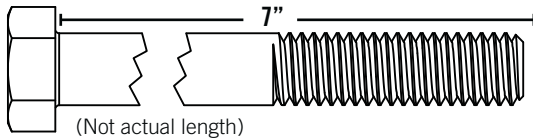

AAZ (x1)
3/8" x 7" Hex Bolt


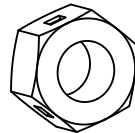


ABB (x1)
3/8" Centerlock Nut



ADR (x2)
#7 x 3/8" Phillips
Pan Head Screw

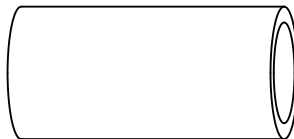


ACZ (x2)
.69" x 1.4" Spacer


HARDWARE IDENTIFIER

HANDLE ASSEMBLY HARDWARE (CONTINUED)

Hardware shown at Actual Size

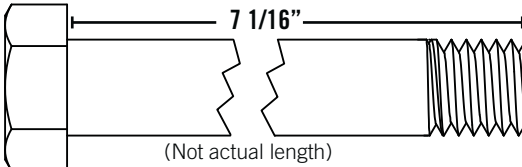


AAD (x1)
1/2" x 7 1/16" Hex Bolt

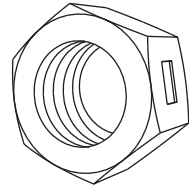

AAX (x1)
1/2" Centerlock Nut




ADT (x7)
#6 x 5/8" Screw



AQH (x1)
Trigger Spring

FRAME PADS TO POLE ASSEMBLY HARDWARE

Hardware shown at Actual Size




ADP (x10)
#10 x 7/8" Self-
Drilling Screw

Note: Only eight of the 10 Screws will be used.


SEC 1 POLE ASSEMBLY

HARDWARE REQUIRED

Hardware shown at Actual Size



ABH (x2)
3/8" x 3 1/2" Hex Bolt

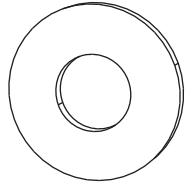


AAF (x2)
3/8" Washer



ADA (x2)
1/2" x 2.91" Spacer



CIH (x2)
Domed Countersink Washer



ADS (x2)
1/4" x 3/4" Screw


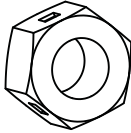


ABB (x2)
3/8" Centerlock Nut

PARTS REQUIRED

Parts shown at 10% of Actual Size




ALH (x1)
Top Pole

30 1/2"

Part shown at 25% of Actual Size




ALL (x1)
Pole Bracket



ALF (x1)
Middle Pole

43"


*Warning Sticker applied to side not shown



ALE (x1)
Bottom Pole

43"

TOOLS REQUIRED



Phillips Screwdriver






9/16" Wrench (x2)



Scrap Wood




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

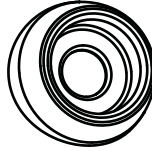

SEC

1.1



Align the hole in the **Top Pole (ALH)** with the slot in the **Middle Pole (ALF)** and slide the Top Pole over the Middle Pole. Insert a **1/4" x 3/4" Screw (ADS)** through a **Domed Countersink Washer (CIH)** and into the small hole in the Top Pole and into the slot in the Middle Pole as shown.

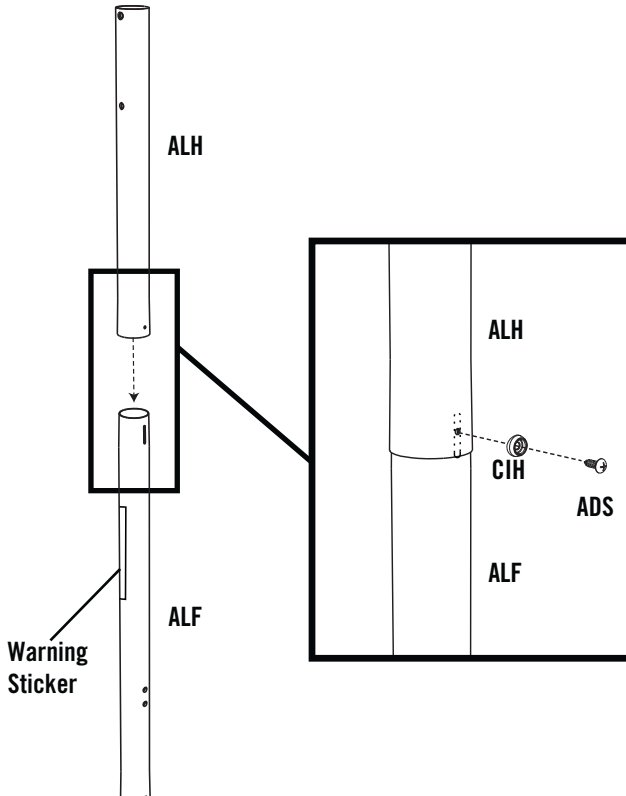

! *Note: The 1/4" x 3/4" Screw and Domed Countersink Washer should be flush with the Pole, but will spin freely once installed. Do not jam the Poles together until instructed.*



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

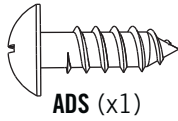

ADS (x1)




CIH (x1)

SEC

1.2


Align the hole in the **Middle Pole (ALF)** with the slot in the **Bottom Pole (ALE)** and slide the Middle Pole over the Bottom Pole. Insert a **1/4" x 3/4" Screw (ADS)** through a **Domed Countersink Washer (CIH)** and into the small hole in the Middle Pole and into the slot in the Bottom Pole as shown.

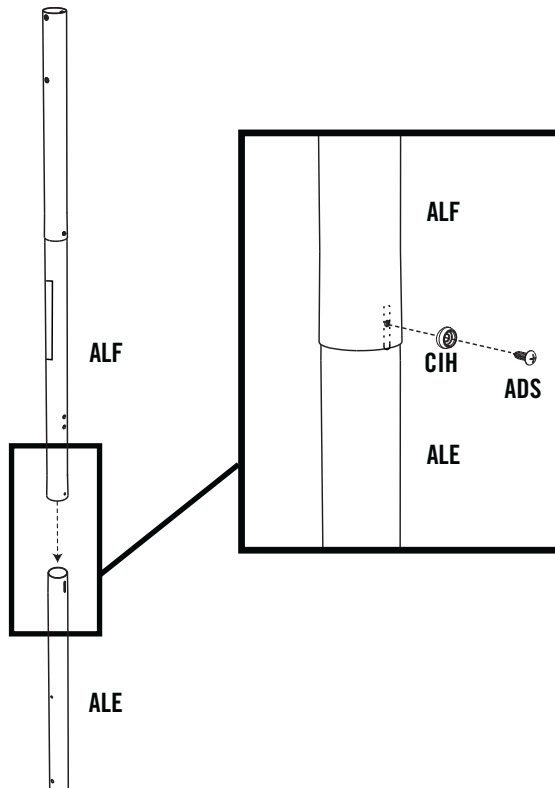

Note: The 1/4" x 3/4" Screw and Domed Countersink Washer should be flush with the Pole, but will spin freely once installed. Do not jam the Poles together until instructed.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE




9/16" (x2)




ABB (x2)

ADA (x2)



ABH (x2)


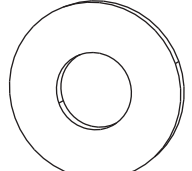


AAF (x2)

SEC

1.3

Insert the **3/8" x 3 1/2" Hex Bolts (ABH)** with the **3/8" Flat Washers (AAF)** into the **Middle Pole (ALF)** as shown. Then slide the **1/2" x 2.91" Spacers (ADA)** onto the Hex Bolts. Place the **Pole Bracket (ALL)** onto the 3/8" x 3 1/2" Hex Bolts, and attach it to the Middle Pole with the hardware shown.

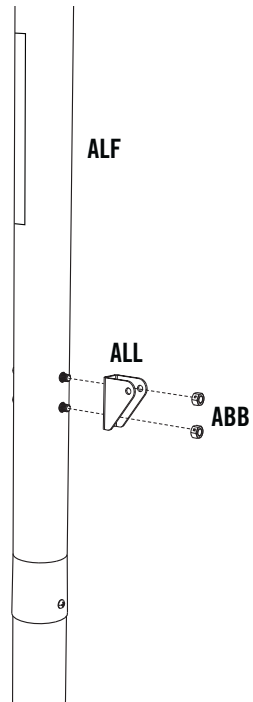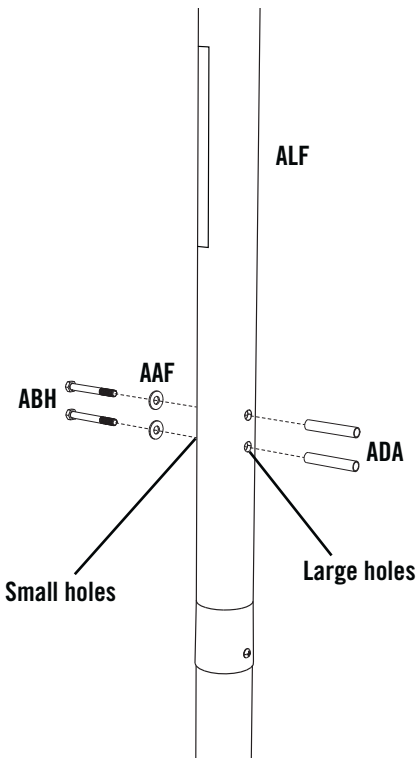



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



Scrap Wood

NO HARDWARE REQUIRED FOR THIS PAGE

SEC

1.4

ATTENTION: THIS STEP CANNOT BE REVERSED!

In order to seat the Poles, strike each end of the Pole very hard five to six times on a piece of scrap wood or cardboard. This must be done even if the Poles cover the slots before seating has occurred.

If the **Top and Middle Poles (ALH & ALF)** do not completely cover the slots on the **Middle and Bottom Poles (ALF & ALE)** after seating, **DO NOT COMPLETE ASSEMBLY**. Call our Customer Service Department.



WARNING

The Poles must be seated together! Even if the Poles cover the slots before seating, they must be struck on a hard surface five to six times! Failure to seat the Poles correctly could allow the Poles to separate during use, which could lead to serious personal injuries or property damage.




Note: Do not hit your feet with the Pole sections, as serious injury could occur.


SEC 2 POLE TO BASE ASSEMBLY

HARDWARE REQUIRED


Hardware shown at Actual Size




AAE (x2)
5/16" x 1" Hex Bolt




BTS (x1)
1/4" Barrel Nut

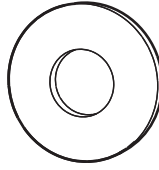


ABD (x4)
5/16" Washer

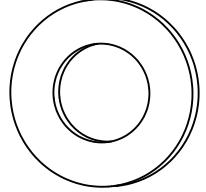

ABN (x2)
1/2" x 1/8" Spacer




BZO (x1)
1/4" x 3" Shoulder Screw



AAO (x2)
5/16" Nylock Nut


PARTS REQUIRED

Parts shown at 5% of Actual Size

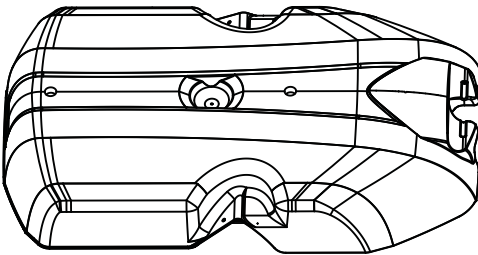


AJM (x1)
Base

Part shown at 25% of Actual Size

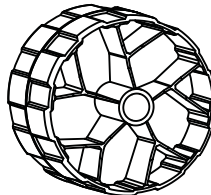


AMU (x2)
Wheel

Parts shown at 10% of Actual Size




AJC (x1)
1/2" x 15 3/4" Axle



AJE (x1)
1/2" x 7" Axle

ALI (x2)
Pole Brace



TOOLS REQUIRED




Pliers




3/16" Allen
Wrench (x2)




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

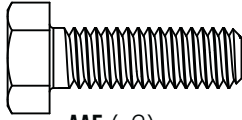


AAE (x2)



AAO (x2)

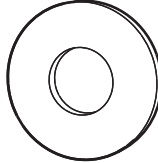

ABD (x4)

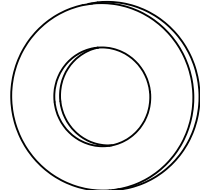


ABN (x2)

SEC

2.1

Attach the flattened end of the **Pole Brace (ALI)** to the **Base (AJM)** with the hardware shown. Remove any residual plastic in the hole with pliers. Only finger tighten the hardware.

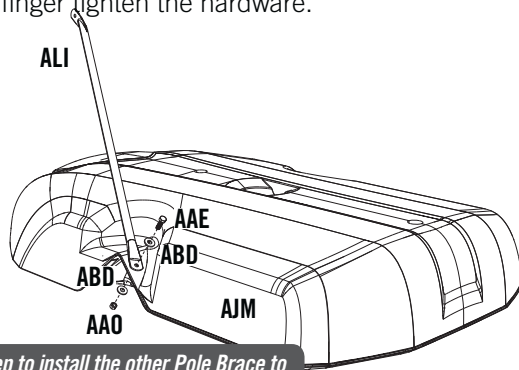


Note: Repeat this step to install the other Pole Brace to the other side of the Base.

SEC


2.2

Slide the $\frac{1}{2}$ " x $15 \frac{3}{4}$ " **Axle (AJC)** through the **Wheels (AMU)** and the holes at the end of the **Bottom Pole (ALE)** as shown. Slide the $\frac{1}{2}$ " x 7" **Axle (AJE)** through the second set of holes at the end of the Bottom Pole as shown. Then slide two $\frac{1}{2}$ " x $\frac{1}{8}$ " **Spacers (ABN)** onto the $\frac{1}{2}$ " x $15 \frac{3}{4}$ " Axle and position them against the Wheels.

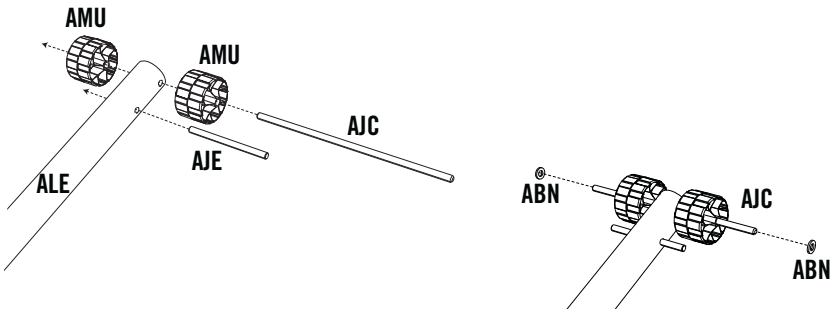





TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



3/16" (x2)

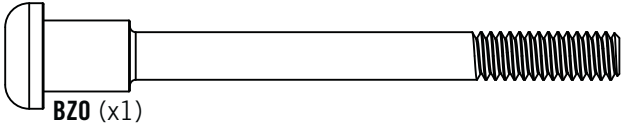

BZO (x1)





BTS (x1)

SEC

2.3


Place the Pole assembly on the ground with the **Warning Sticker (AMT)** on the **Middle Pole (ALF)** facing down. Position the **1/2" x 15 3/4" Axle (AJC)** under the bottom slots of the **Base (AJM)** as shown, and step onto the Base so the Axle snaps into the slots. Then rotate the Pole assembly upward so that the **1/2" x 7" Axle (AJE)** snaps into the upper slots of the Base as shown.

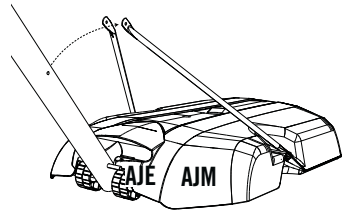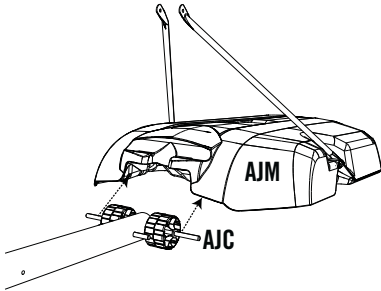

SEC

2.4

Attach the **Pole Braces (ALI)** to the **Bottom Pole (ALE)** with the hardware shown, and tighten all Pole to Base assembly hardware.

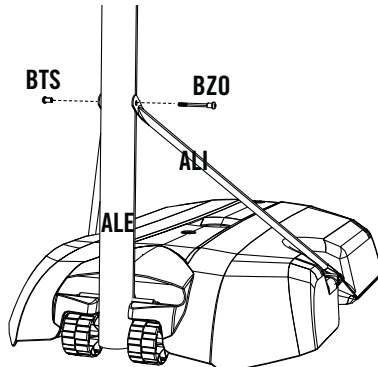


Note: Tip the system backward so the Pole rests on the ground. Do not stand the system up until it is filled with either sand or water later in the assembly.

SEC 3


BACKBOARD TO RIM ASSEMBLY

HARDWARE REQUIRED


Hardware shown at Actual Size



AAM (x2)
5/16" x 1 1/2" Tap Bolt



DFE (x4)
3/8" x 3/4" Bolt



AAV (x2)
5/16" Jam Nut



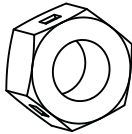


ABB (x4)
3/8" Centerlock Nut

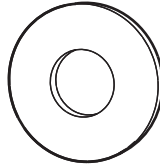


ABD (x2)
5/16" Washer

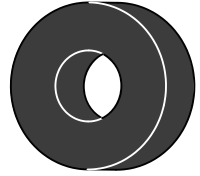

ABF (x2)
7/16" Rubber Washer



ABK (x4)
5/16" Nylock Flange Nut



AAJ (x2)
5/16" Hex T-Nut


Hardware shown at 25% of Actual Size



AOW (x1)
Spring Retainer Plate



AJW (x2)
Compression Spring

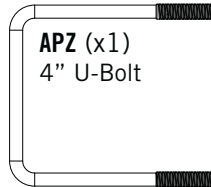


APZ (x1)
4" U-Bolt

SEC 3

BACKBOARD TO RIM ASSEMBLY


PARTS REQUIRED

Parts shown at 5% of Actual Size

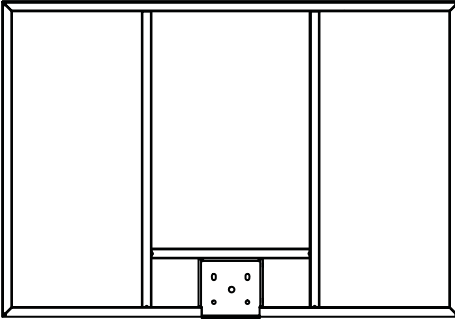


AJI (x1)
Backboard

Part shown at 10% of Actual Size

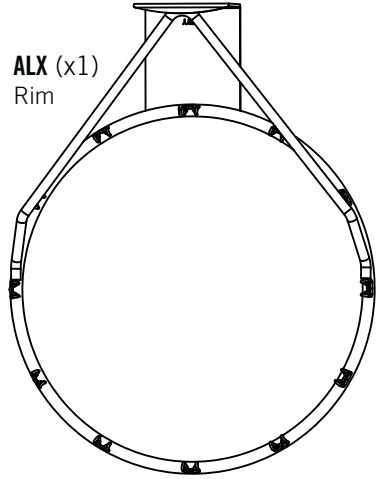


ALX (x1)
Rim


Part shown at 25% of Actual Size

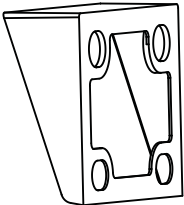

ALD (x1)
Plastic Guard

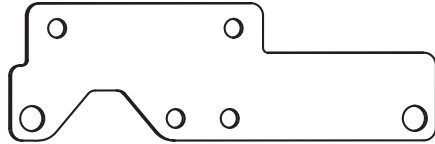

AMY (x2)
Backboard Bracket



DFD (x1)
U-Bolt Support Bracket

TOOLS REQUIRED



Pliers



1/2" Wrench



7/16" Wrench (x2)




9/16" Wrench (x2)




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE




1/2"

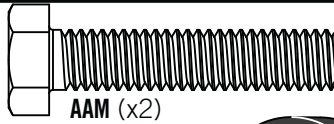


AAM (x2)

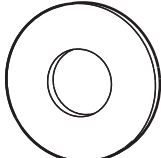

ABD (x2)

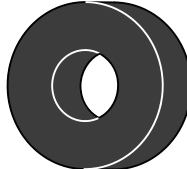

ABF (x2)

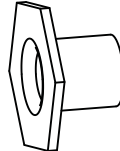


AAJ (x2)


SEC

3.1


Insert two **5/16" x 1 1/2" Tap Bolts (AAM)** with the **5/16" Washers (ABD)** and the **7/16" Rubber Washers (ABF)** through the bottom holes in the back of the **Rim (ALX)** as shown, and secure the hardware with two **5/16" Hex T-Nuts (AAJ)**.

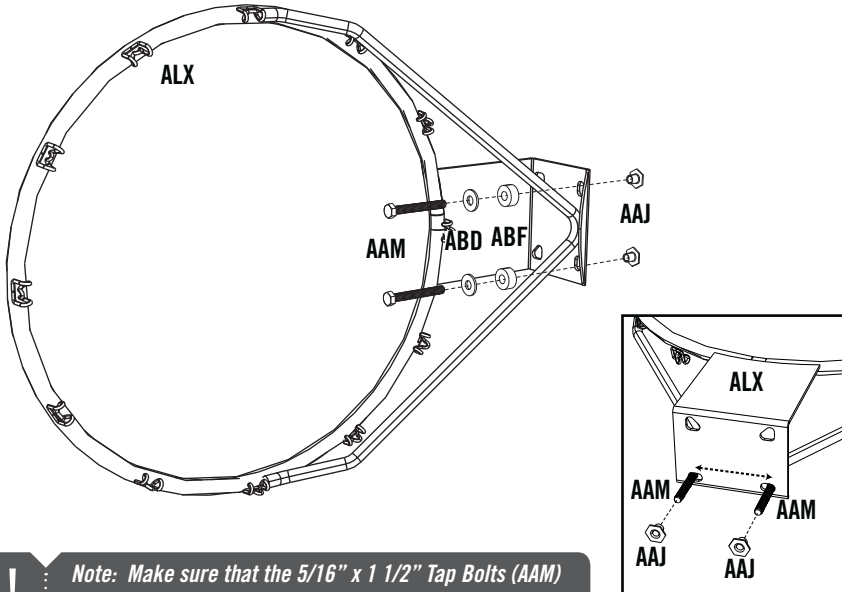

Note: Make sure that the 5/16" x 1 1/2" Tap Bolts (AAM) are positioned on the outside edge of the holes as shown.

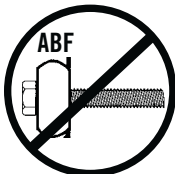

Incorrect

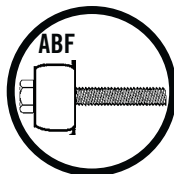


Correct




Note: Do not overtighten the hardware so that the 7/16" Rubber Washers bulge outward as shown.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



1/2"

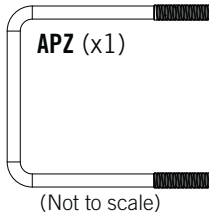

APZ (x1)

(Not to scale)




ABK (x2)

SEC

3.2


Insert the **4" U-Bolt (APZ)** through the **U-Bolt Support Bracket (DFD)** and into the upper part of the opening on the backside of the **Backboard (AJI)** as shown.

Connect the **Rim (ALX)** and **Plastic Guard (ALD)** to the **Backboard (AJI)** with the hardware shown. Secure the **5/16" Nylock Flange Nuts (ABK)** onto the **Tap Bolts (AAM)**.

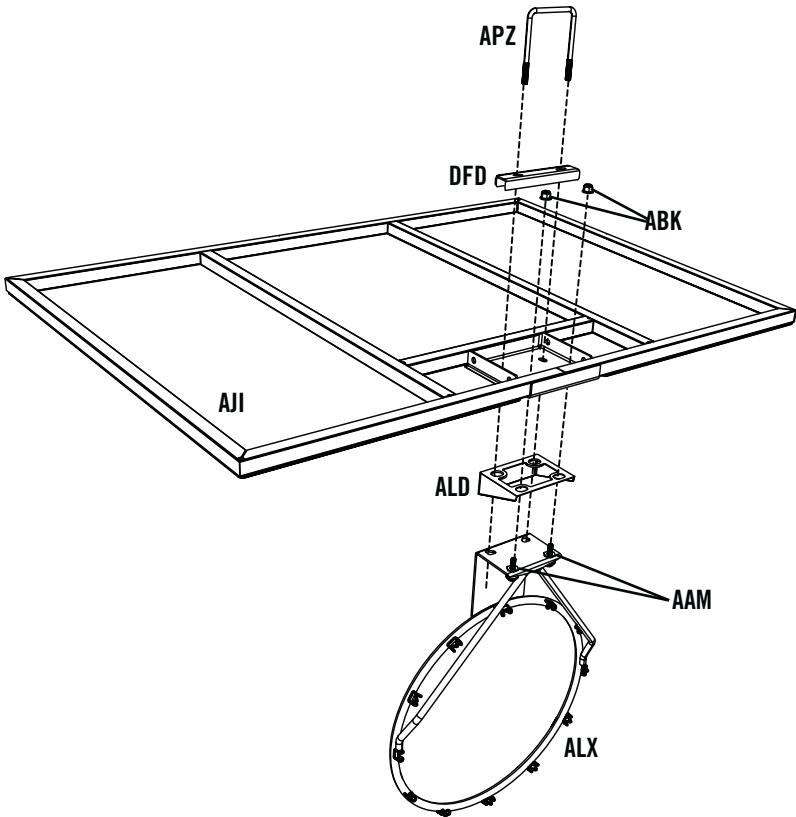




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



1/2"



7/16" (x2)

AOW (x1)



(Not to scale)


AJW (x2)



(Not to scale)



ABK (x2)




AAV (x2)

SEC

3.4

Turn the Backboard Assembly over. Thread the **5/16" Jam Nuts (AAV)** onto each end of the **U-Bolt (APZ)** as far as they will go. Slide the **Compression Springs (AJW)** onto the U-Bolt, and place the **Spring Retainer Plate (AOW)** over the Compression Springs. Secure the Plate to the Springs with the hardware shown.

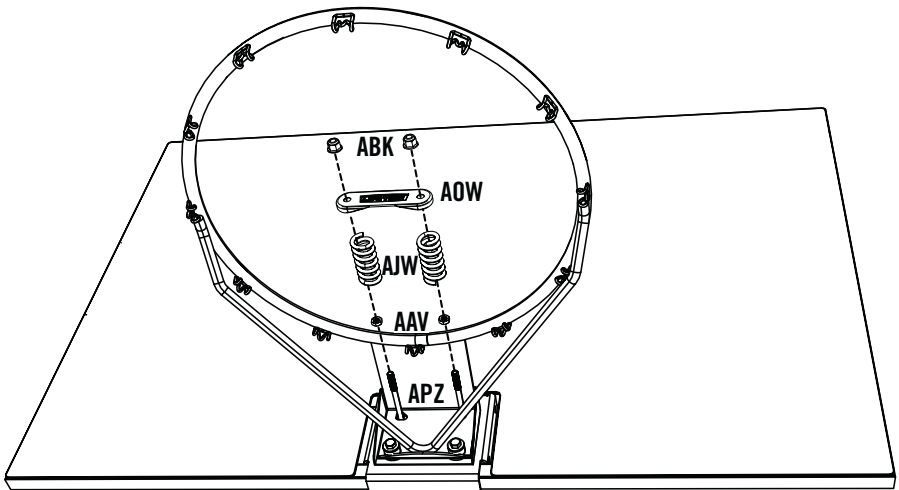


Note: DO NOT COMPLETELY TIGHTEN THE 5/16" NYLOCK FLANGE NUTS IN THIS STEP! Only tighten the Nuts until the Rim does not wobble. Tightening the Nuts will adjust the Rim tension.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



9/16" (x2)



DFE (x4)


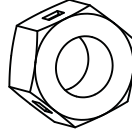


ABB (x4)

SEC

3.5


Attach the **Backboard Brackets (AMY)** to the Backboard using the hardware shown.

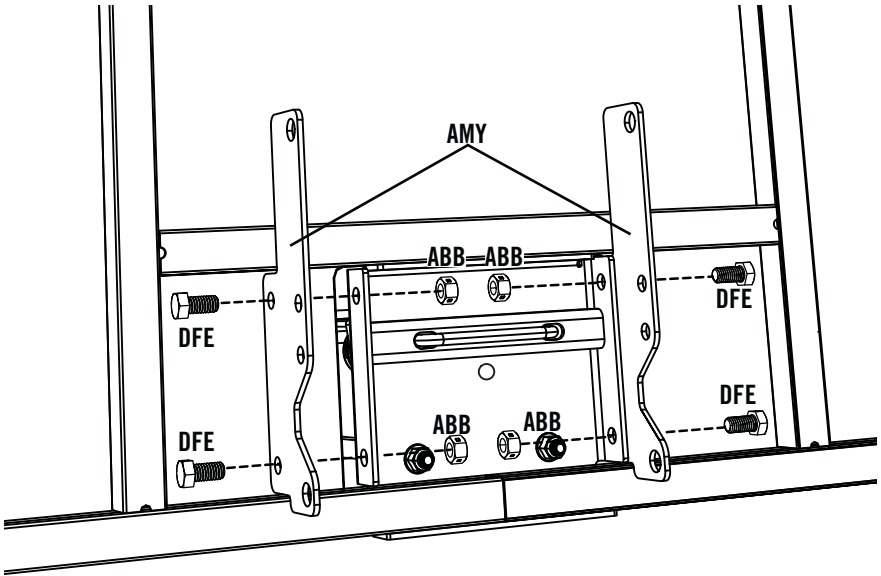


SEC 4 BACKBOARD TO POLE ASSEMBLY

HARDWARE REQUIRED


Hardware shown at Actual Size

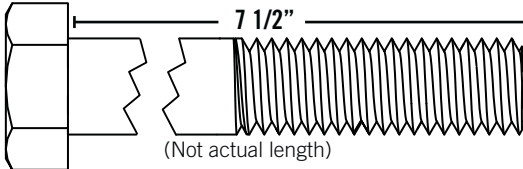


DFB (x2)
1/2" x 7 1/2" Hex Bolt

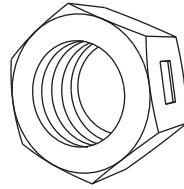


AAX (x4)
1/2" Centerlock Nut

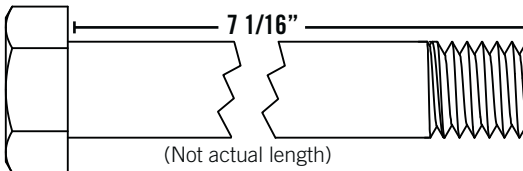

AAD (x2)
1/2" x 7 1/16" Hex Bolt

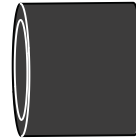


ABL (x4)
.69" x .592" Black
Poly Spacer

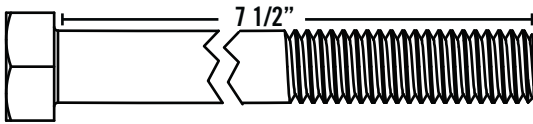

DFC (x1)
3/8" x 7 1/2" Hex Bolt



ABB (x1)
3/8" Centerlock Nut

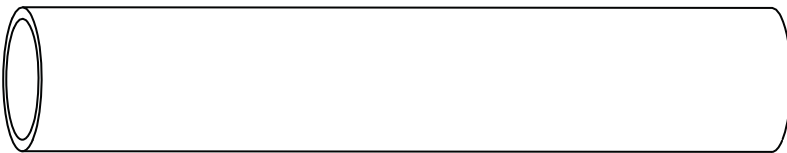


DFA (x2)
3/4" x 4" Spacer

SEC 4 BACKBOARD TO POLE ASSEMBLY

PARTS REQUIRED

Parts shown at 10% of Actual Size




AKC (x2)
Short Extension Arm



AKB (x2)
Long Extension Arm

Part shown at 25% of Actual Size



AJY (x1)
Counterbalance Spring


TOOLS REQUIRED



3/4" Wrench (x2)



9/16" Wrench (x2)




Rubber Mallet



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



9/16" (x2)



DFC (x1)


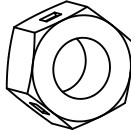


ABB (x1)

SEC

4.1

Attach the **Counterbalance Spring (AJY)** to the Backboard Brackets using the hardware shown.


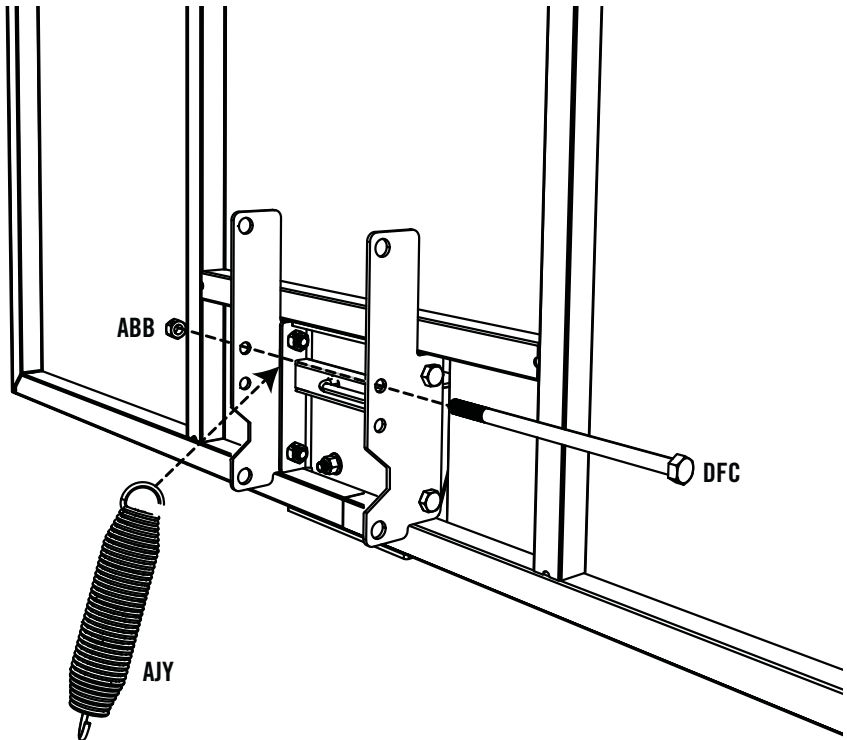





TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



3/4" (x2)

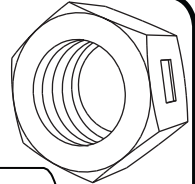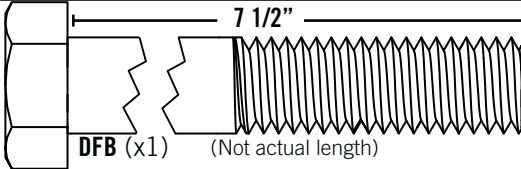

AAX (x1)

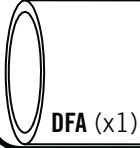


DFA (x1)

SEC

4.2

Secure the **Short Extension Arms (AKC)** to the Backboard Brackets in the location shown with the hardware indicated.

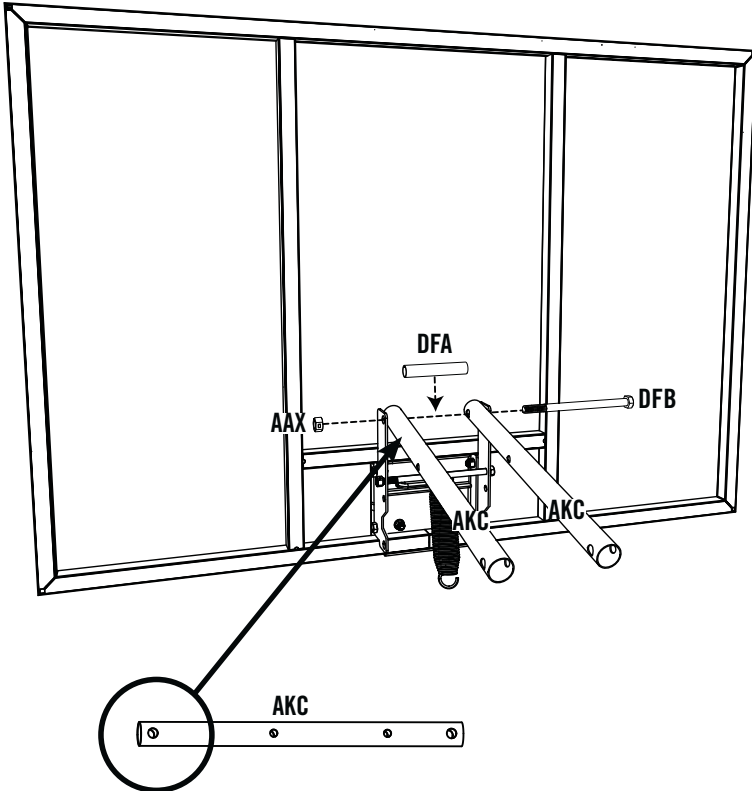



Note: Tighten the 1/2" Centerlock Nut (AAX) until it is flush with the end of the Bolt.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



3/4" (x2)

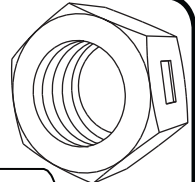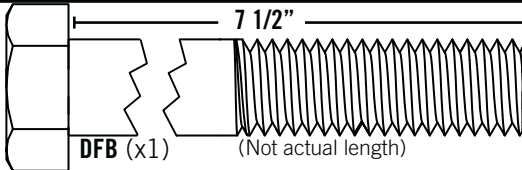

AAX (x1)




DFA (x1)

SEC

4.3


Secure the **Long Extension Arms (AKB)** to the Backboard Brackets in the location shown with the hardware indicated.

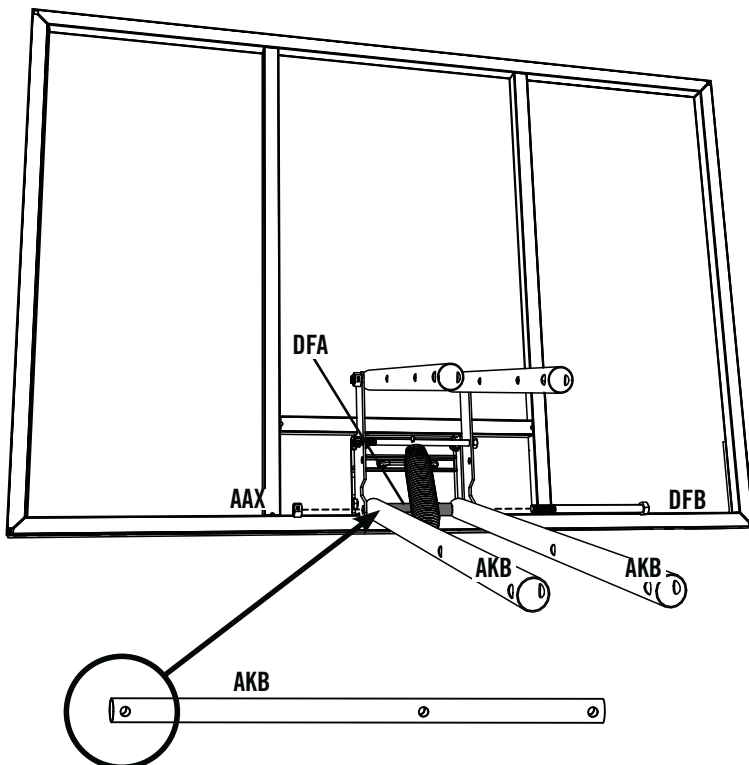


Note: Tighten the 1/2" Centerlock Nut (AAX) until it is flush with the end of the Bolt.




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

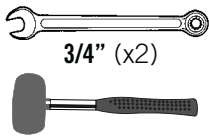



3/4" (x2)

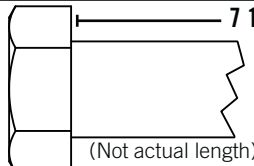

AAD (x2)

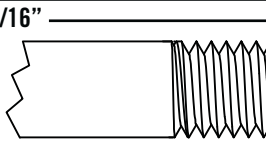

ABL (x4)

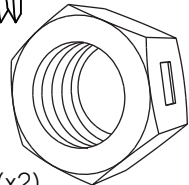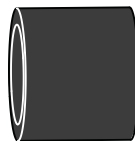

AAX (x2)

SEC


4.4



CAUTION: HAVE ONE ADULT HOLD THE BACKBOARD IN PLACE UNTIL ASSEMBLY HAS BEEN COMPLETED!



Lay the Backboard and Rim assembly on the ground next to the Pole assembly. Rest the Rim on cardboard to prevent scratching. Then secure the **Short and Long Extension Arms (AKC & AKB)** to the Pole Assembly with the hardware shown.

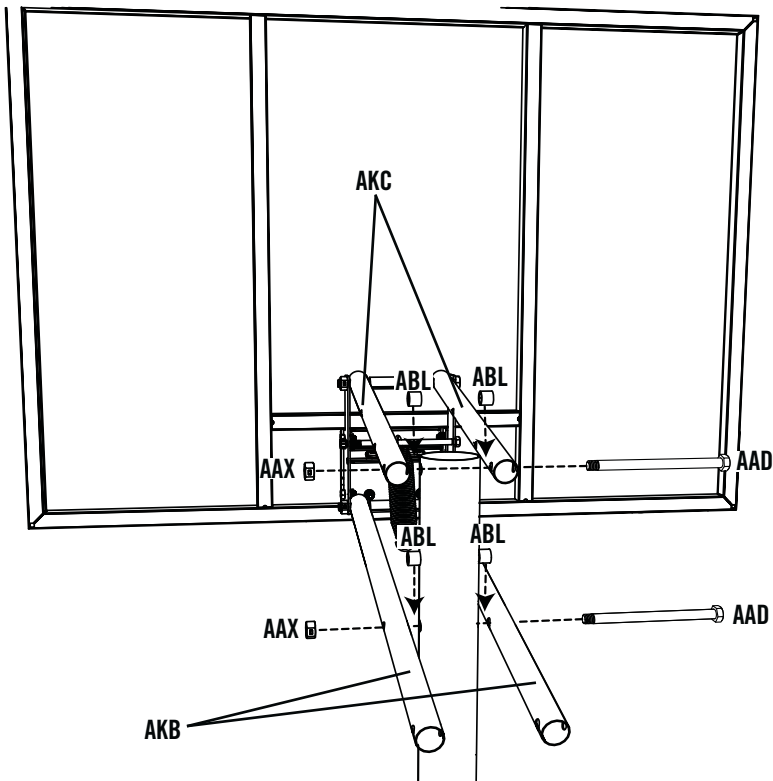


Note: Tighten the 1/2" Centerlock Nut (AAX) until it is flush with the end of the Bolt.


SEC 5 HANDLE ASSEMBLY

HARDWARE REQUIRED


Hardware shown at Actual Size




AAL (x1)
1/4" x 1 1/4" Hex Bolt




ADJ (x1)
1/4" Cap Nut



AAN (x1)
5/16" Cap Nut

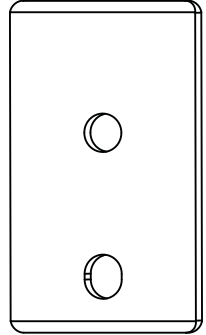


AQQ (x1)
Lock Tab



AAM (x1)
5/16" x 1 1/2" Tap Bolt



ACZ (x2)
.69" x 1.4" Spacer

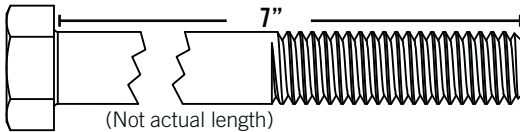

(Not actual length)
AAZ (x1)
3/8" x 7" Hex Bolt



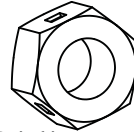


ABB (x1)
3/8" Centerlock Nut

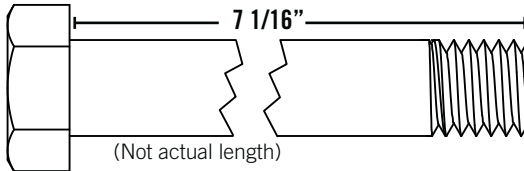


(Not actual length)
AAD (x1)
1/2" x 7 1/16" Hex Bolt

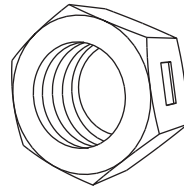

AAX (x1)
1/2" Centerlock Nut



AQH (x1)
Trigger Spring



ADR (x2)
#7 x 3/8" Phillips
Pan Head Screw



ADT (x7)
#6 x 5/8" Screw


SEC 5 HANDLE ASSEMBLY

PARTS REQUIRED

Parts shown at 10% of Actual Size



ALB (x1)
Outer Tube



AKQ (x1)
Inner Channel

Parts shown at 25% of Actual Size



AKL (x1)
Left Handle




AKN (x1)
Right Handle



AMN (x1)
Trigger

TOOLS REQUIRED



Phillips Screwdriver



7/16" Wrench (x2)



1/2" Wrench (x2)





3/4" Wrench (x2)




9/16" Wrench (x2)



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



ADR (x2)

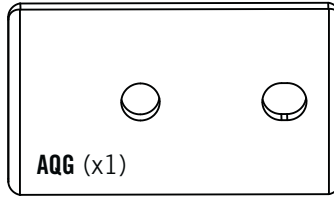


AQG (x1)

SEC

5.1

Secure the **Lock Tab (AQG)** to the **Trigger (AMN)** with the hardware shown.

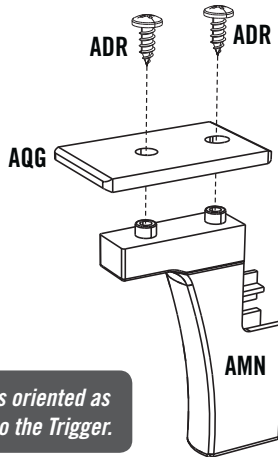


Note: Make sure the Lock Tab is oriented as shown when attaching the Tab to the Trigger.

SEC

5.2


Place the **Right Handle (AKN)** onto the **Outer Tube (ALB)** so that the notch of the Outer Tube fits within the Handle as shown.

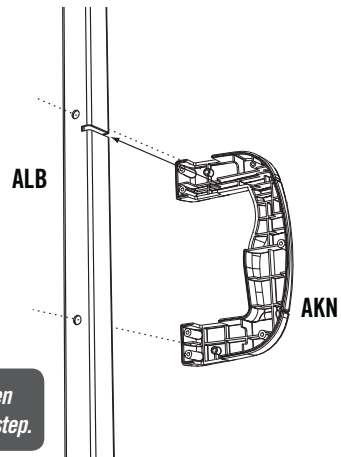

Note: Make sure that the Inner Channel (AKQ) has been removed from the Outer Tube before performing this step.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



ADT (x7)




AQH (x1)

SEC

5.3

Place the **Trigger Spring (AQH)** onto the **Trigger (AMN)** as shown. Then place the Trigger inside the **Right Handle (AKN)** so that the **Lock Tab (AQG)** fits into the slot on the **Outer Tube (ALB)** as shown.

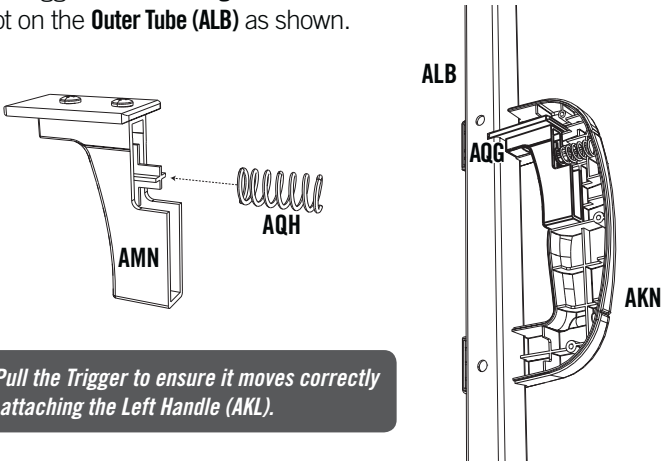


Note: Pull the Trigger to ensure it moves correctly before attaching the Left Handle (AKL).

SEC

5.4

Place the **Left Handle (AKL)** over the **Right Handle (AKN)** as shown, and attach the Handles to the **Outer Tube (ALB)** with the hardware shown.

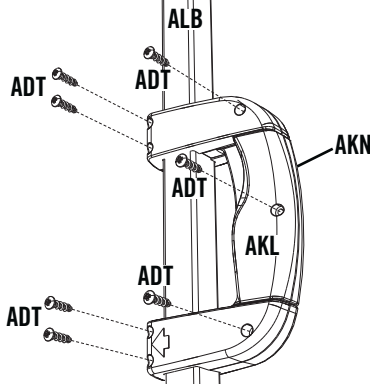


Note: To prevent stripping the holes in the Handles, do not overtighten the #6 x 5/8" Screws (ADT).




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



7/16" (x2)



AAL (x1)




ADJ (x1)

SEC

5.5

Insert the 1/4" x 1 1/4" Hex Bolt (AAL) through the holes indicated on the Outer Tube (ALB). Secure the 1/4" x 1 1/4" Hex Bolt to the Outer Tube with the 1/4" Cap Nut (ADJ).


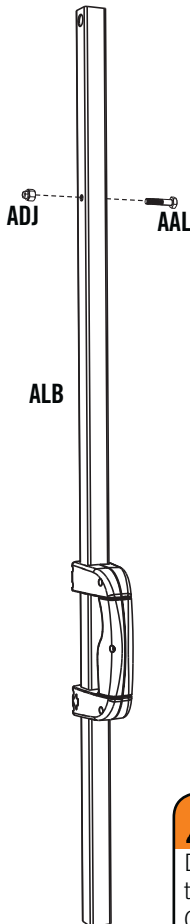


WARNING

Do not overtighten the Cap Nut. If the end of the Bolt breaks through the plastic cap, call our Customer Service Department. Exposed threads on the end of the Bolt may cause serious injuries.




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

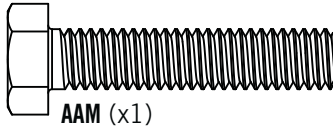

SEC

5.6

While holding the **Trigger (AMN)** in, insert the notched end of the **Inner Channel (AKQ)** into the **Outer Tube (ALB)**. Continue to insert the Inner Channel into the Outer Tube until the Trigger clicks into the first slot. Then release the Trigger.

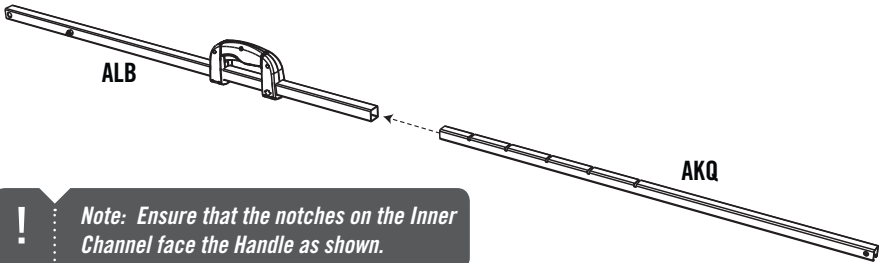


Note: Ensure that the notches on the Inner Channel face the Handle as shown.

SEC

5.7

Attach the **Inner Channel (AKQ)** to the **Pole Bracket (ALL)** with the hardware shown.

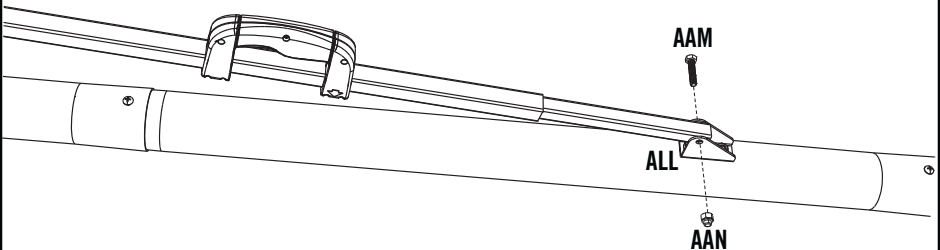


WARNING

Do not overtighten the Cap Nut.




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

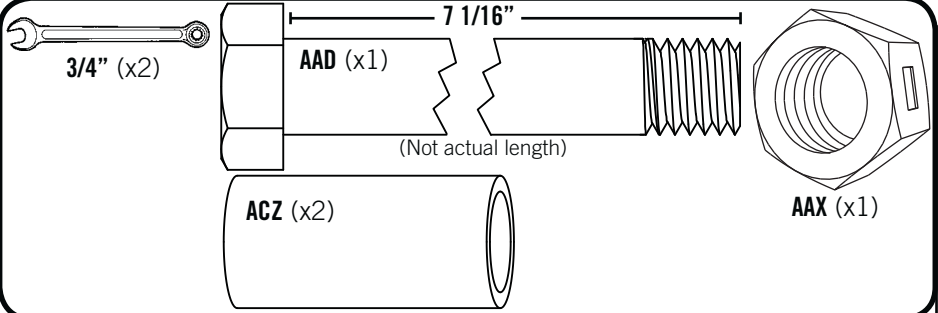

SEC

5.8

Secure the **Outer Tube (ALB)** to the **Long Extension Arms (AKB)** with the hardware shown.

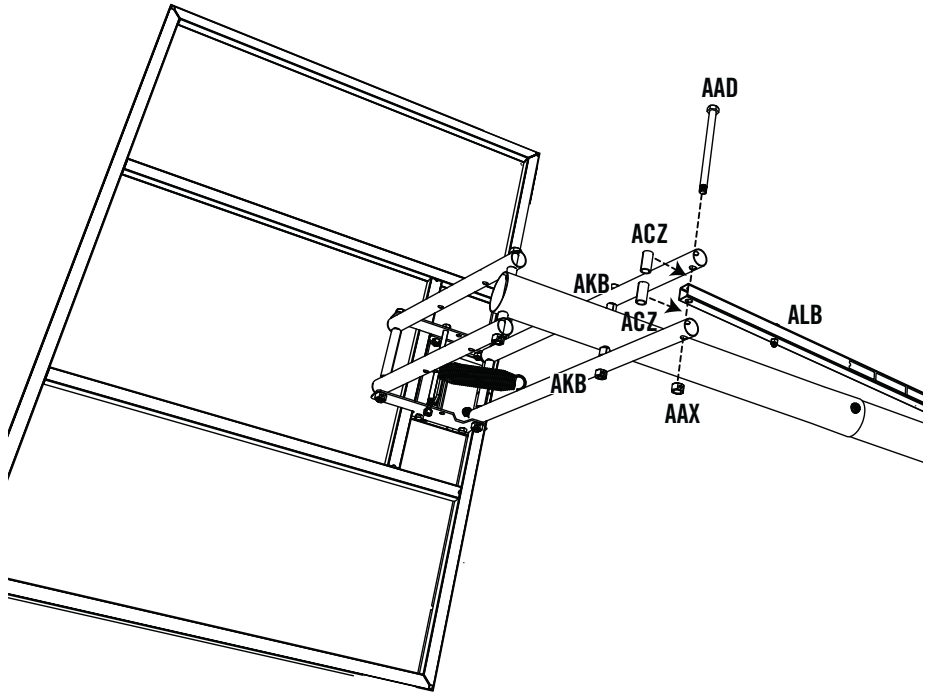


Note: Tighten the 1/2" Centerlock Nut (AAX) until it is flush with the end of the Bolt.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



9/16" (x2)

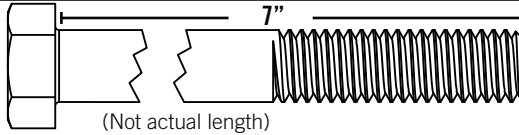

AAZ (x1)

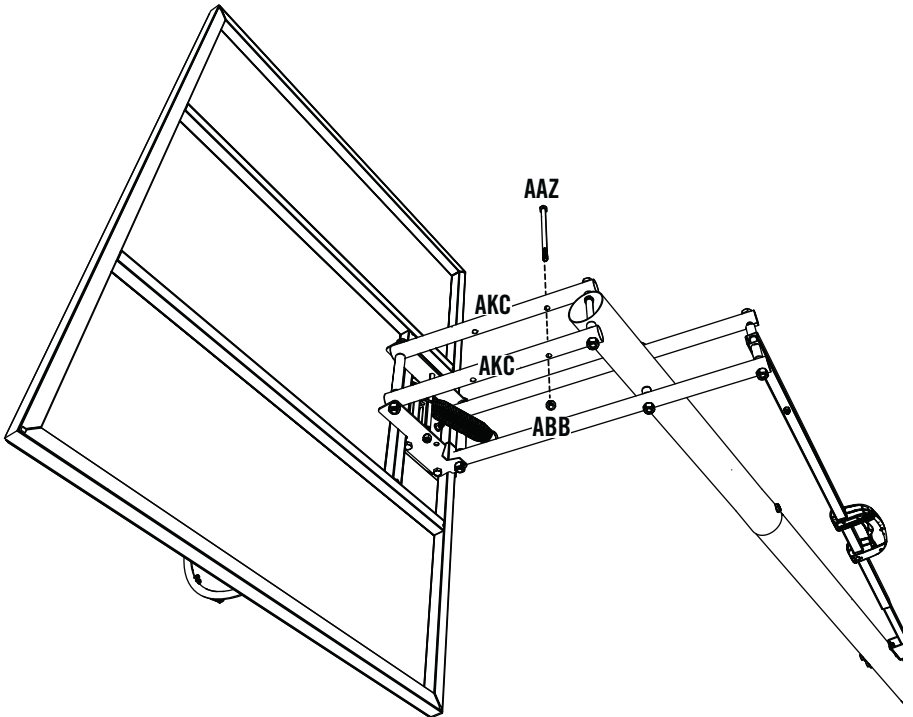


ABB (x1)

SEC

5.9

Insert the **3/8" x 7" Hex Bolt (AAZ)** through the holes in the **Short Extension Arms (AKC)** that are closest to the Pole. Secure the Bolt to the Short Extension Arms with the **3/8" Centerlock Nut (ABB)**.



Note: Tighten the 3/8" Centerlock Nut until it is flush with the end of the Bolt.



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE




Wrench

NO HARDWARE REQUIRED FOR THIS PAGE

SEC

5.10

Using the closed end of a Wrench, stretch the **Counterbalance Spring (AJY)** up and over the **3/8" x 7" Hex Bolt (AAZ)** as shown.

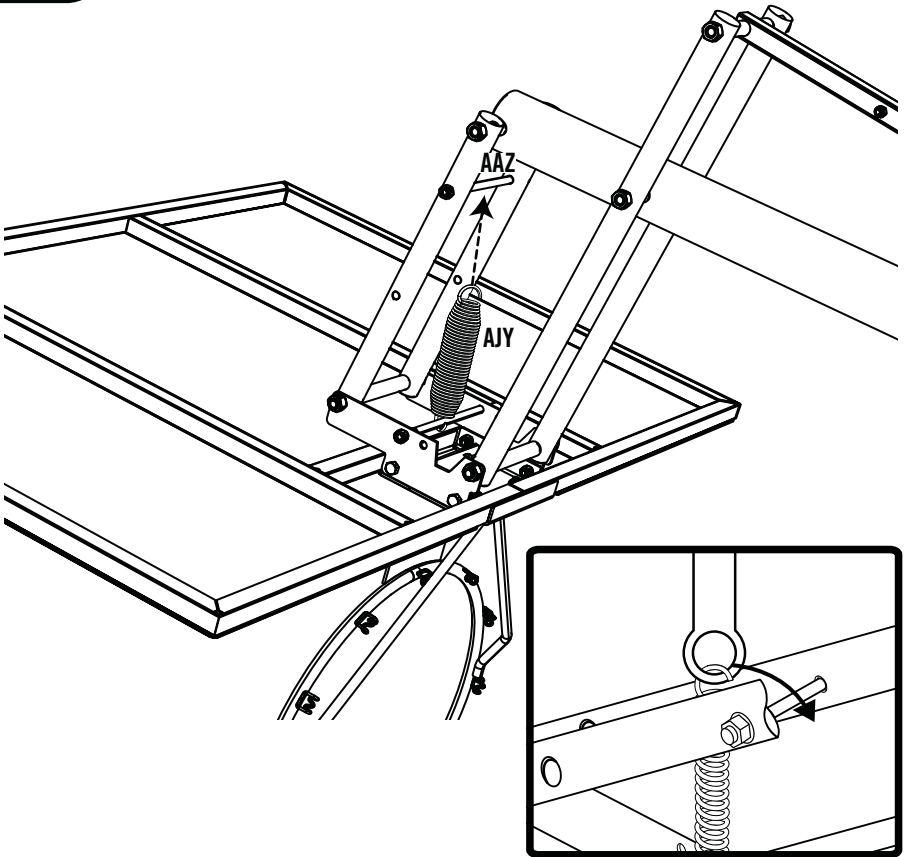


Note: Make sure all hardware has been securely tightened before moving to the next section.

SEC 6 FINAL ASSEMBLY

HARDWARE REQUIRED

Hardware shown at Actual Size




ADP (x10)
#10 x 7/8" Self-Drilling Screw


Note: Only eight of the 10 Screws will be used.

PARTS REQUIRED

Part shown at 10% of Actual Size

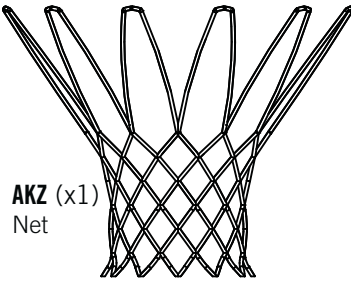

AKZ (x1)
Net

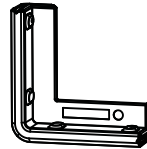


AJX (x2)
Corner Frame Guard




AJQ (x1)
Center Frame Guard

Part shown at Actual Size

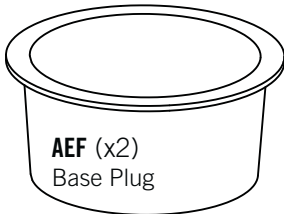

AEF (x2)
Base Plug

TOOLS REQUIRED




Funnel



Sand
(362 lb)





Water Hose

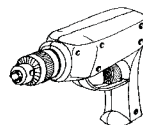

Electric Drill



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

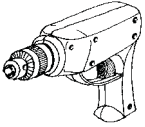


ADP (x8)

SEC

6.1


Remove the plastic film from the **Backboard (AJI)**. Attach the **Corner Frame Pads (AJX)** to the **Backboard (AJI)** in the locations shown with the hardware indicated.

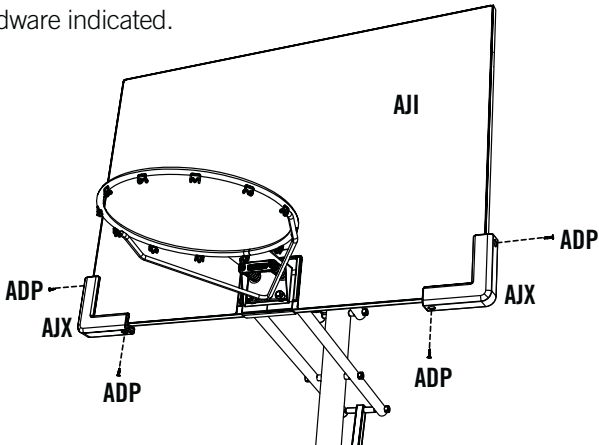

SEC


6.2

Attach the **Center Frame Pad (AJQ)** to the Backboard in the location shown with the hardware indicated. Make sure that the Center Frame Pad is centered on the metal piece of the Backboard as shown.

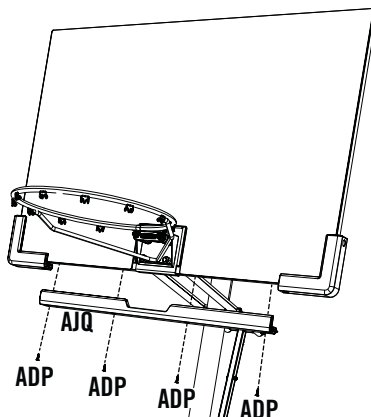



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



(362 lb)

NO HARDWARE REQUIRED FOR THIS PAGE

Two adults are required to complete assembly. To prevent serious injuries, the Pole should be held down by one adult at all times while the Base is being filled.

SEC

6.3

OPTION A: FILLING WITH SAND


(362 lb of sand required)

- Insert a **Base Plug (AEF)** into the **Base (AJM)** in the hole closest to the Pole.
- Using a funnel, fill the Base with sand through the hole furthest from the Pole until the sand is just below the hole.
- Using two adults, stand the Base up on a flat surface and finish filling the Base with sand.
- Insert the other Base Plug into the hole furthest from the Pole.



WARNING

For safety reasons, we recommend that sand be used instead of water to fill the Base. If a leak develops, water could run out unnoticed, allowing the system to fall over, resulting in serious personal injuries, or property damage. If using Water, check the Base carefully for leaks. If a leak is found, lay the system down on the ground and call Customer Service. Do not use, stand up, or play on a leaking system.

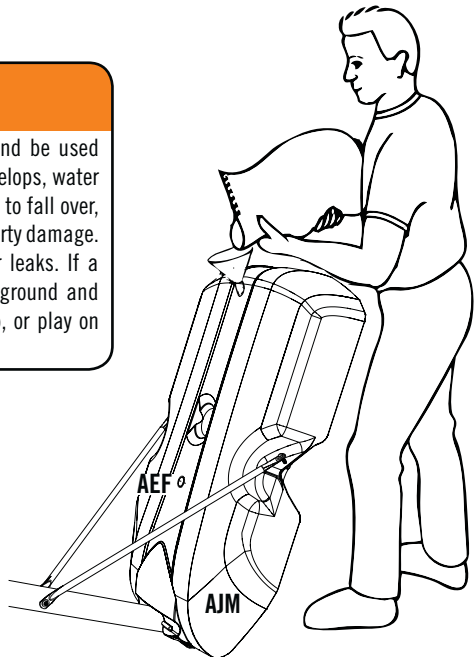



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



NO HARDWARE REQUIRED FOR THIS PAGE


Two adults are required to complete assembly. To prevent serious injuries, the Pole should be held down by one adult at all times while the Base is being filled.

SEC

6.3

OPTION B: FILLING WITH WATER

- Insert a **Base Plug (AEF)** into the **Base (AJM)** in the hole closest to the Pole.
- Fill the Base with cold water through the hole furthest from the Pole until the water is just below the hole.
- Using two adults, stand the Base up on a flat surface and finish filling the Base with water.
- Add one tablespoon of chlorine bleach to the water to prevent algae formation.
- Insert the other Base Plug into the hole furthest from the Pole.

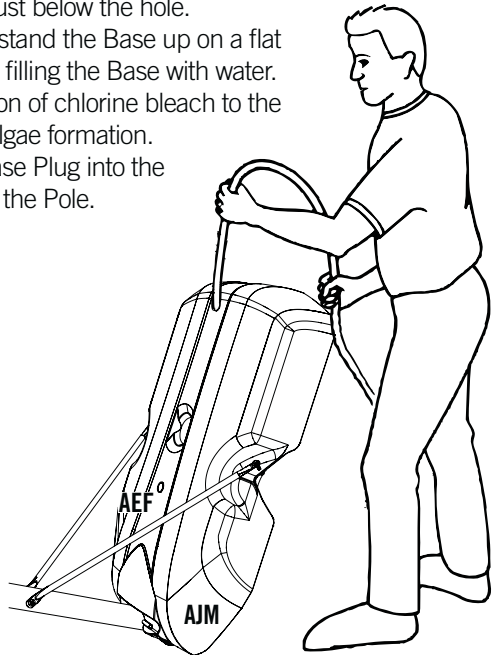




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

NO TOOLS OR HARDWARE REQUIRED FOR THIS PAGE

SEC

6.4

Attach **Net (AKZ)** to the **Rim (ALX)**.

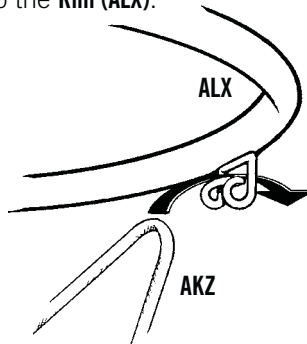


Note: If a replacement Net is needed, please call our Customer Service Department. Our Nets are shorter than average to reduce the risk of entanglement.

SEC

6.5

Pull the Handle all the way down so the system is at the highest setting. Line up the 10' mark on the **Height Sticker (AKP)** with the arrow on the **Left Handle (AKL)**, and apply the Sticker to the back of the Pole as shown.


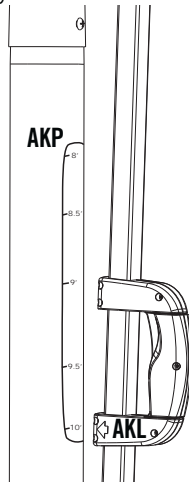


**ENHANCE YOUR LIFETIME® PURCHASE BY ADDING
ACCESSORIES OR OTHER GREAT PRODUCTS:**

To purchase accessories or other Lifetime Products, visit us at:

www.lifetime.com

Or call: 1-800-424-3865



NOTES



WARNING



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE.

Owners must ensure that all players know and follow these rules for safe operation of the system.

- Only hang from the rim briefly to regain balance or avoid injuring others. Release the rim as soon as safely possible.
- During play, especially when performing dunk type activities, keep player's face away from the backboard, rim, and net. Serious injury could occur if teeth/face come in contact with the backboard, rim, or net. Player should wear a mouth guard during play.
- Do not slide, climb, or play on base or pole.
- Completely fill base according to manufacturer's instructions. Never leave the unit standing in an upright position without first filling the base with weight or the system will tip quickly causing serious personal injury.
- When adjusting height or moving system, keep hands and fingers away from moving parts.
- Do not allow children to move or adjust system.
- Do not wear jewelry (rings, watches, necklaces, etc.) during play. Objects may entangle in net.
- Keep organic material away from pole base. Grass, litter, etc. could cause corrosion and/or deterioration.
- Surface beneath the base must be smooth and free of gravel or other objects. Punctures cause leakage and could cause system to tip over.

- Once a month check pole and all metal parts for signs of corrosion (rust, pitting, chipping). Completely remove rust and repaint with exterior enamel. If rust has penetrated any steel part, replace that part immediately.
- Check system before each use for proper ballast, loose hardware, excessive wear, instability, and signs of corrosion and repair before use.
- Never play on damaged equipment.
- Do not use system during windy or severe weather. System may tip over. Place system in an area protected from the wind or in an area away from property that may be damaged if the system falls, and from overhead power lines.
- Do not use the system to lift or hoist anything. The mechanism is designed to lift only the weight of the backboard and rim. Do not hang anything from the handle, rim backboard, or lifter arms as this will damage the system and void the warranty.



ADVERTENCIA



AVERTISSEMENT



SI NO SE OBEDECEN ESTAS ADVERTENCIAS PUEDEN PRODUCIRSE GRAVES LESIONES Y/O DAÑOS A LA PROPIEDAD.

El propietario del sistema debe asegurarse de que todos los jugadores conozcan y respeten estas reglas para que el sistema se use en forma segura.

- Cuélguese del aro sólo en forma breve, para recuperar el equilibrio o evitar lesionar a otros jugadores. Suéltese del aro lo más pronto que pueda hacerlo con seguridad.
- Durante el juego, especialmente en el embocar violentamente de alto, la cara de los jugadores debe mantenerse alejada del tablero, el aro y la red. Pueden producirse lesiones graves si los dientes o la cara entran en contacto con el tablero, el aro o la red. Los jugadores deben usar un protector bucal durante el juego.
- No se deslice, no trepe ni juegue sobre la base o el poste.
- Llene la base completamente siguiendo las instrucciones del fabricante. Nunca deje la unidad en posición de uso sin haber llenado previamente la base con material de contrapeso, pues el sistema podría tumbarse rápidamente y causar graves lesiones personales.
- Mantenga las manos y los dedos alejados de las piezas móviles cuando regule la altura o desplace el sistema.
- No deje que los niños regulen ni desplacen el sistema.
- No use joyas (anillos, relojes, collares o gargantillas, etc.) durante el juego. Estos objetos pueden engancharse en la red.
- La superficie donde se coloque la base debe estar lisa y desprovista de piedras, grava u otros objetos. Las perforaciones pueden originar pérdidas, y éstas pueden hacer que el sistema se tumbe.
- No permita que la base del poste entre en contacto con materiales orgánicos. El pasto, los desechos animales, etc., pueden causar corrosión y/o deterioros.
- Controle el poste y todas las piezas metálicas una vez al mes en busca de signos visibles de corrosión (oxidación, picaduras, escamado). Elimine todo rastro de óxido y vuelva a pintar con esmalte para exteriores. Si el óxido ha penetrado cualquier pieza de acero, reemplace esa pieza de inmediato.
- Inspeccione el sistema antes de cada uso para verificar que esté adecuadamente contrapesado, que los elementos de fijación no estén flojos, que no haya desgaste excesivo, inestabilidad ni signos de corrosión. Si encuentra irregularidades, repárelas antes de usar el sistema.
- Nunca juegue con un equipo dañado.
- No use el sistema en presencia de vientos fuertes o condiciones climáticas adversas, ya que puede tumbarse. Coloque la unidad en su posición de almacenamiento y/o en una zona a resguardo del viento, lejos de propiedades personales que puedan dañarse si el sistema se cae, y de líneas de suministro de energía.
- No use el sistema para levantar ningún objeto. El mecanismo está diseñado para elevar solamente el peso del tablero con el aro. No cuelgue nada de la arañadora, el aro, el tablero ni los brazos de elevación, ya que esto puede dañar el sistema y anular la garantía.

FAUTE DE NE PAS SUIVRE CES AVERTISSEMENTS, VOUS RISQUEZ DE CAUSER DES BLESSURES GRAVES ET/OU DES DOMMAGES À L'ÉQUIPEMENT.

Le propriétaire doit s'assurer que tous les joueurs connaissent et appliquent les règles suivantes afin d'utiliser l'équipement en toute sécurité.

- Ne vous suspendez pas à l'anneau plus que nécessaire pour retrouver votre équilibre ou éviter de blesser les autres joueurs. Relâchez l'anneau aussitôt que possible.
- Lors d'un match, particulièrement dans le cas des smashes, le visage du joueur ne doit pas faire face au panneau, à l'anneau, ni au filet. Le joueur risque de graves blessures si ses dents ou son visage entrent en contact avec le panneau, l'anneau, ou le filet. Les joueurs doivent toujours porter un protège-dents lorsqu'ils jouent.
- Ne glissez pas, ne grimpez pas, et ne jouez pas sur la base ou le poteau.
- Remplissez complètement la base selon les instructions du fabricant. Ne laissez jamais l'unité debout de plein pied sans avoir d'abord rempli la base avec un poids ou l'équipement pourrait basculer rapidement et causer de graves blessures.
- Lorsque vous ajustez la hauteur ou lorsque vous déplacez l'équipement, gardez vos mains et doigts loin des pièces mobiles.
- Ne permettez pas aux enfants de déplacer ou d'ajuster l'équipement.
- Ne portez pas de bijoux (bagues, montres, colliers, etc.) lorsque vous jouez. Ces objets pourraient s'accrocher au filet.
- La surface sur laquelle est posée la base doit être lisse et sans gravier ou tout autre objet qui pourrait troubler la base entraînant ainsi une fuite ce qui pourrait faire basculer l'équipement.
- La base ne doit pas non plus être posée sur aucun type de matière organique. L'herbe, les déchets, etc. peuvent entraîner la corrosion et la détérioration de l'équipement.
- Une fois par mois, vérifiez que le Poteau et toutes les pièces en métal ne montrent pas de signes de corrosion (rouille, piqûres, écaillage). Enlevez toute la rouille et repeignez complètement avec une peinture pour extérieur. Si la rouille a pénétré une des pièces en acier, vous devez remplacer immédiatement la pièce en question.
- A chaque fois que vous allez utiliser l'équipement, vérifiez d'abord l'équilibre, la possibilité de pièces desserrées ou usées, la stabilité de l'équipement et tout signe de corrosion ou réparation nécessaire avant utilisation.
- Ne jouez jamais avec un équipement endommagé.
- N'utilisez pas l'équipement lors de fortes rafales de vent ou de mauvais temps. L'équipement pourrait basculer. Placez l'équipement dans un endroit abrité du vent ou loin des structures qu'il pourrait endommager s'il basculait et loin des fils électriques.
- N'utilisez pas l'équipement pour lever ou soulever quoique ce soit. Son mécanisme a été conçu uniquement pour soutenir le poids du panneau et de l'anneau. N'accrochez rien au manche, à l'anneau, au panneau ni aux leviers sous peine d'endommager l'équipement et d'annuler la garantie.

#FS16400

10/12/2004

www.lifetime.com

WARRANTY INFORMATION

LIFETIME BASKETBALL EQUIPMENT

5-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of five years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective basketball equipment. If the equipment is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the basketball system or its components are not covered under this warranty.
3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the net or rim will void this warranty.
4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010, or call (800) 225-3865

M-F 7 a.m. to 5 p.m. MST.

****Call or visit our Web site for Saturday hours****

Please include your dated sales receipt and photographs of damaged parts.

To register the product, visit our Web site at www.lifetime.com



www.lifetime.com