

D. Operation buttons on the panel of the transmitter:

HI key- for fan high speed.

MED key- for fan medium speed.

LOW key- for fan low speed.

OFF key-for fan speed off.

LIGHT key-for light brightness and off.

- The light function is controlled by pressing the LIGHT key. Hold key down to increase or decrease light. Tap key quickly to turn light off or on.
- Keep pressing the button in excess of 0.7 second it becomes a dimmer, the light varies cyclically in approximate 8 second.
- The light key has auto resume, so will stay at the same brightness as the last time it was turned off.

YOUR REMOTE NOW HAS FULL CONTROL OF THE FAN AND LIGHT.

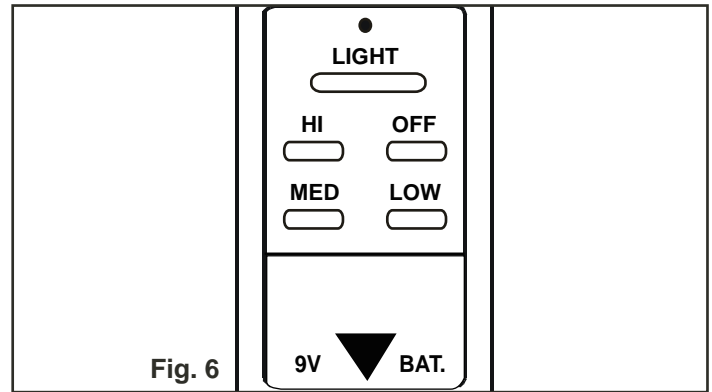


Fig. 6

4.TROUBLE SHOOTING

1. Fails to operate:

- a. Power to receiver?
- b. Receiver wired correctly?
- c. Fan manual speed control in highest position?
- d. Light kit switch turned on?
- e. Good battery in the transmitter?
- f. Code set at exact same positions in both transmitter and receiver?

2. Won't operate at distance

If transmitter operates fan/light kit when up close, but not at 20 feet away, try placing the black antenna wire higher; up through ceiling/outside the junction box.

NOTICE!

Your ceiling fan and light kit assembly must meet the following requirements:

1. Do not use with solid state fans.
2. Electrical rating: 120V 60Hz 3.5A
MAX. motor amps:1.0
MAX. light watts:300 (incandescent only)

1996 Hampton Bay Fan& Lighting Co.
2455 Paces Ferry Road
Atlanta, Georgia 30339
All Rights Reserved
TOLL FREE 1-877-898-1881