STEP 4

Adjust Space Adjusters (B) on the top by turning the locking ring clockwise (Figure 4a) until the lock head on the handle of the swing gate fits the lock hole of the opposite part of the frame – make sure to leave **1/32”** (1 mm) between the lock head and the lock hole (Figure 4b).


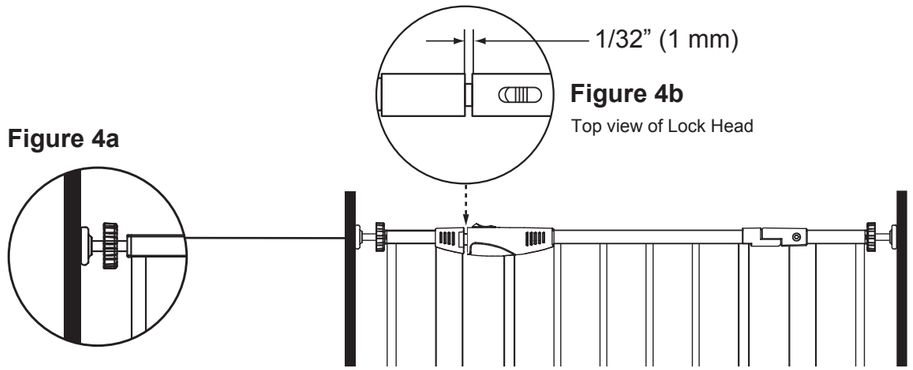


Figure 4a

Figure 4b
Top view of Lock Head

FINISHED

Now your gate is ready for use. You may turn stopper up or down depending on your preferred swinging direction.

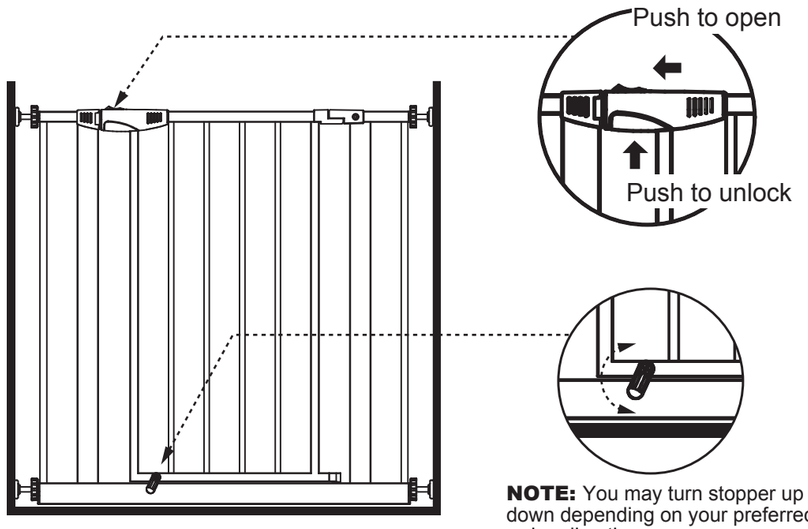

NOTE: You may turn stopper up or down depending on your preferred swing direction.

WARNING: This gate is not JPMA certified and does not meet those safety standards (ASTM F1004) for child safety gates. Do not use the get gate if any components are damaged or missing. Please call our **Customer Service 1-800-628-8815** if any components are damaged or missing.


PET GATE




INSTALLATION INSTRUCTIONS

CONTENTS

A Pet Essential Pet Gate x 1

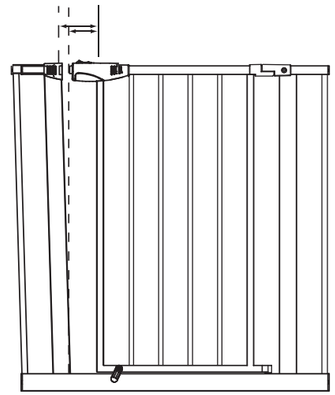

B Space Adjusters with Locking Rings x 4



D Screws with Drywall Anchor x 4 (optional)



C Wall Cups with Adhesive Pads x 4 (optional)



E Extension x 1 (optional)



WARNING: This gate is not JPMA certified and does not meet those safety standards (ASTM F1004) for child safety gates. Do not use the get gate if any components are damaged or missing. Please call our **Customer Service 1-800-628-8815** if any components are damaged or missing.

ASSEMBLY

The gate can be adjusted with the Space Adjusters (B) at each end. Ensure that the wall surface or the door frame is strong and rigid enough to safely install the gate.

Measure the opening where the gate is to be installed to ensure that the opening is between 29.5”- 37.75”. Refer to the table to identify if an extension is required.

Min. Width	Max. Width	Extensions Required
29.5 in.	35 in.	None
35 in	37.75 in.	1


PET ESSENTIALS


INSTALLATION INSTRUCTIONS

⚠ WARNINGS

- GATE IS DESIGNED FOR PET USE ONLY. This is NOT a child safety gate
- Incorrect fitting or positioning of this gate could result in injury
- Do not use the pet gate if any components are damaged or missing
- Pet Gate must never be installed across a window
- Make sure that the wall or door frame where you are installing the gate is strong and has a clean, smooth surface
- Once installed, the gate should be checked regularly to ensure that it has remained properly secured and the locking mechanism is still engaged
- If the gate becomes damaged, DO NOT use again


STEP 1 – GATE ASSEMBLY WITHOUT EXTENSION

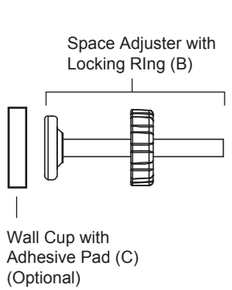


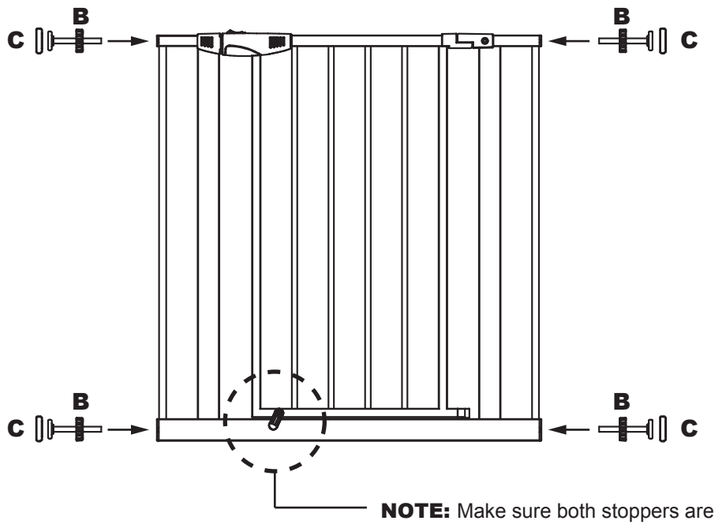

NOTE: Make sure both stoppers are pointed downward to prevent the gate from swinging during the assembling process.

STEP 2 – GATE ASSEMBLY WITH EXTENSION

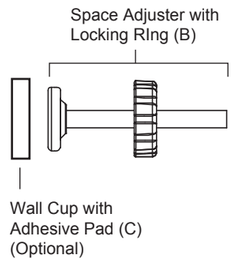


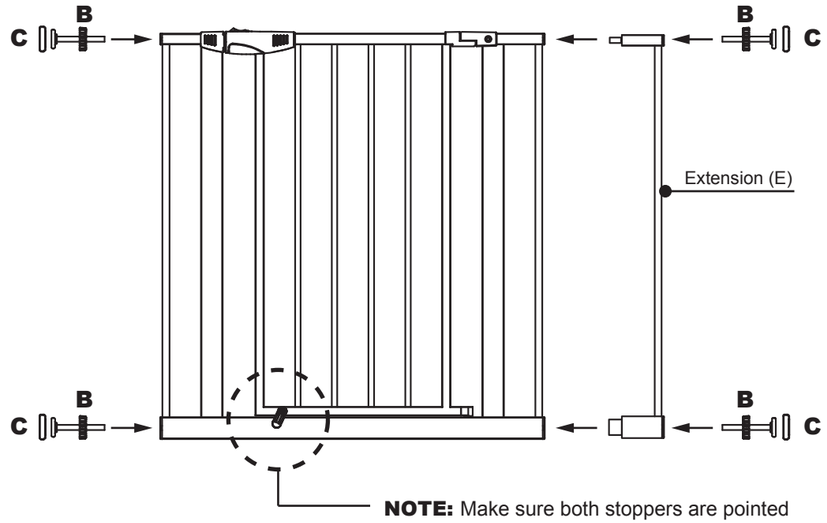

NOTE: Make sure both stoppers are pointed downward to prevent the gate from swinging during the assembling process.

STEP 3

1. Position the gate leveled and centered in the opening.

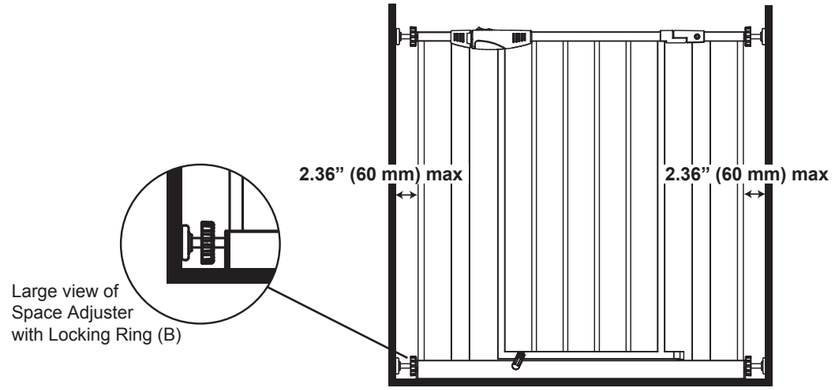

NOTE: Ensure the handle is in the closed position when installing as shown in the illustration above. The gap between the outer bars of the gate and the wall or door frame should not exceed 2.36” (60 mm). If it is wider than 2.36” (60 mm), you should use an extension. The bottom of the gate should rest against the floor.

2. Turn the locking ring by hand clockwise to the bottom Space Adjusters (B) until they are tight.
   NOTE: It is normal that the top of the gate doesn’t completely close at this point.