

2020 Home Depot.com

9ft Royal Grand Spruce Garland - Safety Instruction - English

Size: 5" x 7.5"

Date:02/27/20

Item # 4824106-C29HO1
4824106-30HO1




CCT20

Model No. 4824106-C29HO1 / 4824106-30HO1
SKU No. 1004561227 / 1004561028

GARLAND

Thank you for your purchase of this pre-lit & pre-shaped Christmas garland. With proper use and care, this garland will provide years of trouble-free enjoyment. Please follow the instructions below in order to properly assemble and store your garland. In the event that you should encounter any issues during the assembly of your garland; please refer to the "Troubleshooting" portion of this manual or call our toll free customer service number at 1-877-527-0313, and a trained representative will assist you.

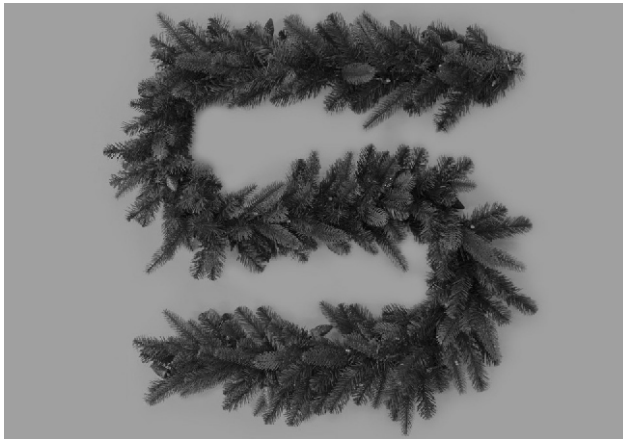

HOW TO USE:

Please plug your garland into a Ground Fault Circuit Interrupting (GFCI) outlet.

TROUBLESHOOTING

NOTE: Check the item for any loose, unlit or damaged bulbs. Although it will still operate, the bulbs must be replaced promptly to ensure the performance and life expectancy of the item.

1. If the sculpture fails to light; unplug the product and check to see that the GFCI outlet is functioning.
2. If a section fails to light, leave the product plugged in and check all light string connections. This product uses coaxial connections to connect the light strings; align the male end to the female connectors as shown and connect them together. Slide the cover from the "male" connector over the "female" connector and tighten.

NOTE: Replacement bulbs are provided; this is a specialty LED bulb. Do not attempt to replace with a standard LED or incandescent bulb. Should you require additional bulbs please contact our customer service department.

DISTRIBUTED BY HOME DEPOT U.S.A., INC. 2455 PACES FERRY RD., N.W. ATLANTA, GA 30339
All rights reserved. MADE IN CHINA PRINTED IN CHINA

2020 Home Depot.com

9ft Royal Grand Spruce Garland - Safety Instruction - Spanish

Size: 5" x 7.5"

Date:02/27/20

Item # 4824106-C29HO1

4824106-30HO1



CCT20

Modelo N° 4824106-C29HO1/4824106-30HO1

SKU N° 1004561227 / 1004561028

GUIRNALDA

Le agradecemos por su compra de este guirnalda.

Con buen uso y mantenimiento, este guirnalda le proporcionará muchos años de placer sin problemas. Por favor siga las siguientes instrucciones para montar y desmontar su guirnalda de manera eficiente. En caso de que tenga problemas durante el montaje de su guirnalda; por favor consulte la sección de "Troubleshooting" de este manual o llame al número gratis de nuestro centro de servicio al cliente al 1-877-527-0313, y un representante entrenado le asistirá.



MODO DE USO:

Por favor enchufe su guirnalda en un tomacorriente de tipo GFCI (interruptor de circuito por falla de conexión a tierra).

PROBLEMAS / SOLUCIONES

NOTA: Verifique el artículo para detectar las bombillas que puedan estar flojas, apagadas o dañinas. Aunque todavía funcionara, debe reemplazar las bombillas rápidamente para asegurar el rendimiento y la duración de vida útil del artículo.

1. Si no enciende; desenchufe el artículo y verifique si el tomacorriente de tipo GFCI funciona.
2. Si una sección no enciende; deje el producto enchufado y verifique todas las conexiones del ensamble de luces. Este producto utiliza conectores coaxiales. Para conectar las luces; alinee los extremos machos con los conectores hembra como se muestra y conéctelos juntos. Deslice el recubrimiento del conector "macho" por encima del conector "hembra" y apriételo.

NOTA: Las bombillas de recambio se proporcionan; ésta es una bombilla LED especializada. No la sustituya con una bombilla LED estándar o una bombilla incandescente. Si requiere más bombillas, por favor comuníquese con nuestro Departamento de Servicio al Cliente.

DISTRIBUIDO POR HOME DEPOT U.S.A., INC. 2455 PACES FERRY RD., N.W. ATLANTA, GA 30339
Todos los derechos reservados. HECHO EN CHINA IMPRESO EN CHINA