

Wired Doorbell 8-note Westminster Model DW-2840

Instructions—Please retain these instructions for future reference.

This package contains:

- Wired Door Chime Base & Cover
- 2 screws and 2 wall plugs for installing door chime
- 1 Diode

You will require:

- A small Phillips head screwdriver.
- Transformer 16V 10W
- 2 Doorbell Pushbuttons
- 4 screws for installing doorbell pushbutton

Installation:

Installing the Transformer

Warning: Turn power off at fuse or circuit breaker before installing transformer.


Transformer should be mounted on or near a junction box. They can also be mounted to the electrical service panels. Junction boxes in utility rooms, crawl spaces, or basement are preferred. Avoid attic locations. Failure to use a transformer with adequate power will result in loss of sound or may result in the chime being faulty. Contact a qualified electrician if you have any questions as to the suitability of the system or any doubts about your ability to wire this correctly.

Open the Chime Base Cover

Remove the decorative cover by simply pulling it away from the rear casing. When replacing the cover, simply press it back on the base.

Install the Door Chime (Refer to Figure 1)

Position the chime as shown in Figure 1. (The chime base can also be installed in the horizontal position.) Route the wires as shown and install the chime using the screws provided.

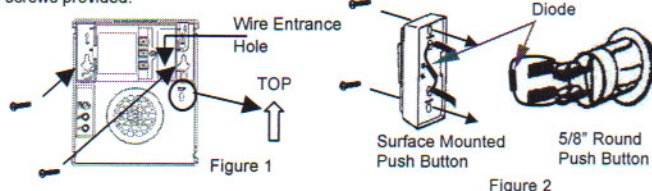

Install the Front Doorbell Pushbutton (Refer to Figure 2)

A small electrical component called a 'diode' is supplied with the chime. Install the diode across the terminal screws of the Front Doorbell pushbutton as shown in Figure 2 & 3. Without this diode the chime will not work. Connect the wires to the Front Doorbell Pushbutton. Install the Front Doorbell Pushbutton in the desired location using the screws provided.

Install the Back Doorbell Pushbutton (Refer to Figure 2)

Connect the wires to the Back Doorbell Pushbutton. Install the Back Doorbell Pushbutton in the desired location using the screws provided (No diode required).

Wiring Instructions For New Installation (Refer to Figure 3)

1. Turn off the power supply.
2. Connect one wire from the Front Doorbell Pushbutton to the FRONT terminal of the Chime Base.
3. Connect the other wire from the Front Doorbell Pushbutton to one Terminal of the Transformer.
4. Connect the TRANS terminal of the Chime to the other Terminal of the Transformer.
5. If the Back Doorbell Pushbutton is used, connect one end of the wire from the Back Doorbell Pushbutton to the REAR terminal of the Chime.

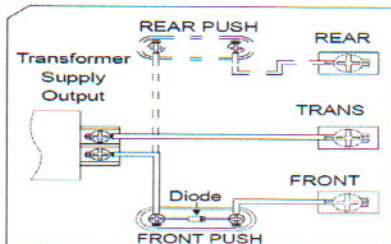


Figure 3

6. Connect the other end of the Back Doorbell Pushbutton to the 1st Terminal of the Transformer.
7. Turn on the power to the doorbell.
8. Press the doorbell pushbutton. The chime should respond with a tune. If not, go to the Troubleshooting section.

Sound Selection: Refer to Figure 4 to select the sound

1. Press button A until the desired tone for the front doorbell is heard (See Tune Options Table). Press the Front Doorbell Pushbutton to test the chime. (The chime tone can be changed at any time by simply pressing this button to select another tone.)
2. If a Back Doorbell Pushbutton is used, Press button B until the desired tone is heard. Press the Back Doorbell Pushbutton to test the chime.
3. Adjust the volume with the volume adjustment knob C.

Chime Options Table

1. Westminster 8 Notes
2. 2 Note Chime
3. 1 Note Chime

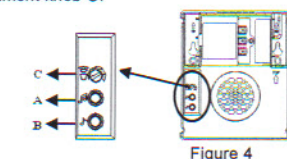


Figure 4

Replace the Decorative Chime Cover as shown in Figure 5.

Position the decorative cover and press down until it snaps in place. The cover can be installed in either direction.

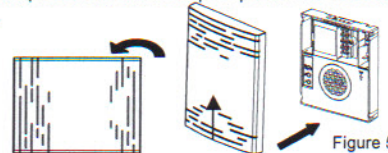


Figure 5

Specification

Power supply.....16VA Transformer

Troubleshooting
Chime Not Sounding:
Check that power to the chime is turned on.
Verify Diode is attached securely to the Front Doorbell Pushbutton. Diode may be positioned at the wrong polarity. Reverse the diode.
Verify all wires are securely fastened to terminals and that the wiring is correct.
Chime Sounds Only While Keeping Pushbutton Pressed
Reverse the position of the diode on the front door pushbutton.
For any other problem, call 1-800-296-1869 Mon-Fri between 9 am and 5 pm EST.

IQ America Two Year Warranty

This is a "Limited Warranty" which gives you specific legal rights. You may also have other rights which vary from state to state and province to province.

For a period of two years from the date of purchase, any malfunction caused by factory defective parts or workmanship will be corrected at no charge to you. To obtain a refund or a replacement, return the product to the place of purchase.

NOT COVERED: Repair service, adjustment and calibration due to misuse, abuse or negligence. Unauthorized service or modification of the product or of any furnished component will void this warranty. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use or unauthorized service.

This warranty covers only IQ America products and is not extended to other equipment and components that a customer uses in conjunction with our products.

This warranty is expressly in lieu of all other warranties, express or implied, including any warranty, representation or condition of merchant ability of that the products are fit for any particular purpose or use, and specifically in lieu of all special, indirect or incidental or consequential damages.

Repair or replacement shall be the sole remedy of the customer and there shall be no liability on the part of IQ America for any special, indirect, incidental or consequential damages, including but not limited to any loss of business or profit, whether or not foreseeable. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Retain receipt for warranty claims.

Timbre Con Cable Westminster 8-notas Modelo DW-2840

Instrucciones - Guardar estas instrucciones para futuras referencias.

Este paquete contiene:

- Base y Tapa de Timbre con Cables para Puerta
- 2 tornillos y 2 tacos para instalar el timbre para puerta
- 1 Diodo

Será necesario:

- Un destornillador pequeño de cabeza Phillips.
- Transformador 16V 10W
- 2 Pulsadores de Timbre
- 4 tornillos para montar el pulsador de timbre

Instalación:

Instalación del Transformador

Advertencia: Antes de instalar el transformador desconecte de la corriente los fusibles o el cortacircuitos.


Se debería montar el transformador en una caja de empalmes o cerca de ésta. También se pueden montar en paneles de servicios eléctricos. Se prefiere cajas de empalmes en trasteros, lugares bajos o sótano. Evite áticos. Fallo en el uso del transformador con corriente adecuada resultará en pérdida de sonido o podría ser que el timbre falle.

Abra la Cubierta Base del Timbre

Quite la cubierta decorativa extrayéndola de la parte de atrás. Cuando la vuelva a poner, simplemente haga presión con la base.

Instale el Timbre para Puerta (Vea Ilustración 1)

Posicione el timbre como se muestra en la Ilustración 1. (La base del timbre también se puede instalar en posición horizontal). Fije los cables como se muestra e instale el timbre usando los tornillos que se proporcionan.

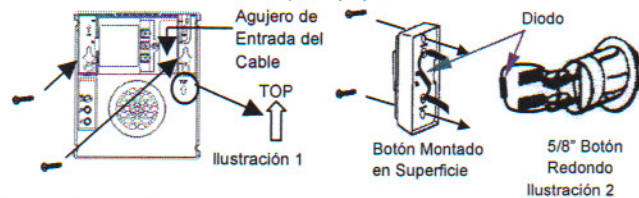

Instrucciones de Cableado Para Nueva Instalación (Vea Ilustración 3)

1. Desconecte la corriente.
2. Conecte un cable del Pulsador del Timbre de la Puerta Principal al Terminal FRONT de la Base del Timbre.
3. Conecte el otro cable del Pulsador del Timbre de la Puerta Principal a un Terminal del Transformador.
4. Conecte el terminal TRANS del Timbre al otro terminal del Transformador.
5. Si se usa el Pulsador de la Puerta Trasera, conecte un extremo del cable del Pulsador de la Puerta Trasera al terminal REAR del Timbre.

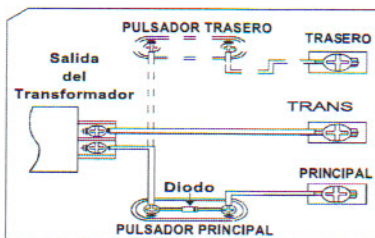


Ilustración 3

6. Conecte el otro extremo del Pulsador de la Puerta Trasera al 1er Terminal del Transformador.
7. Conecte la corriente al timbre.
8. Presione el pulsador del timbre. El timbre deber ía responder con una melodía. Si no es así, vaya a **En caso de problemas**.

Selección de Sonido: Vea Ilustración 4 para seleccionar el sonido

1. Presione el botón A hasta que se oiga la melodía deseada para el Timbre de la Puerta Principal (Vea la Tabla de Opciones de Melodías). Presione el pulsador de la Puerta Principal para probar el timbre. (La melodía del timbre se puede cambiar en cualquier momento presionando este botón para seleccionar otra).
2. Si se usa un Pulsador de la Puerta Trasera. Presione el botón B hasta que se oiga la melodía deseada. Presione el Pulsador de la Puerta Trasera para probar el timbre.
3. Ajuste el volumen en el botón C.

Tabla de Opciones del Timbre

1. Westminster 8 Notas
2. Timbre con 2 Notas
3. Timbre con 1 Nota

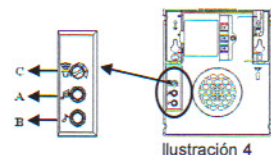


Ilustración 4

Vuelva a poner la Cubierta Decorativa del Timbre como se muestra en la Ilustración 5.

Ponga la cubierta decorativa y presione hasta que encaje en su lugar. Se puede instalar la cubierta en ambas direcciones.

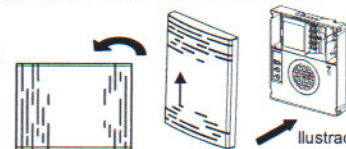


Ilustración 5

Especificación

Suministro de energía16VA Transformador

En caso de problemas

El Timbre No Suena:
Compruebe que el timbre está enchufado a la electricidad.
Asegúrese que el Diodo está puesto de forma segura en el Pulsador de la Puerta Principal.
El Diodo puede estar puesto en la polaridad equivoc ada. Cámbielo.
Asegúrese que todos los cables están bien ajustados a las terminales y de forma correcta.
El Timbre Solo Suena cuando se Mantiene Presionado el Botón
Cambie la posición del diodo en el pulsador de la puerta principal.
Para cualquier otro problema llame al 1-800-296-1869 de lunes a viernes desde la 9am hasta las 5pm.

Garantía de Dos Años IQ America

Esta es una "Garantía Limitada" que le da derechos legales concretos. Podría también tener otros derechos que varían de un estado a otro y de una provincia a otra.

Por un periodo de dos años a partir de la fecha de compra, cualquier fallo causado por un defecto de fábrica y mano de obra será reparado sin coste alguno. Para conseguir que le devuelvan el dinero o uno nuevo, devuelva el producto al lugar donde lo compró.

NO CUBRE: Servicios de reparación, ajustes y calibrado por mal uso, abuso o negligencia. Reparaciones no autorizadas, modificación del producto o de cualquier pieza anulará esta garantía. Esta garantía no incluye reembolso por inconvenientes, instalación, tiempo de montaje, falta de uso o reparaciones no autorizadas.

Esta garantía cubre sólo los productos de IQ America y no cubre otros equipos o componentes que un cliente use junto a nuestros productos. No existen otras garantías, ni explícitas ni implícitas, incluyendo, pero no limitadas a, garantías implícitas de comercialización o aptitud para un propósito particular.

La obligación de IQ America de reparar o reemplazar, siguiendo su criterio, deberá ser el único y exclusivo recurso legal del comprador bajo esta garantía, IQ America no será responsable por daños incidentales, consiguientes, o por daños especiales resultantes a raíz del uso o desempeño del producto. Algunos estados o provincias no permiten la exclusión o limitación de daños resultantes o fortuitos, por lo tanto la limitación o exclusión antes mencionada podría no aplicársele a usted. Guarde la factura para el uso de la garantía.